



PELLET STOVES

User Manual

VENTILATED STOVES

Read all instructions carefully before installation, use and maintenance
The instruction book is an integral part of the product.





Congratulations! You are now the owner of an EXTRAFLAME stove!

The EXTRAFLAME pellet stove is an ideal heating solution. It utilises the most advanced technology and is manufactured to the highest standards with a contemporary design, allowing you to enjoy the ambience and warmth of a natural flame in complete safety.

This manual tells you how to use your stove correctly. Please read the entire manual carefully before using your stove.

IMPORTANT

Make sure that the dealer completes the following box with the details of the authorised specialist who will help you if you have any problems in using your new pellet stove.

AUTHORISED SPECIALIST

COMPANY _____
Full name _____
Address _____ No. _____
Postal Code _____ City _____ County. _____
TEL. _____ FAX _____

All Extraflame products are manufactured according to the following directives:

- ❖ **89/106 CEE (Construction Products)**
- ❖ **89/366 CEE (EMC Directive)**
- ❖ **2004/108 CE (EMC Directive)**
- ❖ **2006/95 CE (Low Voltage Directive)**

And the following standards:

- ❖ **EN 14785**
- ❖ **EN 60335-1**
- ❖ **EN 60335-2-102**
- ❖ **EN 61000-3-2**
- ❖ **EN 61000-3-3**
- ❖ **EN 50366**
- ❖ **EN 55014-1**
- ❖ **EN 55014-2**





Index

Chapter 1	
PRECAUTIONS AND SAFETY	7
Chapter 2	
TECHNICAL FEATURES	8
Chapter 3	
WHAT ARE PELLETS?	11
PELLET STORAGE	11
PELLET LOAD.....	11
Chapter 4	
SAFETY DEVICES	12
WARM AIR BLOWER BREAKDOWN	12
FUME EXHAUSTER BREAKDOWN.....	12
PELLET FEED MOTOR BREAKDOWN	12
LIGHTING FAILURE	12
TEMPORARY POWER FAILURE	12
ELECTRICAL SAFETY.....	12
EXHAUST FUME SAFETY	12
PELLET OVERHEATING SAFETY	12
Chapter 5	
ASSEMBLY AND INSTALLATION INSTRUCTIONS	13
GLOSSARY	13
INSTALLATION.....	14
ADMISSIBLE INSTALLATIONS.....	14
PROHIBITED INSTALLATIONS.....	14
CONNECTION TO THE EXHAUST VENTING SYSTEM	15
EXHAUST CHANNEL OR PIPE	15
CHIMNEY OR SINGLE FLUE	16
CONNECTION TO THE FLUE AND COMBUSTION PRODUCT EXHAUST VENTING	18
CHIMNEY CAP	18
CONNECTION TO EXTERNAL AIR INTAKES	19
INSULATION, TRIMS, FACINGS, AND SAFETY PRECAUTIONS.....	19
NATIONAL, REGIONAL, PROVINCIAL AND MUNICIPAL LAWS	19
Chapter 6	
DIVINA PLUS DISTRIBUTED HEATING	20
DIVINA PLUS	20
TOSCA PLUS.....	20
Chapter 7	
COMFORT MAXI INSTALLATION	21
MOUNTING ON EXISTING BASE.....	21
INSTALLATION WITH PEDESTAL (OPTIONAL).....	22
EXTRACTING THE INSERT	23
FITTING THE FRAMES.....	23
RECIRCULATION AIR PIPES	24
Chapter 8	
FALO' 1XLP, FALO' 1CP AND FALO' 2CP	28



Chapter 9	
PRODUCT FUNCTIONING.....	29
CONTROL PANEL.....	29
CURRENT TIME AND DAY SETTINGS	30
FUNCTIONING CYCLE	30
BASIC INSTRUCTIONS.....	30
LIGHTING.....	31
NORMAL OPERATION.....	31
SHUTDOWN	32
Chapter 10	
REMOTE CONTROL (OPTIONAL "ROSY")	33
Chapter 11	
ROOM THERMOSTAT	34
DIGITAL THERMOSTAT (INCLUDED)	34
MECHANICAL THERMOSTAT (OPTIONAL)	34
INSTALLING A MECHANICAL THERMOSTAT (OPTIONAL).....	34
MECHANICAL THERMOSTAT WITH STANDBY FUNCTION (CAN BE USED WITH TELEPHONE ACTUATOR)	34
MECHANICAL THERMOSTAT OPERATION FOR HEAT DISTRIBUTION MOTOR (DIVINA PLUS ONLY)...	35
Chapter 12	
USER PARAMETERS	36
WEEKLY PROGRAMMER	36
DAY/NIGHT TEMPERATURE FUNCTION	39
PELLET FEED ADJUSTMENT	40
HEAT DISTRIBUTION MOTOR PARAMETERS	41
Chapter 13	
STOVE CLEANING.....	42
ECOLOGICA – COMFORT MAXI	42
BELLA – BELLA LUX – DUCHESSA – DUCHESSA STEEL – CONTESSA – CLEMENTINA – DIVINA – DIVINA STEEL – DIVINA PLUS – TOSCA PLUS CLEANING	44
PULIZIA BABYFIAMMA – PREZIOSA – KAROLINA – ISABELLA – GRAZIOSA – ROSY.....	46
FALÒ 1XLP – FALÒ 1CP – FALÒ 2CP – ESMERALDA CLEANING.....	48
BURN POT PARTITION.....	50
CHIMNEY CONNECTION	50
Chapter 14	
TABLE OF DISPLAY MESSAGES.....	51
Chapter 15	
WARRANTY	54
Chapter 16	
QUALITY CONTROL.....	56



PRECAUTIONS AND SAFETY

The stoves manufactured in our factory are built with the maximum dedication to the individual components so as to protect both the user and the installer from accidents. Authorized personnel are therefore advised to pay special attention to the electrical connections after any servicing operation on the product, especially with regard to the stripped part of the wires, which must not protrude in any way from the terminal block to prevent possible contact with the live parts of the wire.

Installation must be carried out by authorized personnel, who must issue the purchaser a declaration of compliance of the system. The purchaser shall assume responsibility for the definitive installation and consequent proper operation of the product installed. It is imperative to consider all national, regional, provincial and communal laws and norms in the country where the stove is installed. Extraflame S.p.A. may not be held responsible in the event of failure to observe these precautions.

This instruction manual constitutes an integral part of the product. It must always accompany the appliance, also when it is transferred to another owner or user or moved to another location. If the manual gets damaged or lost, ask your local service centre for another copy.

This stove must only be used for the applications for which it was expressly designed.

The manufacturer declines any responsibility, contractually or extra-contractually, for any damage caused to persons, animals or property by errors in installation, adjustment, and maintenance, or by improper use.

After removing the packaging, check to make sure that the contents are intact and complete.

If this is not the case, contact the vendor from whom the appliance was purchased.

The electrical components of the stove must only be replaced with original spare by an authorized service centre.

General stove maintenance must be carried out at least once a year, scheduled sufficiently in advance with the service centre.

The following safety precautions must be observed:

- ❖ Do not allow the stove to be used by unattended children or disabled persons.
- ❖ Do not touch the stove if you are bare-footed or if parts of your body are wet or damp.
- ❖ Modifying the safety or adjustment devices without the manufacturer's approval or instructions is forbidden.
- ❖ Never pull, detach, or twist the electrical cables coming out of the stove, even if it is disconnected from the electrical power.

Do not plug or reduce the size of the air vents of the room in which the stove is installed.

The air vents are critical for correct combustion.

- ❖ Keep the packaging materials out of the reach of children and unattended disabled persons.
- ❖ During normal functioning of the product the door of the furnace must always be closed.
- ❖ Avoid direct contact with parts of the appliance, which tend to heat up during functioning.
- ❖ Check for the presence of any obstructions before switching the appliance on following a long standstill period.

The stove has been designed to function in any climatic conditions (even critical), in particularly adverse conditions (strong wind, freezing) safety systems may intervene, which switch the stove off.

If this happens, contact the after-sales service and do not disable the safety systems in any case.

- ❖ If the flue should catch fire use adequate systems to suffocate the flames or request help from the fire brigade.



TECHNICAL FEATURES

Features	U.M.	Babyfiamma	Preziosa	Preziosa Steel	Isabella	Rosy	Karolina	Graziosa	Bella	Bella Lux
Weight	kg	98	103	103	95	90	115	115	134	137
Height	mm	860	887	921	864	863	1021	1036	1041	1043
Width	mm	438	446	446	455	452	488	494	520	520
Depth	mm	503	498	498	497	493	510	498	582	582
Diameter of fume discharge pipe	mm	80	80	80	80	80	80	80	80	80
Diameter of air intake pipe	mm	50	50	50	50	50	50	50	50	50
Max. heating volume	m ³	126	126	126	115	115	161	161	172	172
Max. global thermal power	kW	6.0	6.0	6.0	5.8	5.8	8.0	8.0	8.8	8.8
Max. thermal power needed	kW	5.5	5.5	5.5	5.0	5.0	7.0	7.0	7.5	7.5
- air power supply	kW	5.5	5.5	5.5	5.0	5.0	7.0	7.0	7.5	7.5
- water power supply	kW	-	-	-	-	-	-	-	-	-
Min. thermal power needed	kW	2.8	2.8	2.8	3.0	3.0	2.8	2.8	3.5	3.5
Min. useful thermal power	kW	2.6	2.6	2.6	2.5	2.5	2.6	2.6	3.0	3.0
- air power supply	kW	2.6	2.6	2.6	2.5	2.5	2.6	2.6	3.0	3.0
- water power supply	kW	-	-	-	-	-	-	-	-	-
Max. fuel combustion per hour	kg/h	1.2	1.2	1.2	1.2	1.2	1.6	1.6	1.8	1.8
Min. fuel consumption per hour	kg/h	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.7	0.7
Tank capacity	kg	~ 11	~ 11	~ 11	~ 11	~ 11	~ 15	~ 15	~ 25	~ 25
Recommended chimney draught	Pa	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10
Chimney draught at max. useful thermal power	Pa	12	12	12	12	12	12	12	12	12
Chimney draught at min. useful thermal power	Pa	10	10	10	10	10	10	10	10	10
Nominal electrical power	W	300	300	300	300	300	300	300	300	300
Appliance electric power	W	300	300	300	300	300	300	300	300	300
Nominal voltage	Vac	230	230	230	230	230	230	230	230	230
Nominal frequency	Hz	50	50	50	50	50	50	50	50	50
Diameter of water intake/output pipe	"	-	-	-	-	-	-	-	-	-
Diameter of automatic discharge pipe	"	-	-	-	-	-	-	-	-	-
Pump head	m	-	-	-	-	-	-	-	-	-
Max. working water pressure allowed	bar	-	-	-	-	-	-	-	-	-

The tank capacity depends on the type of pellet used.

Tests carried out using wooden pellets as fuel, with heating power of 4.9 kW/h/kg.

The data stated above is a reference and not binding. The manufacturer reserves the right to carry out any modifications in order to improve the performance of the product.

The electrical power of the appliance indicates the sum of the electrical absorption of the components present, as per standard, inside the product. The nominal power is the maximum power value that the appliance can absorb also considering the installation of various additional devices.



Features	U.M.	Duchessa	Duchessa Steel	Comfort Maxi	Contessa	Falò 1XLP	Falò 1CP	Falò 2CP	Tosca Plus
Weight	kg	150	138	132	147	302	361	361	170
Height	mm	1032	1032	606	1068	1522	1522	1522	1150
Width	mm	538	538	640	522	950	1806	1806	560
Depth	mm	541	541	717	547	618	800	800	568
Diameter of fume discharge pipe	mm	80	80	80	80	80	80	80	80
Diameter of air intake pipe	mm	50	50	50	50	50	50	50	50
Max. heating volume	m ³	200	200	205	242	204	204	204	253
Max. global thermal power	kW	10.0	10.0	10.0	12.0	10.0	10.0	10.0	12.0
Max. thermal power needed	kW	8.7	8.7	8.9	10.5	8.9	8.9	8.9	11.0
- air power supply	kW	8.7	8.7	8.9	10.5	8.9	8.9	8.9	11.0
- water power supply	kW	-	-	-	-	-	-	-	-
Min. thermal power needed	kW	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8
Min. useful thermal power	kW	3.4	3.4	3.4	3.4	3.5	3.5	3.5	3.6
- air power supply	kW	3.4	3.4	3.4	3.4	3.5	3.5	3.5	3.6
- water power supply	kW	-	-	-	-	-	-	-	-
Max. fuel combustion per hour	kg/h	2.0	2.0	2.0	2.5	2.0	2.0	2.0	2.5
Min. fuel consumption per hour	kg/h	0.8	0.8	0.8	0.8	0.7	0.7	0.7	0.8
Tank capacity	kg	~ 25	~ 25	~ 28	~ 21	~ 32	~ 32	~ 32	~ 24
Recommended chimney draught	Pa	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10
Chimney draught at max. useful thermal power	Pa	12	12	12	12	12	12	12	12
Chimney draught at min. useful thermal power	Pa	10	10	10	10	10	10	10	10
Nominal electrical power	W	300	300	300	300	300	300	300	300
Appliance electric power	W	300	300	300	300	300	300	300	300
Nominal voltage	Vac	230	230	230	230	230	230	230	230
Nominal frequency	Hz	50	50	50	50	50	50	50	50
Diameter of water intake/output pipe	"	-	-	-	-	-	-	-	-
Diameter of automatic discharge pipe	"	-	-	-	-	-	-	-	-
Pump head	m	-	-	-	-	-	-	-	-
Max. working water pressure allowed	bar	-	-	-	-	-	-	-	-

The tank capacity depends on the type of pellet used.

Tests carried out using wooden pellets as fuel, with heating power of 4.9 kW/h/kg.

The data stated above is a reference and not binding. The manufacturer reserves the right to carry out any modifications in order to improve the performance of the product.

The electrical power of the appliance indicates the sum of the electrical absorption of the components present, as per standard, inside the product. The nominal power is the maximum power value that the appliance can absorb also considering the installation of various additional devices.



Features	U.M.	Esmeralda	Esmeralda Crystal	Clementina	Divina	Divina Steel	Divina Plus	Irina	Ecologica
Weight	kg	188	178	137	175	149	190	140	159
Height	mm	1011	1011	1068	1150	1150	1165	1053	955
Width	mm	1249	1249	500	610	610	610	522	667
Depth	mm	656	656	573	593	593	593	559	671
Diameter of fume discharge pipe	mm	80	80	80	80	80	80	80	80
Diameter of air intake pipe	mm	50	50	50	50	50	50	50	50
Max. heating volume	m ³	204	204	242	242	242	242	242	237
Max. global thermal power	kW	10.0	10.0	12.0	12.0	12.0	12.0	12.0	12.0
Max. thermal power needed	kW	8.9	8.9	10.5	10.5	10.5	10.5	10.5	10.3
- air power supply	kW	8.9	8.9	10.5	10.5	10.5	10.5	10.5	10.3
- water power supply	kW	-	-	-	-	-	-	-	-
Min. thermal power needed	kW	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8
Min. useful thermal power	kW	3.5	3.5	3.4	3.4	3.4	3.4	3.4	3.4
- air power supply	kW	3.5	3.5	3.4	3.4	3.4	3.4	3.4	3.4
- water power supply	kW	-	-	-	-	-	-	-	-
Max. fuel combustion per hour	kg/h	2.0	2.0	2.5	2.5	2.5	2.5	2.5	2.5
Min. fuel consumption per hour	kg/h	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.8
Tank capacity	kg	~ 26	~ 26	~ 25	~ 30	~ 30	~ 30	~ 21	~ 35
Recommended chimney draught	Pa	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10	~ 10
Chimney draught at max. useful thermal power	Pa	12	12	12	12	12	12	12	12
Chimney draught at min. useful thermal power	Pa	10	10	10	10	10	10	10	10
Nominal electrical power	W	300	300	300	300	300	400	300	300
Appliance electric power	W	300	300	300	300	300	400	300	300
Nominal voltage	Vac	230	230	230	230	230	230	230	230
Nominal frequency	Hz	50	50	50	50	50	50	50	50
Diameter of water intake/output pipe	"	-	-	-	-	-	-	-	-
Diameter of automatic discharge pipe	"	-	-	-	-	-	-	-	-
Pump head	m	-	-	-	-	-	-	-	-
Max. working water pressure allowed	bar	-	-	-	-	-	-	-	-

The tank capacity depends on the type of pellet used.

Tests carried out using wooden pellets as fuel, with heating power of 4.9 kW/h/kg.

The data stated above is a reference and not binding. The manufacturer reserves the right to carry out any modifications in order to improve the performance of the product.

The electrical power of the appliance indicates the sum of the electrical absorption of the components present, as per standard, inside the product. The nominal power is the maximum power value that the appliance can absorb also considering the installation of various additional devices.

WHAT ARE PELLETS?

Pellets are made by applying very high pressure to sawdust; i.e. the residue of raw timber (without paint) produced by sawmills, carpentry works and other activities involved in processing wood.

This type of fuel is completely environmentally friendly, as no binders of any kind are used to keep it compact. In fact, the compactness of the pellets over time is guaranteed by lignite, a natural substance found in the wood itself.

As well as being an environmentally friendly fuel, since wood residues are exploited to the maximum, pellets also have technical advantages.

While the heating power of wood is 4.4 kW/kg (with 15% humidity, after about 18 months seasoning), the power of pellets is 5.3 kW/kg.

The density of the pellet is 650kg/m³ and the water content is 8% of its weight. For this reason, pellets do not need to be seasoned to obtain a sufficient heating yield.

Pellets used must be compliant with norms:

- ❖ Ö-Norm M 7135
- ❖ DIN plus 51731
- ❖ UNI CEN/TS 14961

Extraflame recommends using 6 mm pellets.

WARNINGS!!!



THE USE OF OUT OF DATE PELLETS OR ANY OTHER MATERIAL, DAMAGES YOUR STOVES' FUNCTIONS AND CAN DETERMINE THE END OF THE WARRANTY AND THE PRODUCER'S ANNEXED RESPONSIBILITY.

PELLET STORAGE

To guarantee problem-free combustion, the pellets must be stored in a dry place.

PELLET LOAD

To load the pellets, open the tank cover positioned on the upper part of the stove and empty the bag of pellets, paying attention not to let them escape.

For the Inserto Comfort Maxi model consult the "Inserto Comfort Maxi Installation" chapter.



figure 3.1

For Falò models consult the "Falò 1XLP, Falò 1CP and Falò 2CP" chapter".



SAFETY DEVICES

WARM AIR BLOWER BREAKDOWN

If the blower stops for any reason, the stove automatically shuts down to prevent overheating.

FUME EXHAUSTER BREAKDOWN

If the exhauster stops, the electronic unit immediately prevents pellet feeding.

PELLET FEED MOTOR BREAKDOWN

If the motor stops, the stove continues to operate until the minimum cooling level is reached.

LIGHTING FAILURE

If no flame develops during the lighting stage, the stove display shows "**NO ACC**". If you attempt to light the stove again, the display shows "**ATTE**" which means "WAIT".

This function reminds you that before lighting the stove, you must be sure that the burn pot is free of dirt and debris.

TEMPORARY POWER FAILURE

The appliance will re-light automatically after a brief power failure. When the power goes off, the stove may emit a minute quantity of smoke inside the house for a period of 3 to 5 minutes.

THIS DOES NOT POSE ANY SAFETY RISK.

ELECTRICAL SAFETY

The stove is protected against violent power swings by a master fuse on the rear of the stove (2A 250V delayed).

EXHAUST FUME SAFETY

If the exhaust system fails, an electronic pressure switch stops the stove and an alarm is signalled.

PELLET OVERHEATING SAFETY

In case of overheating inside the pellet hopper, this safety device blocks stove operation; resetting is manual and must be performed by an authorized technician.

ASSEMBLY AND INSTALLATION INSTRUCTIONS

The installation must comply with:

- ❖ *UNI 10683 (2005) heat generators fed with wood and other solid fuels: installation.*

The chimneys must comply with:

- ❖ *UNI 9731 (1990) chimneys: classification according to thermal resistance.*
- ❖ *EN 13384-1 (2006) calculation method of the thermal and fluid-dynamic features of the chimney.*
- ❖ *UNI 7129 point 4.3.3 provisions, local rules and prescriptions of the fire brigade.*
- ❖ *UNI 1443 (2005) chimneys: general requirements.*
- ❖ *UNI 1457 (2004) chimneys: internal ducts in terracotta and ceramics.*

GLOSSARY

CLOSED HEARTH DEVICE

Heat generator that can only be opened to load fuel during use.

BIOMASS

Material of organic origin, excluding the material incorporated in geological formations and fossilised.

BIOFUEL

Fuel produced directly or indirectly from biomass.

FLUE or CHIMNEY

Vertical duct for collecting and expelling combustion products from a single appliance at a suitable height from the floor.

EXHAUST CHANNEL OR PIPE

Duct or connecting element between the heat generating device and the chimney for extracting the combustion products.

INSULATION

The series of measures taken and materials used to prevent heat transmission through a wall dividing rooms at different temperatures.

CHIMNEY CAP

Device located at the top of the chimney that facilitates dispersion of the combustion products in the atmosphere.

CONDENSATE

Liquid products that form when the temperature of the combustion gas is lower than or equal to the dew point of the water.

HEAT GENERATOR

Device that permits the production of thermal energy (heat) by the rapid transformation of the chemical energy of the fuel by means of combustion.

AIR LOCK

Mechanism for modifying the dynamic resistance of the combustion gasses.



EXHAUST VENTING SYSTEM

A system for fume exhaust venting that is independent from the appliance, composed of a pipe or channel, chimney or single flue, and chimney cap.

FORCED DRAUGHT

Air circulation by means of a fan driven by an electric motor.

NATURAL DRAUGHT

Draught resulting in a chimney/flue due to the difference in the volume mass existing between the (hot) fumes and the surrounding atmospheric air, without any mechanical suction aid installed inside or on top of it.

RADIANCE AREA

Area immediately adjacent to the hearth in which the heat produced by combustion is diffused; this area must not contain any objects made of combustible material.

REFLUX AREA

Area in which the combustion products come out from the appliance towards the room in which it is installed.

INSTALLATION

Before carrying out installation, it is necessary to check the positioning of the chimneys, flues or exhaust terminal ducts of the appliance, keeping in mind the following:

- ❖ Installation prohibitions
- ❖ Legal clearances
- ❖ Limitations set forth by local administrative regulations or specific regulations of the authorities.
- ❖ Common limitations deriving from building regulations, and easement or contract regulations.

ADMISSIBLE INSTALLATIONS

In the room in which the heat generator is to be installed, any existing or installed appliances must be airtight to the room and must not cause depression in the room with respect to the external environment.

Appliances used for cooking foods and the related hoods without extractor can only be installed in rooms used as kitchens.

PROHIBITED INSTALLATIONS

The room in which the heat generator is to be installed must not contain any of the following devices, either pre-existing or installed:

- ❖ Hoods with or without extractor;
- ❖ Ventilation ducts of the collective type.

Should these devices be located in adjacent rooms communicating with the installation room, it is forbidden to use the heat generator simultaneously where there is the risk that one of the two rooms may be subject to depression with respect to the other.

CONNECTION TO THE EXHAUST VENTING SYSTEM

EXHAUST CHANNEL OR PIPE

For the assembly of the exhaust channels it is imperative to use non-flammable materials that are resistant to combustion products and any condensates.

It is forbidden to use flexible metal pipes and asbestos cement for connecting the stove to the flue, also for pre-existing exhaust channels.

There must be continuity between the exhaust channel and the flue so that the flue does not lean on the stove.

The exhaust channels must not pass through rooms in which the installation of combustion devices is forbidden.

The assembly of the exhaust channels must be carried out in such a way as to ensure that they are airtight for the operating conditions of the appliance, as well as to limit the formation of condensates and prevent them from being conveyed towards the appliance.

The assembly of horizontal sections must be avoided where possible.

Where roof or wall exhaust outlets have to be reached that are not coaxial in relation to the exhaust outlet from the appliance, the direction changes must be made using open elbows no greater than 45° (see figures below).

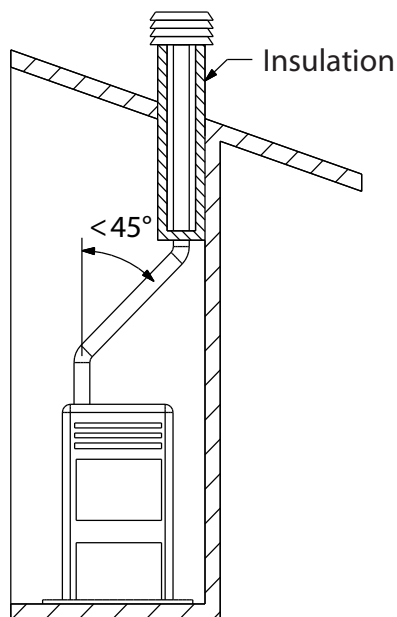


figure 5.1

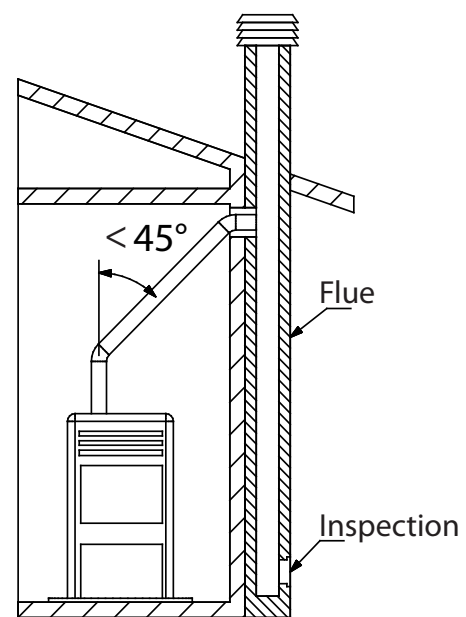


figure 5.2

For heat generating devices equipped with an electric exhaust fan, i.e. all products made by Extraflame, it is necessary to observe the following instructions:

- ❖ Horizontal sections must have a minimum slope of 3% upwards.
- ❖ The length of the horizontal section must be as short as possible, and in any case no greater than 3 meters.
- ❖ No more than four direction changes may be used, including the one resulting from the use of the "T"-element. (When four bends are used, use double wall piping with a 120 mm diameter.)

In any case, exhaust channels must be sealed in relation to combustion products and condensates, as well as insulated, if they pass outside the installation room.

It is forbidden to use elements in counter-slope.

The exhaust channel must allow soot recovery and cleaning using a swab.

The exhaust channel must have a constant cross-section. Any changes in cross-section are allowed only at

the flue connection.

It is forbidden to run other air feed channels or piping for utilities inside the exhaust channels, even if they are oversized. It is also forbidden to fit manual draught adjustment devices on the forced draught appliance.

CHIMNEY OR SINGLE FLUE

The chimney or flue must meet the following requirements:

- ❖ be airtight to combustion products, waterproof and properly insulated according to the usage conditions;
- ❖ be made of materials suitable to resist normal mechanical stress, as well as heat and the action of combustion products and any condensates;
- ❖ have a predominantly vertical layout with deviations from the axis no greater than 45°;
- ❖ be situated at a proper distance from combustible or flammable materials by means of an air gap or suitable insulation material;

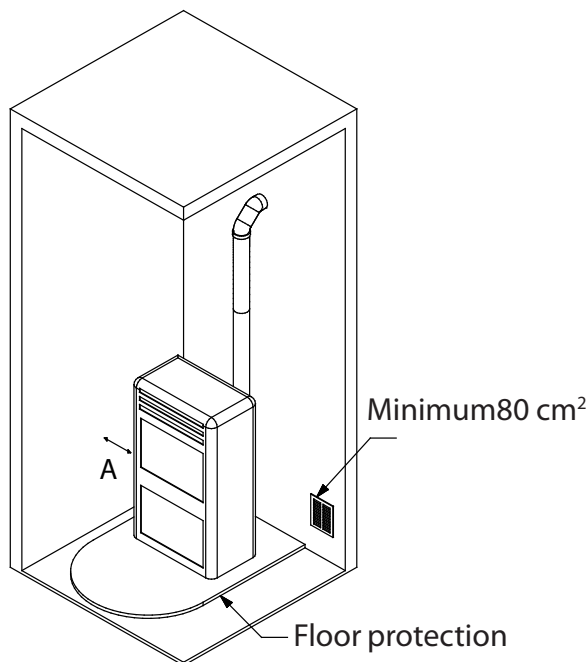


figure 5.3

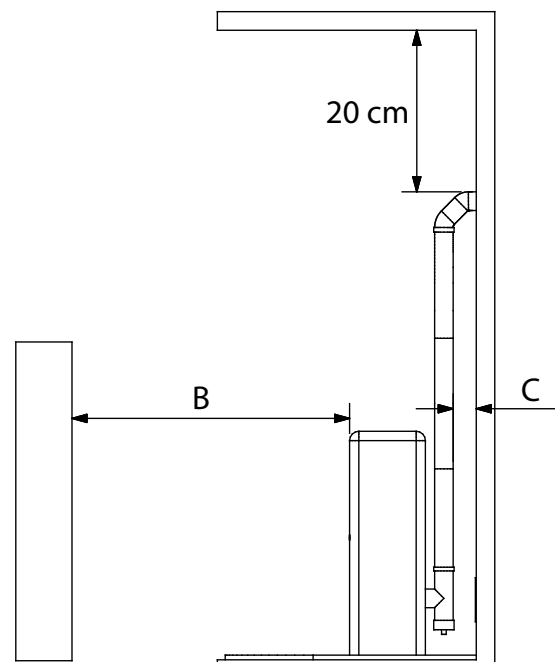


figure 5.4

REFERENCES	Flammable objects	Non-flammable objects
A	200	100
B	1500	750
C	200	100

- ❖ preferably have a round internal section: square or rectangular sections must have rounded edges with radius no less than 20 mm;
- ❖ have a constant, free and independent internal section;
- ❖ have rectangular sections with a maximum ratio between sides of 1.5.

The exhaust duct should be equipped with a chamber for the collection of solid materials and any condensates located below the mouth of the exhaust channel, so that it is easy to open and inspect from the airtight hatch.

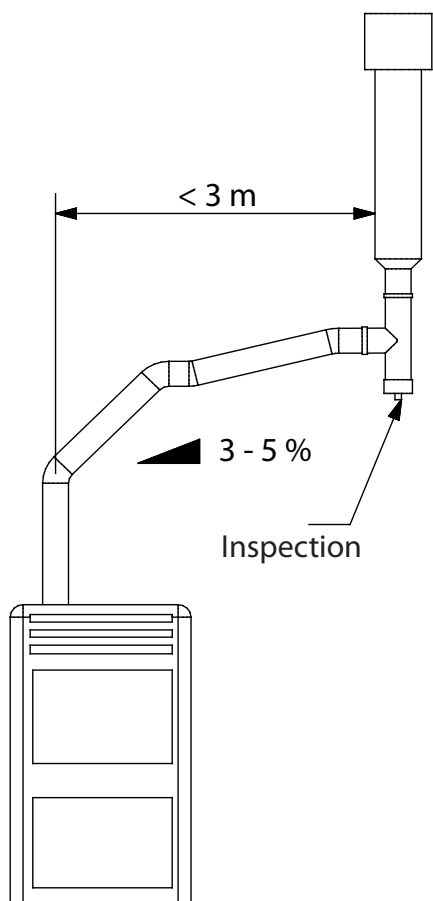


figure 5.5

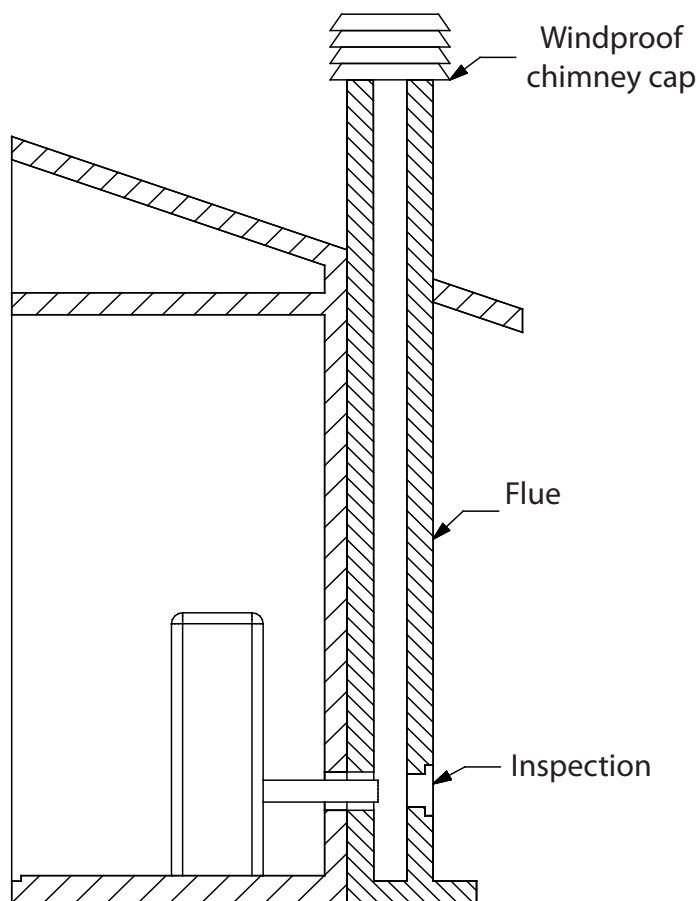


figure 5.6

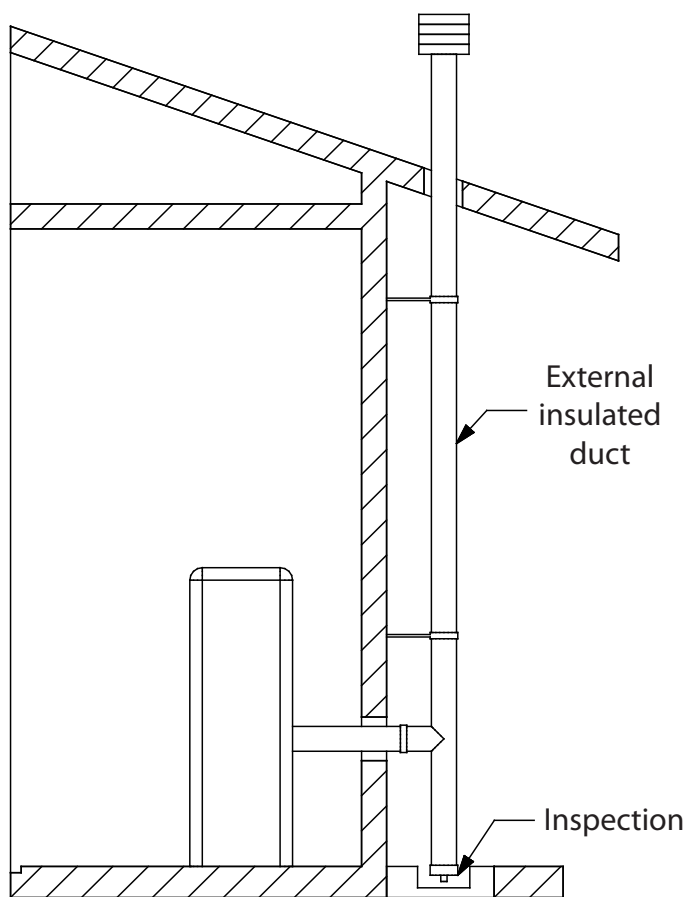


figure 5.7

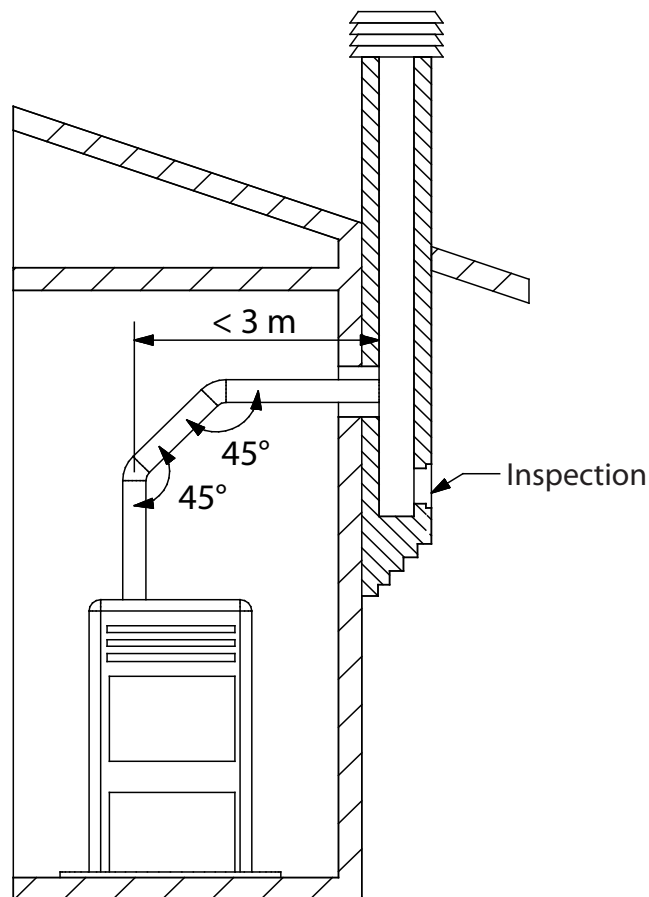


figure 5.8

CONNECTION TO THE FLUE AND COMBUSTION PRODUCT EXHAUST VENTING

The flue must receive exhaust from a single heat generator.

Direct discharge towards enclosed areas, even when roofless, is forbidden.

Direct discharge of combustion products must take place on the roof and the exhaust duct must have the features set forth in the section "Chimney or single flue".

CHIMNEY CAP

The chimney cap must meet the following requirements:

- ❖ have an internal section equivalent to that of the chimney;
- ❖ have a useful outlet section no less than twice the internal section of the chimney;
- ❖ be constructed in such a way as to prevent the penetration of rain, snow and foreign bodies into the chimney, as well as to assure the discharge of the combustion products also in the presence of winds coming from any direction and at any angle.
- ❖ be positioned in such a way as to assure proper dispersion and dilution of the combustion products and, in any case, outside the reflux area in which the formation of counter-pressure is most likely to occur. This area has different sizes and shapes depending on the slope of the roof; therefore, it is necessary to use the minimum heights indicated in the figures below.
- ❖ The chimney cap must not have any mechanical suction devices.

FLAT ROOF

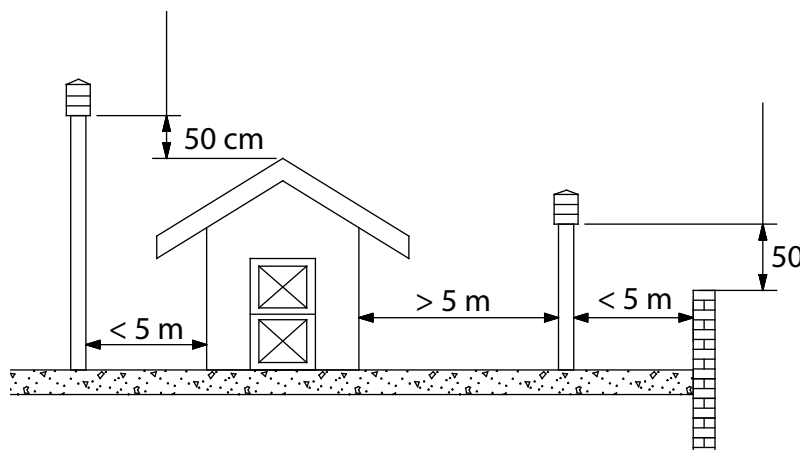


figure 5.9

SLOPED ROOF

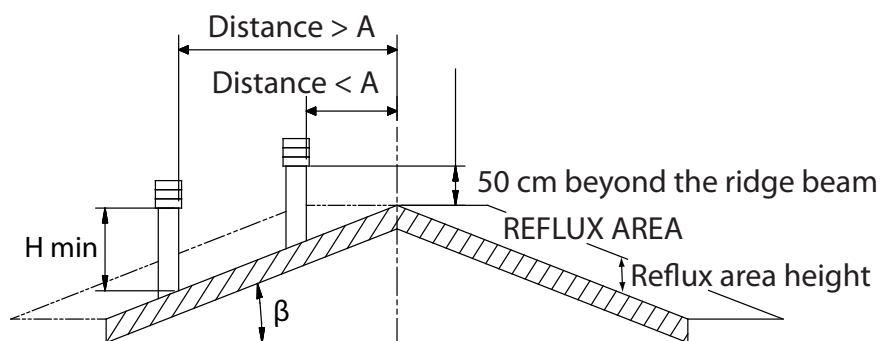


figure 5.10

CHIMNEYS, DISTANCES AND POSITIONING		
Roof pitch	Distance between the crown and the chimney	Minimum height of the chimney (measured from the outlet)
β	A (m)	H (m)
15°	< 1,85	0,50 m beyond the crown
	> 1,85	1,00 m from the roof
30°	< 1,50	0,50 m beyond the crown
	> 1,50	1,30 m from the roof
45°	< 1,30	0,50 m beyond the crown
	> 1,30	2,00 m from the roof
60°	< 1,20	0,50 m beyond the crown
	> 1,20	2,60 m from the roof

CONNECTION TO EXTERNAL AIR INTAKES

To ensure correct operation, the appliance must have sufficient air available by means of external air intakes, which must meet the following requirements:

1. They must have a total free section of at least 80 cm².
2. They must be protected by a grate, metal mesh, or other suitable protection provided that it does not reduce the minimum section as per point a) and that it is positioned in such a way as to prevent the intakes from being obstructed.

If the combustion air is collected directly from the outside by means of a pipe, it is necessary to fit a downward bend or a wind hood on the outside. In addition, no grating or similar device should be positioned. (Extraflame S.p.A. suggests creating an air intake directly communicating with the installation room, even if air is collected from outside by means of a pipe).

Air inflow can also be obtained from a room adjacent to the installation room, provided that the flow can occur freely through permanent openings communicating with the outside.

The adjacent room must not be subject to depression with respect to the outside as a result of the opposing draught caused by the presence of another utility device or suction device in this room.

In the adjacent room, the permanent openings must meet the requirements described above.

The adjacent room cannot be used as a garage, storage area for combustible material, or for activities involving fire hazards.

INSULATION, TRIMS, FACINGS, AND SAFETY PRECAUTIONS

The facings, no matter what type of material they are made of, must constitute a self-bearing structure with reference to the heating assembly and not in contact with it.

The beam and the trims in wood or combustible materials must be positioned outside of the radiant area of the hearth or be properly insulated.

If the space above the heat generator has coverings made of combustible or heat-sensitive material, a protective membrane made of non-combustible insulating material must be placed between it and the generator.

All elements made of combustible or flammable material, such as wooden furnishings, curtains, etc., that are directly exposed to the radiance of the hearth must be placed at a safe distance.

The installation of the appliance must guarantee easy access for cleaning the appliance itself, of the waste gas pipes and the flue.

NATIONAL, REGIONAL, PROVINCIAL AND MUNICIPAL LAWS

All the national, regional, provincial and municipal laws of the country where the appliance has been installed must be taken into consideration.

DIVINA PLUS DISTRIBUTED HEATING

DIVINA PLUS

The DIVINA PLUS model is equipped with two pipe outlets situated on the back of the stove that allow the heat produced by the stove to be distributed to other rooms. For this purpose, as you can see in the photo below, we recommend using pipes with the following characteristics:

- ❖ Internal diameter 80 mm
- ❖ Insulated pipes (thermal insulation)
- ❖ The pipe length connected to each opening must not be longer than 2 m.

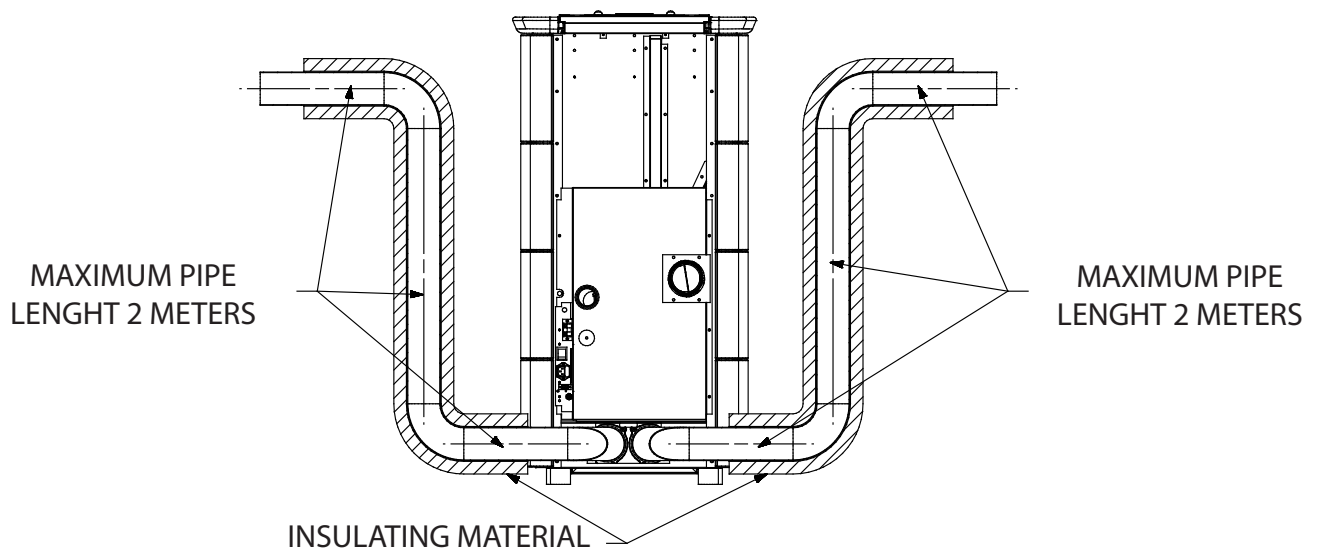


figure 6.1

TOSCA PLUS

The Tosca Plus model also has 2 tubes for channelling hot air placed at the rear. Unlike the Divina plus model, the tubes escape from the top of the product.

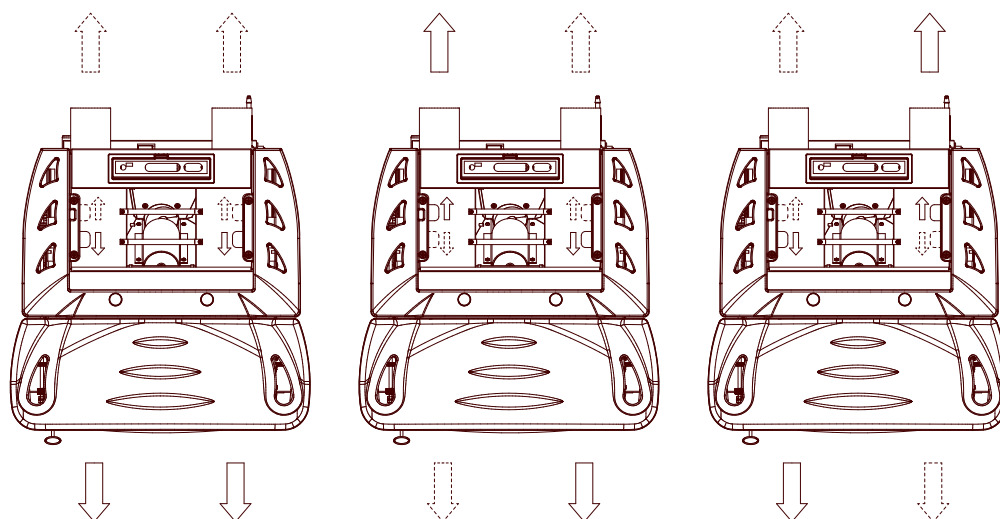


figure 6.2

Thanks to 2 shutters moved by 2 levers placed inside the pellet tank, which will have to be moved with the poker supplied, (see illustration above), the Tosca Plus model, also offers the possibility to decide which way to direct the hot air.

COMFORT MAXI INSTALLATION

The Maxi Comfort model is supplied with a metal sliding base that enables it to be installed in an existing fireplace.

The base allows you to slide out the insert easily for maintenance and cleaning at the end of the year. If you do not already have a fireplace, you can build one using the insert support pedestal (optional kit), which is designed to secure the insert to the floor.

Description of the components:

- ❖ Sliding base
- ❖ Guide rails
- ❖ Exhaust pipe
- ❖ Primary air intake pipe
- ❖ Power outlet
- ❖ Adapter frame

MOUNTING ON EXISTING BASE

Firstly, verify the presence of a power socket at the back of the insert so that once installation is complete, the plug is accessible.

Once the correct position has been evaluated, it is necessary to unhook the machine body in order to proceed with fixing the sliding base:

Using the Allen wrench supplied, rotate the lock bolt clockwise.

Take out the insert.

Tilt it to free it from the rails (illustration 7.2).

Using a piece of chalk, mark the blocking points on the base; make the holes for the 8 mm. stainless steel expansion inserts.

Make a 60 mm. hole in correspondence with the air intake.



The air intake must be made outside the fireplace, because it must not draw in overheated air.

Fix the base using the attachment screws.

Join the conveyor to the fumes evacuation pipes and the air intake box to the respective intake pipe.

Reposition the machine body repeating the above operations, but in reverse order.

Finally, using the Allen wrench, rotate the lock bolt anticlockwise to block the movement.

To understand if the insert has been correctly hooked

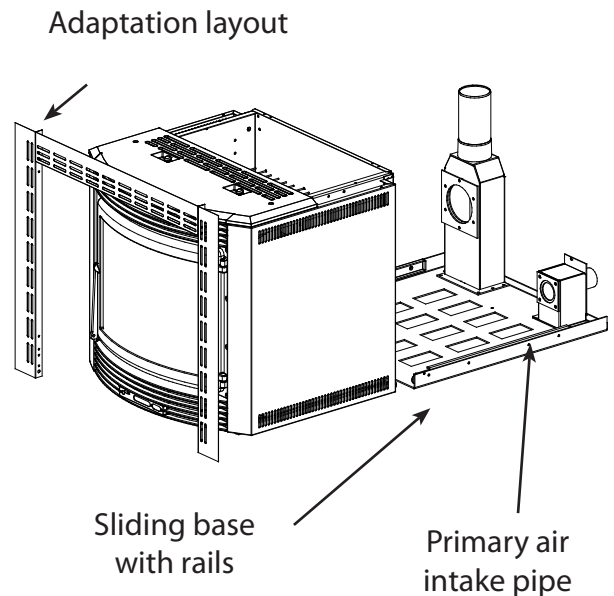


figure 7.1

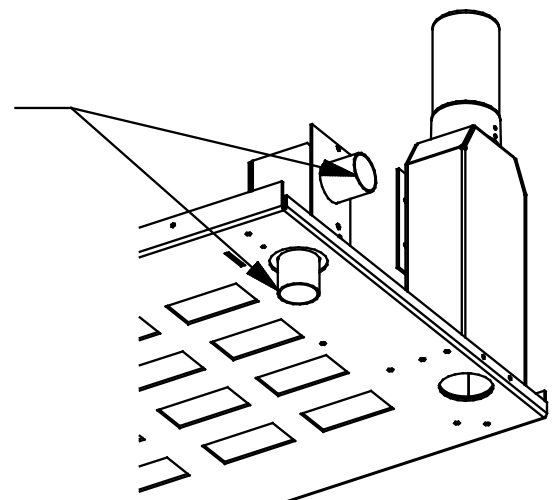


figure 7.2

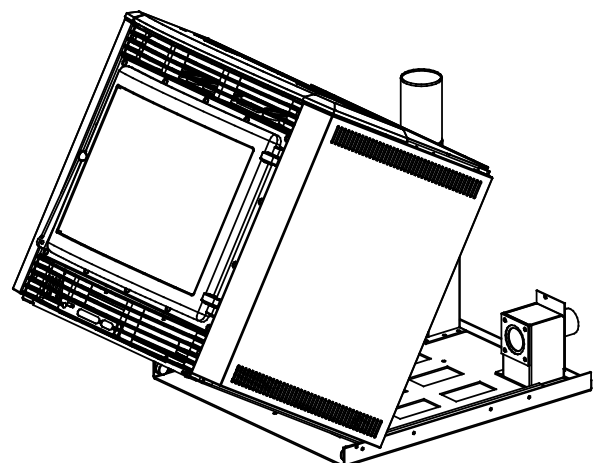


figure 7.3

up to the base, connect the plug to the power socket and set the master switch on position 1: the display should come on.



The bottom grill of the insert must stand at least 1 cm above the marble fire top of the facing.

INSTALLATION WITH PEDESTAL (OPTIONAL)

Description of components:

- ❖ Comfort Maxi
- ❖ Pedestal adjustable in height
- ❖ Side feeding hopper
- ❖ Adjustable hopper support

Position the base in the desired point and adjust to the desired height using the feet (the bolts are located on the four outer edges of the pedestal at the bottom). Provide a power outlet on the rear of the pedestal that will be easy to reach once the installation is complete. Fix the pedestal to the floor using strong steel screw anchors 8 mm diameter. Fix the sliding base to the frame using the bolts. Connect the exhaust outlet and air intake as described in the previous section. Then tilt the insert so that the wheels fit into the guide rails, slide it until the exhaust auger coupling is completely inserted in the exhaust conveyor box. Then use the socket wrench provided to turn the screw anticlockwise. To check that the insert is correctly coupled with the base, connect the plug to the power outlet: the display should light up. Mount the hopper support for the pellet and insert it in the appropriate coupling.



The hopper support can be fitted on either side of the insert.

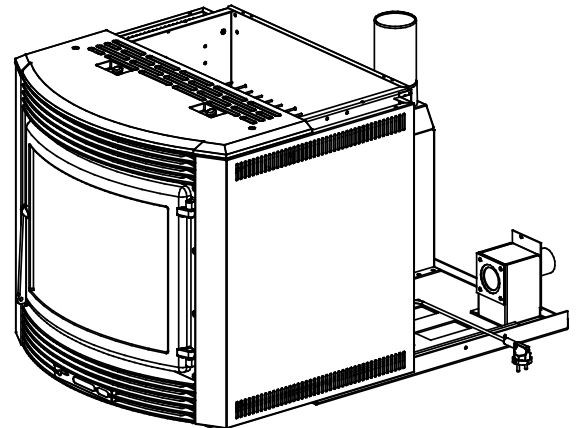


figure 7.4

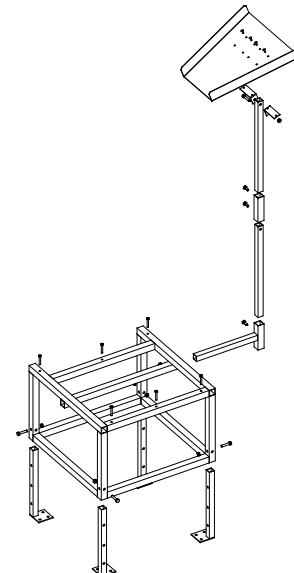


figure 7.5



figure 7.6

Adjust the height and angle of the hopper according to the fireplace to be built



The bottom grill of the insert must stand at least 1 cm above the marble fire top of the facing.

EXTRACTING THE INSERT

Maxi Comfort has to be extracted to carry out routine maintenance (cleaning the ash pipe at the end of the year) or special servicing (replacing mechanical parts in the event of damage).



These operations must be carried out by an authorized technician, with the stove switched off and the plug disconnected.

To extract the insert, proceed as follows:

- ❖ Insert the socket wrench provided on the screw at bottom right.
- ❖ Turn the wrench clockwise.
- ❖ Using the pokers provided, pull the insert towards you until it blocks automatically.



figure 7.7

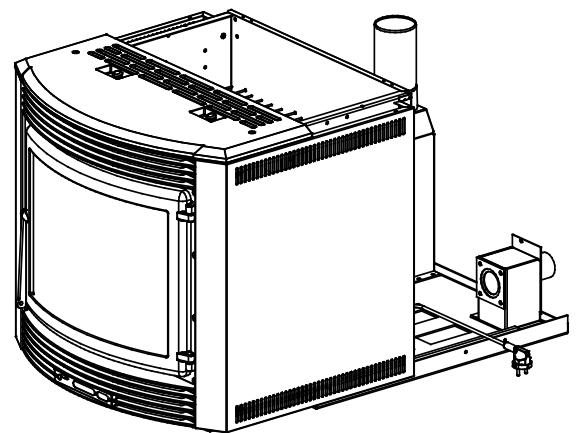


figure 7.8

FITTING THE FRAMES

- ❖ Front frame
- ❖ Side frames

Attach the front frame to the two side frames.
Fix the frames to the insert using self-tapping screws



Any wooden beams situated above the insert must be protected using fireproofing material.

Frame assembly is important, as it allows correct air circulation in the insert and consequently the most efficient stove operation.

RECIRCULATION AIR PIPES

For the correct functioning, and so as to avoid any possible overheating to the apparatus, it is necessary to create a recirculation of air inside the structure which covers the insert.

To guarantee this, it is sufficient to create one or more openings, both in the lower and upper parts of the covering.

The measurements to be used are the following:

- ❖ **Lower part (cold air entrance) ⇒ total minimum surface 550 cm².**
- ❖ **Upper part (hot air exit) ⇒ total minimum surface 500 cm².**



This airing system is totally separate from the combustion air intake!!!!

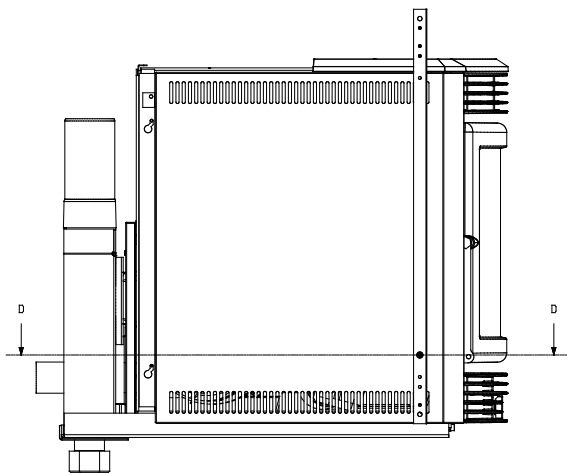


figure 7.9

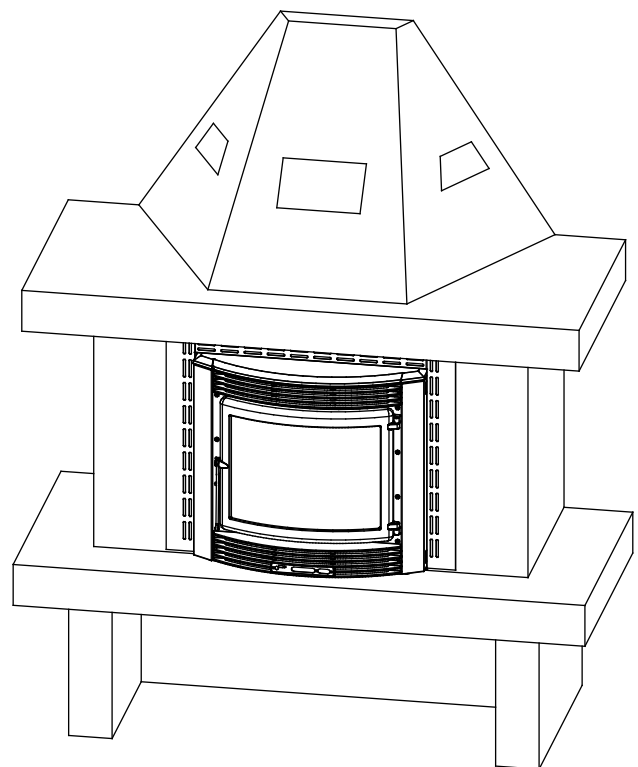


figure 7.11

fixing side surrounds with top surround by means of two screws per side.

use these holes for fixing the side surrounds onto the sides.

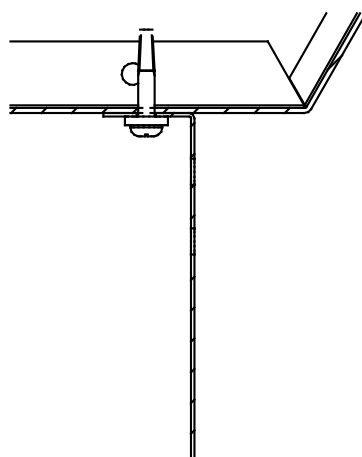


figure 7.10

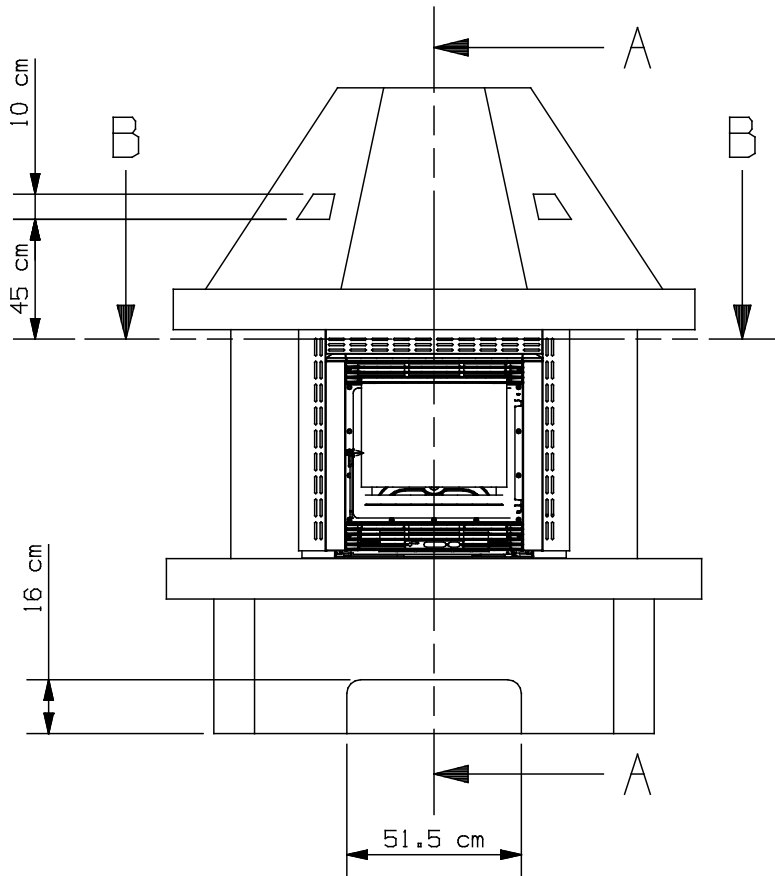


figure 7.12

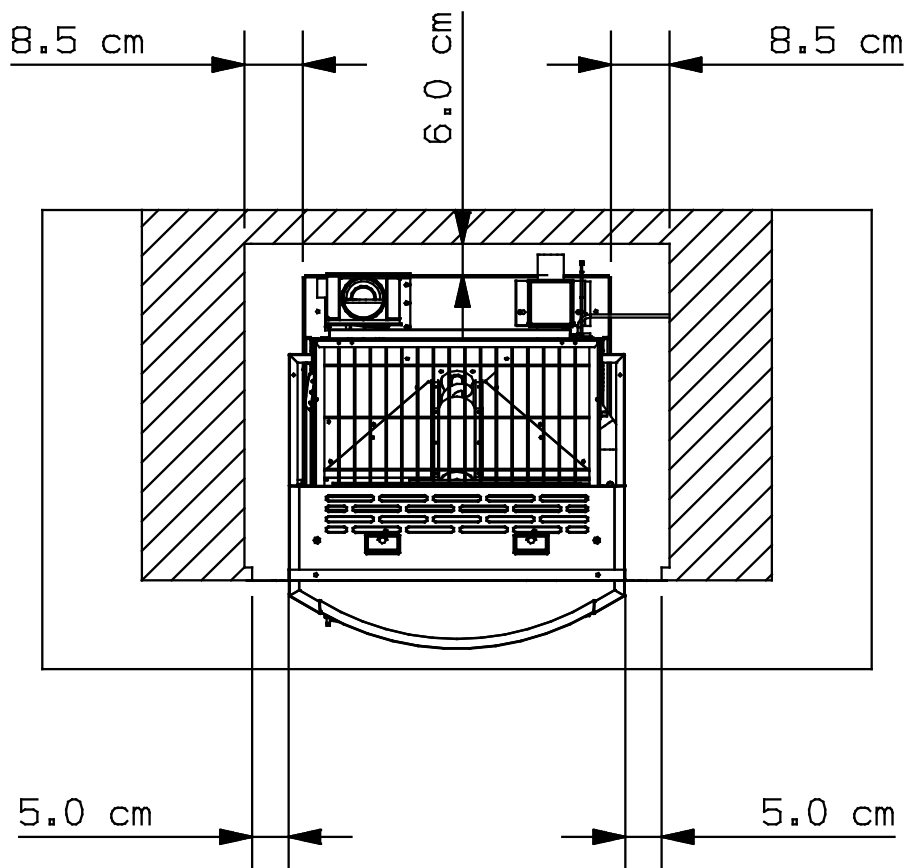


figure 7.13

Warm air of convection

It is necessary to let the heat (accumulated inside the casing) go out. It must be done to avoid the superheating of the insert.

Forced ventilation

The tangential fan blows in the room the warm air created in the insert.

Room air entrance

To allow an air loop, it is necessary to have an air entrance hole. For a better convection if it has to be on the bottom of the apparatus. The air will be taken from the room where the stove is installed.

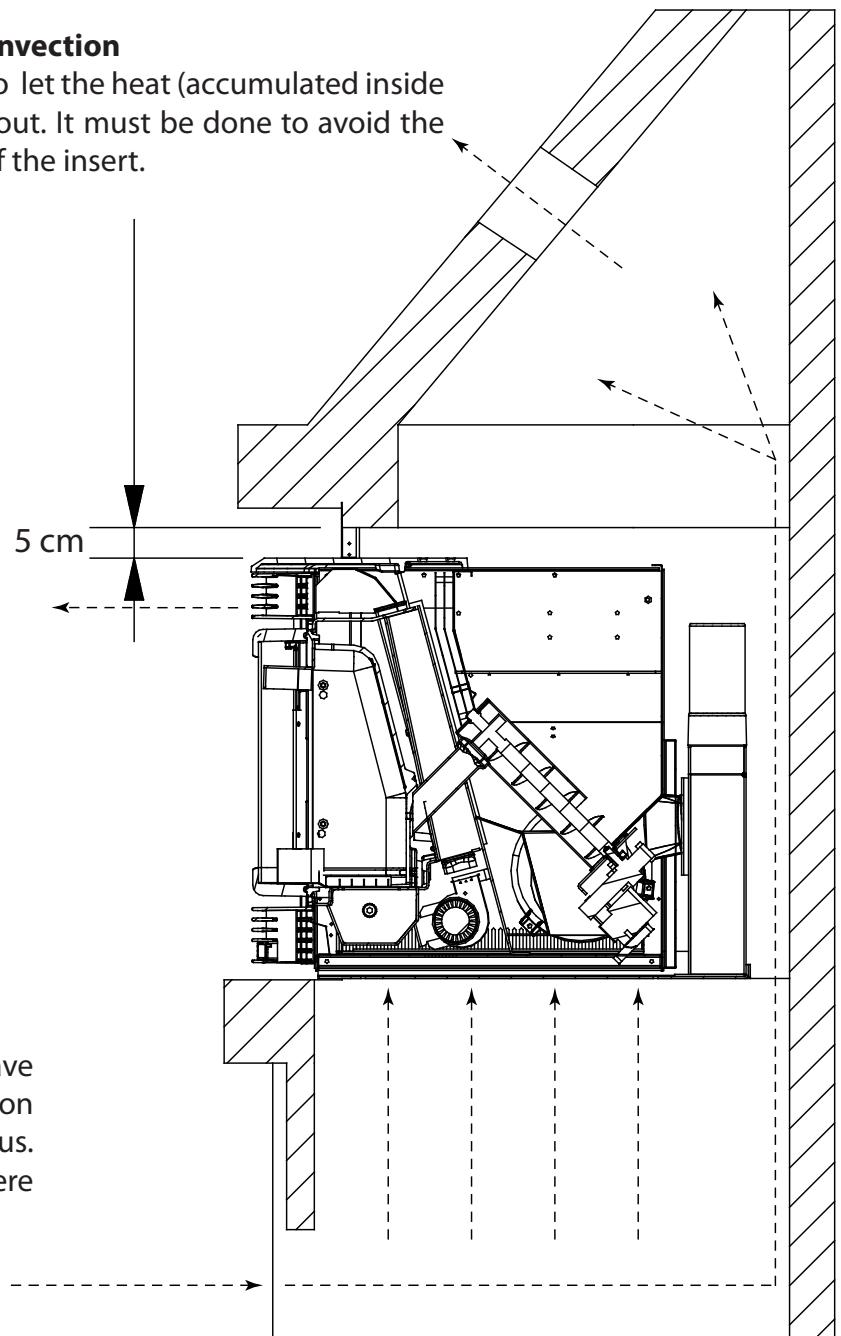


figure 7.14

To ensure the correct and safe operation of the Comfort insert, when building the fireplace it is necessary to respect the clearances between the insert and the inner walls of the fireplace. Considering the measurements given in the technical specifications, you need to account for at least 50 mm of air space in the upper part and on the two sides.



The exhaust outlet pipe must always be at a minimum distance of 5 cm from inflammable parts.

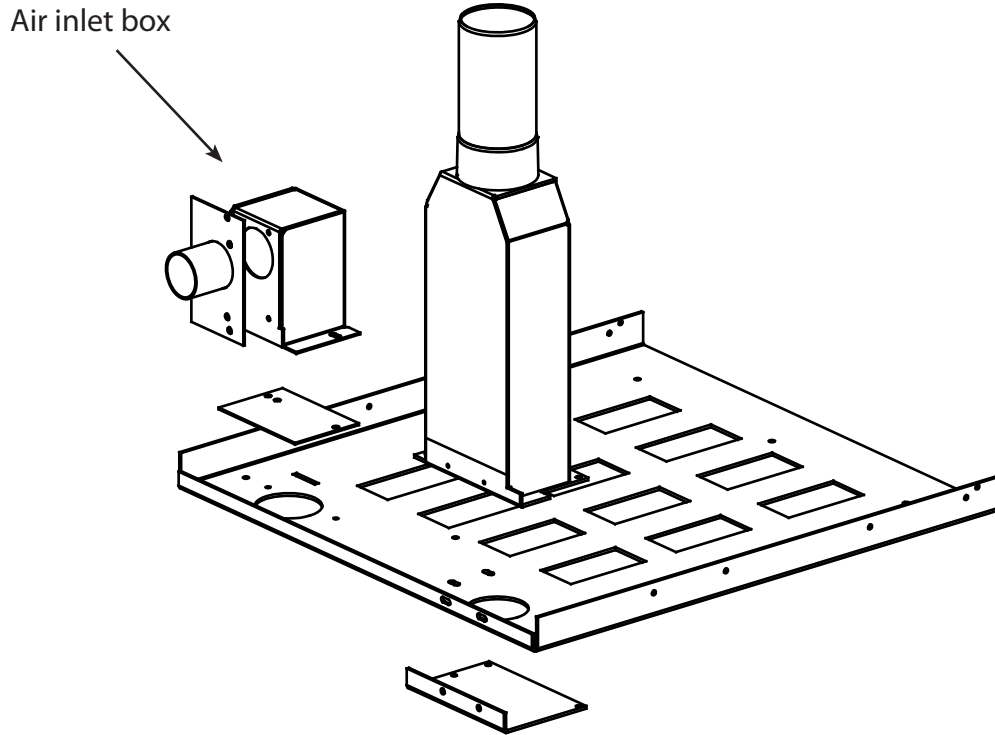


figure 7.15

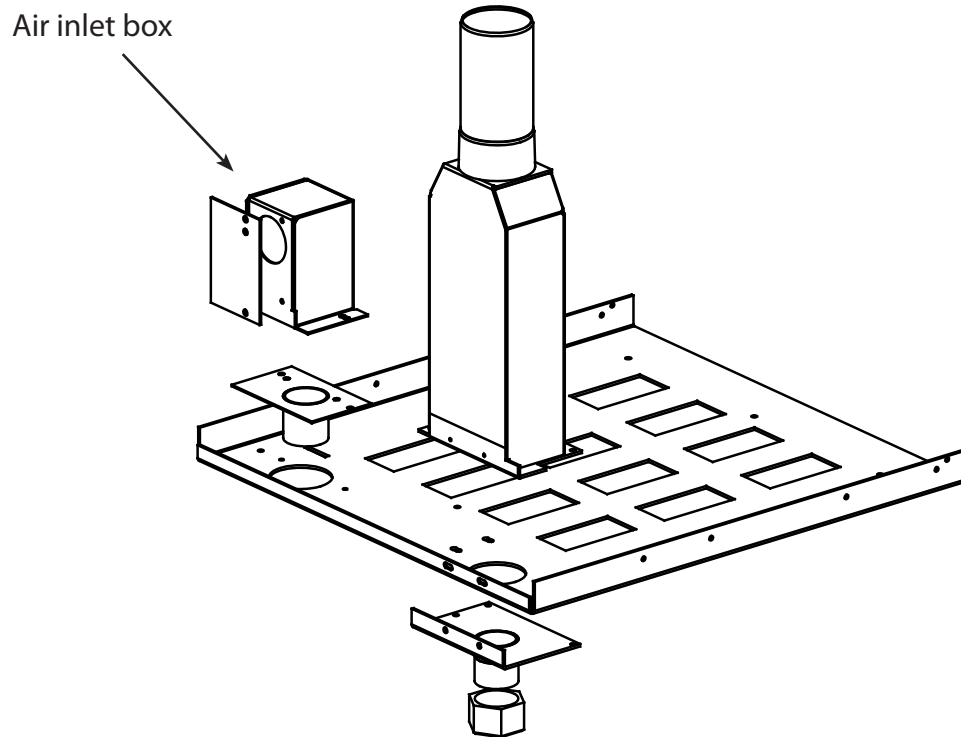


figure 7.16

As far as the air inlet box is concerned, there is the possibility to connect the air inlet pipe above the sliding base (see picture above) or under it (see picture below) depending on the needs.



All these operations must be carried out by a specialized technician.

FALO' 1XLP, FALO' 1CP AND FALO' 2CP

As you can see in the photograph below, our FALO' 1XLP, FALO' 1CP and FALO' 2CP models are provided with a convenient drawer for pellet feeding, so there is no need to disassemble any part of the stove to refill the pellets.



figure 8.1

In the FALO' 1XLP, FALO' 1CP and FALO' 2CP models the position of certain parts has been changed to make access easier. As you can see from the illustration below, the position of the following details has been modified:

1. bipolar switch
2. thermostat 85°C
3. DB9 connector for serial interface

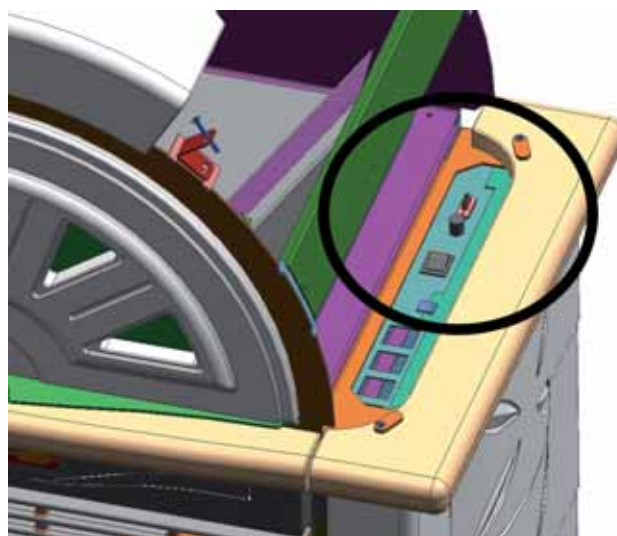


figure 8.2

To access, it is sufficient to open the pellet loading drawer and the 3 components will result visible on the internal right side.

PRODUCT FUNCTIONING

CONTROL PANEL

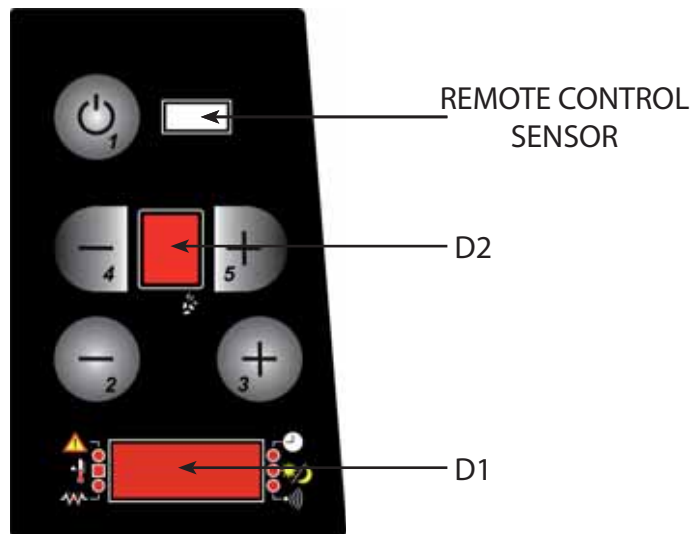


figure 9.1

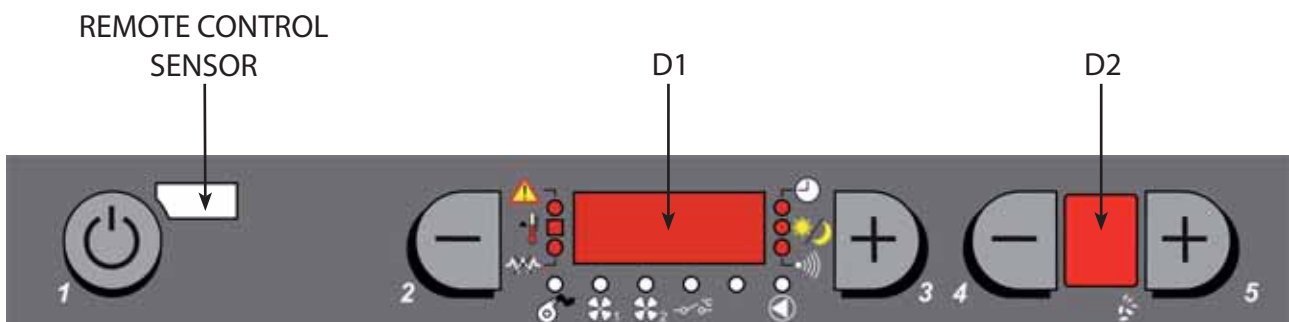


figure 9.2

1 ⇒ ON/OFF BUTTON

The stove can be turned on and off automatically by pressing button 1.

2-3 ⇒ AIR TEMPERATURE SETTING

Buttons 2 and 3 are used to adjust the room temperature inside the house.

4-5 ⇒ OPERATING POWER

Buttons 4 and 5 are used to adjust the heating power and warm air ventilation

D1 Display for showing the various messages

D2 Display for showing the heat setting.

CURRENT TIME AND DAY SETTINGS



Commands procedure

1. Switch the stove off and on again using the master switch on the back of the stove.
2. The following messages are shown: first, the microchip version (**EXTRA_43** or later), then **"TIME"**, **"LI 3"**, and **"OFF"**.
3. Press button 5 when **"TIME"** is being shown to enter the setting mode.
4. The day of the week (from DAY1 to DAY7) is shown on display D1. Enter the current day using buttons 2 and 3 and confirm with button 5.

Display D1	Meaning
DAY 1	Monday
DAY 2	Tuesday
DAY 3	Wednesday
DAY 4	Thursday
DAY 5	Friday
DAY 6	Saturday
DAY 7	Sunday

5. On display D1, the hour is blinking, whereas the minutes are stable. Enter the current hour using buttons 2 and 3. Confirm with button 5.
 6. On display D1, the hours are now stable and the minutes are blinking. Enter the current minutes using buttons 2 and 3.
- To go back to hour setting, press button 4; otherwise confirm and exit with button 1.

FUNCTIONING CYCLE

BASIC INSTRUCTIONS

The stove you have purchased uses pellets as fuel. This type of material is produced from natural waste from woodworking. By means of a special process, which does not require the use of any binders or additives, the shavings are compressed in industrial machines under high pressure and become solid wooden pellets. IT IS STRICTLY FORBIDDEN to burn any other material besides pellets in our stove.

Failure to respect these instructions will void all warranties and may jeopardise the safety of the appliance.

The first two or three times the stove is lit, the following recommendations should be observed:

- ❖ It is possible that slight odours are produced due to the drying of the paint and silicon used. Avoid prolonged stay.
- ❖ Do not touch the surfaces, as they could still be unstable.
- ❖ Air the premises several times.
- ❖ The hardening of the surfaces is completed after several heating processes.
- ❖ This stove must not be used as a waste incinerator.

LIGHTING

1. Before proceeding, check to make sure that:
 - ❖ the hopper is loaded
 - ❖ the combustion chamber is clean
 - ❖ the burn pot is clean
 - ❖ the front door and the pellet drawer are closed
 - ❖ the power outlet is connected
 - ❖ the switch on the back of the stove is in position 1
2. Press button 1 for three seconds; display D1 will show the message "**AT 08**", with the numbers decreasing every second. During this stage, the stove carries out an automatic check on the efficiency of each single electrical component. When this cycle is completed, display D1 shows the message "**AC 15**" (the number of minutes for which the stove attempts the lighting stage, decreasing by 1 every minute that passes).



During the products' first use, even if the tank is full of pellets, it is possible that for the first 15 minutes the pellets are not distributed to the heating chamber, as the worm screw that loads the pellets is empty.

*If at the end of the 15 minutes the stove has not yet produced a flame, "**NO ACC**" will appear on the display.*

3. If steps 1 and 2 are carried out correctly, as soon as the flame develops the stove enters the start-up phase ("**AU 07**").
4. After the start-up phase, the stove goes into normal operation: display D1 shows the room temperature and D2 shows the heat setting.

WARNING!!!



1. NEVER USE FLAMMABLE LIQUIDS FOR LIGHTING
2. WHEN FILLING, DO NOT BRING THE SACK OF PELLETS INTO CONTACT WITH THE HOT STOVE
3. IN CASE OF CONTINUOUS UNSUCCESSFUL IGNITION, CONTACT AN AUTHORISED TECHNICIAN

NORMAL OPERATION

Once the stove is lit, you can adjust the heat setting using buttons 4 and 5. Pressing button 4 decreases the heat setting and hourly pellet consumption; pressing 5 increases them. In addition to the feed rate, the room temperature can be set directly from the control panel. The stove adjusts itself automatically in relation to the warm air ventilation.

The functioning of the Divina Plus model is similar to that of the other models, with the addition of a 2nd motor for the channelling. During the stoves' normal functioning, the second fan will follow the course of the first fan. It will be possible to enable/disable the functioning of the 2nd motor and gradually increase/decrease the ventilation of the same as a percentage.

The contents of the hopper should be monitored to prevent the stove going out due to a lack of fuel.

ATTENTION!!!

1. The cover of the pellet container must always be kept closed except when loading fuel
2. The sacks of pellets must be kept at least 1.5 metres away from the stove.
3. The hopper should always be kept at least half full.
4. Before refilling, make sure that the appliance is switched off.

SHUTDOWN

Press button 1 for three seconds.

When the three seconds have elapsed, the stove automatically starts the shutdown stage, cutting off the pellet feed. Display D1 shows the message "**OFF**", the current time, and the room temperature in alternation.

The fumes suction motor will stay on until the stoves' temperature has sufficiently decreased.

REMOTE CONTROL (OPTIONAL "ROSY")

The heat setting, the room temperature, and automatic start/stop of the stove can be remote controlled.

S = Luminous warning light that indicates which keys have been pressed.

Correspondence of display keys with remote control keys

- 1 = p3+p5
- 2 = p2
- 3 = p3
- 4 = p4
- 5 = p5



figure 10.1

To light the stove, press buttons 3 and 5 at the same time and hold for three seconds (Fig. 21); the stove automatically enters the lighting stage. This is followed by the start-up phase, which allows the stove to develop and settle the flame. When the lighting stage is complete, the stove goes into normal operation. The heat setting can be adjusted using the buttons 5 and 4, and the room temperature setting can be adjusted using buttons 2 and 3.

To switch off the stove, press buttons 3 and 5 at the same time and hold for three seconds. Display D1 will show the message "OFF".

The remote control operates with an MN21 12V battery (the kind used for gate openers).

To replace the batteries, open the cover in the rear part as illustrated below.



figure 10.2



figure 10.3

Open by pressing the part circled in the figure

ROOM THERMOSTAT

DIGITAL THERMOSTAT (INCLUDED)

The stove can control the room temperature by means of a digital thermostat whose function is to lower the heating power to the minimum when a pre-set temperature is reached.

1. When the stove has been started and has entered normal operating mode, a number (e.g. 21°C) appears on display D1 indicating the room temperature.
2. The thermostat can be set using button 2 or 3. A message appears on the display which alternates the word **"SET"** with the temperature set each time one of the buttons is pressed. Pressing 2 decreases the value and pressing 3 increases it.
3. Wait until the message **"SET"** disappears from the display.
4. Use buttons 4 and 5 to adjust the heat setting as desired.

When the stove reaches the set temperature, it automatically goes to the minimum operating condition and LED 1 on display D1 goes off.

If you wish to exclude the digital thermostat, use button 3 to set the temperature to the maximum until **"HOT"** appears on display D1.

The same functions can be obtained by remote control.

MECHANICAL THERMOSTAT (OPTIONAL)

N.B.: Installation must be carried out by an authorized technician.

A thermostat can be placed in a room adjacent to the one in which the stove is installed. Just connect a mechanical thermostat (like those used for boilers) following the procedure described below. (We recommend positioning the optional thermostat at a height of 1.50 m above floor level.)

INSTALLING A MECHANICAL THERMOSTAT (OPTIONAL)

N.B.: Installation must be carried out by an authorized technician.

1. Switch off the appliance using the master switch on the back of the stove.
2. Disconnect the plug from the power outlet.
3. Referring to the electrical wiring diagram, connect the two thermostat wires to the respective terminals on the back side of the stove, one red and one black.

MECHANICAL THERMOSTAT WITH STANDBY FUNCTION (CAN BE USED WITH TELEPHONE ACTUATOR)

The Standby function is used to further reduce pellet consumption by switching off the stove when the desired temperature has been reached.

As the temperature drops, the stove will automatically switch on again.

1. Set the desired temperature using buttons 4 and 5.
2. Using button 2, set the room temperature at the minimum position until display D1 shows **"LOU"** with **"SET"** blinking.
3. While **"LOU"** and **"SET"** are blinking, press button 1 for three seconds; the display shows **"STBY"**, which means that the energy saving function is on.

At this point the thermostat will control the stove as described below:

- ❖ Thermostat with closed contact ⇒ the stove switches on and operates at the power set. Display D1 shows **"T ON"**.

- ❖ Thermostat with open contact ⇒ the stove switches off or stays off, and display D1 shows “**STBY**”. This function can also be suspended temporarily by pressing button 1 for three seconds:
 - ❖ If the stove is in “**STBY**” ⇒ phase, the stove remains off. Display D1 shows “**STBY**”, “**OFF**” and the current time.
 - ❖ If the stove is in “**T ON**” ⇒ phase, the stove switches off. Display D1 shows “**T ON**”, “**OFF**” and the current time.

To return to using this function, press button 1 again.

To exclude this function altogether, just raise the stove thermostat temperature using button 3.

MECHANICAL THERMOSTAT OPERATION FOR HEAT DISTRIBUTION MOTOR (DIVINA PLUS ONLY)

The connection of an external thermostat makes it possible to separate stove operation from the heat distribution motor operation.

At this point you just have to set the desired temperature; the mechanical thermostat will control the operation of the second motor:

- ❖ If the temperature has not been reached yet, the second motor follows the operation of the stove.
- ❖ Once the temperature has been reached, the stove takes the second motor to the 1st speed, and the related indicator light on the control panel blinks.

ATTENTION!!!



Using an external environment thermostat in its various modalities, the day-night temperature function is automatically disabled.



Parameter	Function	Adjustment buttons	Display D1	Button to confirm
Display D2			Indication	
0	Enable/disable weekly programmer	2 o 3	ON/OFF	5
1	Time of 1st switch-on	2 o 3	OFF or from 00:00 to 23:50	5
2	Time of 1st switch-off	2 o 3	OFF or from 00:00 to 23:50	5
3	Consents 1st switch-on/off for the various days	2 o 3	ON/OFF 1, ON/OFF 2, ... ON/OFF 7	5
4	Installer parameter	2 o 3	00	5
5	Time of 2nd switch-on	2 o 3	OFF or from 00:00 to 23:50	5
6	Time of 2nd switch-off	2 o 3	OFF or from 00:00 to 23:50	5
7	Consents 2nd switch-on/off for the various days	2 o 3	ON/OFF 1, ON/OFF 2, ... ON/OFF 7	5
8	Time of 3rd switch-on	2 o 3	OFF or from 00:00 to 23:50	5
9	Time of 3rd switch-off	2 o 3	OFF or from 00:00 to 23:50	5
A	Consents 3rd switch-on/off for the various days	2 o 3	ON/OFF 1, ON/OFF 2, ... ON/OFF 7	1

For example, let's suppose we want to use the weekly programmer function with the three heating periods as follows:

1st period: from 8.00 to 12.00 every day of the week except Saturday and Sunday

2nd period: from 15.00 to 22.00 only Saturday and Sunday

3rd period: not used

We can now proceed to setting the weekly programmer.

Parameter 0 (D2 = 0 (blinking) , D1 = ON)

Use button 2 or 3 to activate the weekly programmer, setting the value to ON.

Parameter 1 (D2 = 1 (blinking), D1 =Ex. "08.00")

Press button 2 or 3 to set "8.00", which corresponds to the switch-on time of the 1st period. Press button 5 to confirm and go to the next parameter.

Press button 4 to go back to the previous one.

Parameter 2 (D2 = 2 (blinking), D1 =Ex. "12.00")

Press button 2 or 3 to set "12.00", which corresponds to the switch-off time of the 1st period. Press button 5 to confirm and go to the next parameter.

Press button 4 to go back to the previous one.

Parameter 3 (D2 = 3 (blinking), D1 = "OFF 1")

Enable the first period for every day of the week except Saturday and Sunday, using buttons 2 and 3 as follows:

- button 3 – to scroll the days
- button 2 – to enable/disable (**ON/OFF**) the first period for that day

Example:

Day	Initial data	Function of button 2	Final data	Function of button 3
MONDAY	OFF 1	OFF 1 ON 1 and vice versa	ON 1 (enable period)	Go to following day
TUESDAY	OFF 2	OFF 2 ON 2 and vice versa	ON 2 (enable period)	Go to following day
WEDNESDAY	OFF 3	OFF 3 ON 3 and vice versa	ON 3 (enable period)	Go to following day
THURSDAY	OFF 4	OFF 4 ON 4 and vice versa	ON 4 (enable period)	Go to following day
FRIDAY	OFF 5	OFF 5 ON 5 and vice versa	ON 5 (enable period)	Go to following day
SATURDAY	OFF 6	OFF 6 ON 6 and vice versa	OFF 6 (disable period)	Go to following day
SUNDAY	OFF 7	OFF 7 ON 7 and vice versa	OFF 7 (disable period)	Go to following day



Press button 5 to confirm and go to the next parameter.
Press button 4 to go back to the previous one.

Parameter 4 (D2 = 5, D1 = "00")

N.B. This parameter is reserved to the installer and must not be modified.

Parameter 5 (D2 = 5 (blinking), D1 = Ex. "15.00")

Press button 2 or 3 to set "15.00", which corresponds to the switch-on time of the 2nd period. Press button 5 to confirm and go to the next parameter.

Press button 4 to go back to the previous one.

Parameter 6 (D2 = 6 (blinking), D1 = Ex. "22.00")

Press button 2 or 3 to set "22.00", which corresponds to the switch-off time of the 2nd period. Press button 5 to confirm and go to the next parameter.

Press button 4 to go back to the previous one.

Parameter 7 (D2 = 7 (blinking), D1 = "OFF1")

Enable the 2nd period for Saturday and Sunday only, using buttons 2 and 3 as follows:

- a. button 3 – to scroll the days
- b. button 2 – to enable/disable (ON/OFF) the 2nd period for that day

Example:

Day	Initial data	Function of button 2	Final data	Function of button 3
MONDAY	OFF 1	OFF 1 ON 1 and vice versa	OFF 1(disable period)	Go to following day
TUESDAY	OFF 2	OFF 2 ON 2 and vice versa	OFF 2(disable period)	Go to following day
WEDNESDAY	OFF 3	OFF 3 ON 3 and vice versa	OFF 3(disable period)	Go to following day
THURSDAY	OFF 4	OFF 4 ON 4 and vice versa	OFF 4(disable period)	Go to following day
FRIDAY	OFF 5	OFF 5 ON 5 and vice versa	OFF 5(disable period)	Go to following day
SATURDAY	OFF 6	OFF 6 ON 6 and vice versa	ON 6(enable period)	Go to following day
SUNDAY	OFF 7	OFF 7 ON 7 and vice versa	ON 7(enable period)	Go to following day

Press button 5 to confirm and go to the next parameter.
Press button 4 to go back to the previous one.

Parameter 8 (D2 = 8 (blinking), D1 = Ex. "OFF")

Press button 2 or 3 to set "OFF", which is situated before "00.00", to disable the third period.

Press button 5 to confirm and go to the next parameter.

Press button 4 to go back to the previous one.

Parameter 9 (D2 = 9 (blinking), D1 = Ex. "OFF")

Press button 2 or 3 to set "OFF", which is situated before "00.00" to disable the third period.

Press button 5 to confirm and go to the next parameter.

Press button 4 to go back to the previous one.

Parameter A (D2 = A (blinking), D1 = Ex. "OFF 1")

At this point, the data in this parameter no longer has any value, as the switch-on/off of the third period have been disabled.

Press button 5 to confirm and go to the next parameter.

Press button 4 to go back to the previous one.

Press button 1 to confirm and exit.



Note: When the weekly programmer is on, the corresponding LED indicator on the control panel is on (see description of indicator lights).

TO DISACTIVATE THE WEEKLY PROGRAMMER, enter the User Parameters by pressing button 3 and holding it, then pressing button 5. Display D2 shows a blinking "0". Use button 2 or 3 to set "OFF" mode on display D1. Press button 1 to confirm and exit.

Manual controls via the front panel or remote control take precedence over any programmed settings.

DAY/NIGHT TEMPERATURE FUNCTION

The day/night temperature function makes it possible to switch the stove on/off automatically based on two selected temperatures. This function is particularly useful when the stove heat exceeds the setting of the room thermostat (e.g. due to mid-season temperatures or a stove that is oversized with respect to the space).

This system enables you to select one temperature for daytime and one for night.

Firstly, it is necessary to set the current time using the current time regulation sequence in order to give a time reference to the function itself.

To access the parameters of the day/night temperature function, press button 3 and hold it down, then press button 5 and release both buttons at the same time. When you have entered the function, press button 5 to move to parameter b (D2=**B**).

Parameter b (D2 = B, D1 =Ex. "06.00")

Press button 2 or 3 to set the day period beginning/night period end.

Press button 5 to confirm and go to the next parameter.

Parameter c (D2 = C, D1 =Ex. "22.00")

Press button 2 or 3 to set the day period end/night period beginning.

Press button 5 to confirm and go to the next parameter.

Parameter d (D2 = D, D1 =Ex. "25°C")

Press button 2 or 3 to set the maximum temperature for the day period.

Press button 5 to confirm and go to the next parameter.

Parameter E (D2 = E, D1 =Ex. "20°C")

Press button 2 or 3 to set the maximum temperature for the night period.

Press button 1 to confirm and exit.

When you have exited from the programming, to activate/disactivate the function, press button 4 and hold it down, press button 5, then release both buttons at the same time.

The corresponding LED on the control panel will light up/go off (see description in the table of indicator lights).



The various parameters must be set with the stove switched off!

Summary table

Display D1	Display D2	Function
06:00	B	Start day phase/end night phase
22:00	C	Start night phase/end day phase
25°C	D	Day phase max. temperature
20°C	E	Night phase max. temperature

Once this function is active, it is still necessary to light the stove using button 1. When the stove switches off because the maximum temperature has been reached, the message “**DOFF**” appears on D1. The stove will switch on again automatically when the room temperature is 3°C lower than the maximum temperature set.

Es. Status of the stove – **DOFF**
Max. temperature set - 25°C

When the room temperature goes below 22°C ($25 - 3 = 22^\circ\text{C}$), the stove will automatically start again.



This only occurs if the stove is in “DOFF” status, not in “OFF” status.

Manual controls via the front panel or remote control take precedence over any programmed settings.

PELLET FEED ADJUSTMENT

If the stove has operating problems due to the quantity of pellets, you can adjust the pellet feed directly from the remote control.

Problems related to the quantity of pellets fall into one of two categories:

LACK OF PELLETS:

- ❖ The stove cannot develop a suitable flame, tending to burn very poorly even at high speeds.
- ❖ At the lowest speed, the stove tends to almost burn out, causing the stove to go into “**NO PELL**” alarm status.
- ❖ When “**NO PELL**” is displayed, there may still be some unburned pellets in the burn pot.

EXCESS PELLETS:

- ❖ The stove develops a very high flame even at low speeds.
- ❖ The flame tends to soil the stove window, darkening it almost completely.
- ❖ The burn pot tends to get incrustated, blocking the air intake holes, due to the excessive pellet load that is only partially burned.



If this problem occurs just a few months after installation, check to make sure that the user is correctly carrying out the regular cleaning schedule described in the instruction manual.

The adjustment is made on a percentage basis, and therefore any change of this parameter leads to a proportional variation on all loading speeds of the stove.

To access the percentage adjustment of pellet feeding, you have to enter the user programming by pressing button 3, and while keeping it pressed, press button 5.

At this point use button 5 to move through the menu until you see “**F**” blinking on D2.

If you go beyond this parameter unintentionally, exit by pressing button 1 and repeat the procedure.

The value “**00**” will be shown on D1: using buttons 2 and 3, you can set an increased/decreased percentage at 5 point intervals (the parameter can be modified with a maximum scale from -50 to +50).

Adjustment Table

LACK OF PELLETS	Increase the percentage by 5 percent and try the stove with this new setting for at least half an hour. If the problem is reduced but not resolved, increase by a further 5 percent. Repeat this process until the problem is resolved. If the problem cannot be resolved, contact the service centre.
EXCESS PELLETS	Decrease the value by 5 percent and try the stove with this new setting for at least half an hour. If the problem is reduced but not resolved, decrease by a further 5 percent. Repeat this process until the problem is resolved. If the problem cannot be resolved, contact the service centre.

When the final adjustment has been made, press button 1 to confirm and exit the program.

HEAT DISTRIBUTION MOTOR PARAMETERS

These parameters enable you to carry out some operations regarding the heat distribution motor of the Divina Plus stove.

To access these parameters, press button 3 and hold it down, then press button 5. Move through the menu by pressing button 5 until a blinking “**G**” appears on D2.

Parameter Table

OFF	G	Distribution motor start/stop
00	H	% setting of distribution motor

The parameter “**G**” is for enabling/disabling operation of the distribution motor. Simply use buttons 2 and 3 on D1 to set “on” to enable or “**OFF**” to disable the motor. To confirm and exit, press button 1. To continue with programming, press button 5.

The parameter “**H**” enables you to make a percentage modification (therefore proportional on all the power levels) of the speed of the distribution motor on the Divina Plus model.

Display D1 will show “**00**”: using buttons 2 and 3, you can increase/decrease the value at 5 point intervals (the parameter can be modified with a maximum scale from -50 to +30). When the final adjustment has been made, press button 1 or 5 to confirm and exit.

STOVE CLEANING

ECOLOGICA – COMFORT MAXI

Maintenance is necessary to ensure the correct operation of your stove over time. Failure to do so may make the stove unsafe.

1. CLEANING THE BURN POT

The burn pot must be cleaned every day. To do so:

- ❖ Remove the burn pot from its compartment and clean the holes using the poker provided (figure 13.1)
- ❖ Remove the ash from the burn pot using a vacuum cleaner.
- ❖ Vacuum the ash deposited in the burn pot compartment

2. USING THE SCRAPERS

Cleaning the heat exchangers allows you to maintain a constant heat yield over time. This type of maintenance must be carried out at least once a day. For this purpose, use the special scrapers located in the upper part of the stove, moving them up and down several times (figure 13.2).

3. CLEANING THE ASH PANS

The ash pans should be emptied as needed, either using a vacuum cleaner or, for the Ecologica model, by pulling out the ash drawer at the bottom. To remove the drawer, proceed as follows:

- ❖ Press the bottom door downwards and rotate it outwards (figure 13.3)
- ❖ Turn the handle 90° in order to release the drawer from the fixed body of the stove (figure 13.4)
- ❖ Pull out the ash drawer and empty the ashes (figure 13.5)

Work in inverse order to reassemble.



figure 13.1



figure 13.2



figure 13.3



figure 13.4



figure 13.5

4. CLEANING THE HEAT EXCHANGER (monthly)

The heat exchangers chamber has to be cleaned once a month because the ash residue doesn't let the stove work properly. To do this, it is necessary to remove the firewall:

- ❖ Remove the brazier from his frame
- ❖ Rotate the door latch of 180° like in (figure 13.7).
- ❖ Take the cast iron and rotate it down.
- ❖ Remove it from the combustion chamber by pulling it. Pay attention to the two lateral cast iron levers.

Once the heat exchangers chamber is accessible, scrape with the ash hook to remove the deposited residues and scrape off any encrustation. Finally use vacuum cleaner to complete the cleaning (figure 13.9). After that proceed in the inverse order to reassemble and rotate the door latch of 180° to have it in the original position.



figure 13.6



figure 13.7



figure 13.8



figure 13.9

5. DOOR, ASH DRAWER AND BURN POT SEALS

The seals ensure that the stove is hermetically sealed and consequently that it operates correctly. The seals should be checked periodically and replaced immediately if worn or damaged.

These operations must be carried out by an authorized technician.



To ensure correct operation, the stove should have general maintenance performed at least once a year by an authorized technician.

If the power cable is damaged, it must only be replaced by the service centre or by a qualified technician, in order to avoid any risks.

BELLA – BELLA LUX – DUCHESSA – DUCHESSA STEEL – CONTESSA – CLEMENTINA – DIVINA – DIVINA STEEL – DIVINA PLUS – TOSCA PLUS CLEANING

Maintenance is necessary to ensure the correct operation of your stove over time. Failure to do so may make the stove unsafe.

1. BURN POT CLEANING

The burn pot must be cleaned every day. To do so:

- ❖ Remove the burn pot from its compartment and clean the holes using the poker provided (figure 13.10)
- ❖ Remove the ash from the burn pot using a vacuum cleaner
- ❖ Vacuum the ash deposited in the burn pot compartment



figure 13.10

2. USING THE SCRAPERS

Cleaning the heat exchangers allows you to maintain a constant heat yield over time. This type of maintenance must be carried out at least once a day. For this purpose, use the special scrapers located in the upper part of the stove, moving them from the bottom upwards and vice versa several times.



figure 13.11

3. CLEANING THE ASH DRAWER

The ash pans should be emptied as needed by removing the ash drawer located at the bottom. To remove the drawer, proceed as follows:

- ❖ Press the bottom door downwards and rotate it outwards (figure 13.12)
- ❖ Turn the handle 90° in order to release the drawer from the fixed body of the stove (figure 13.13)
- ❖ Pull out the ash drawer and empty the ashes (figure 13.14)

Work in inverse order to reassemble.



figure 13.12



figure 13.13



figure 13.14

4. CLEANING THE HEAT EXCHANGER (monthly)

The heat exchangers chamber has to be cleaned once a month because the ash residue doesn't let the stove work properly. To do this, it is necessary to remove the firewall:

- ❖ Remove the brazier from his frame
- ❖ Rotate the door latch of 180° like in picture (figure 13.16).
- ❖ Take the cast iron and rotate it down.
- ❖ Remove it from the combustion chamber by pulling it. Pay attention to the two lateral cast iron levers.

Once the heat exchangers chamber is accessible, scrape with the ash hook to remove the deposited residues and scrape off any encrustation. Finally use vacuum cleaner to complete the cleaning (figure 13.18). After that proceed in the inverse order to reassemble and rotate the door latch of 180° to have it in the original position.



figure 13.15



figure 13.16



figure 13.17



figure 13.18

5. DOOR, ASH DRAWER AND BURN POT SEALS

The seals ensure that the stove is hermetically sealed and consequently that it operates correctly. The seals should be checked periodically and replaced immediately if worn or damaged. These operations must be carried out by an authorized technician.



To ensure correct operation, the stove should have general maintenance performed at least once a year by an authorized technician.

If the power cable is damaged, it must only be replaced by the service centre or by a qualified technician, in order to avoid any risks.

PULIZIA BABYFIAMMA – PREZIOSA – KAROLINA – ISABELLA – GRAZIOSA – ROSY

Maintenance is necessary to ensure the correct operation of your stove over time. Failure to do so may make the stove unsafe.

1. BURN POT CLEANING

The burn pot must be cleaned every day. To do so:

- ❖ Remove the burn pot from its compartment and clean the holes using the poker provided (figure 13.19)
- ❖ Remove the ash from the burn pot using a vacuum cleaner
- ❖ Vacuum the ash deposited in the burn pot compartment.



figure 13.19

2. SCRAPERS (excluded Isabella)

Cleaning the heat exchangers allows you to maintain a constant heat yield over time. This type of maintenance must be carried out at least once a day. For this purpose, use the special scrapers located in the upper part of the stove, moving them back and forth several times, moving several times horizontally.



figure 13.20

3. CLEANING THE ASH PANS

The ash pans should be emptied as needed by pulling out the ash drawer at the bottom. To remove the drawer, proceed as follows:

- ❖ Press the bottom door downwards and rotate it outwards (figure 13.21)
- ❖ Turn the handle 90° in order to release the drawer from the fixed body of the stove (figure 13.22)
- ❖ Pull out the ash drawer and empty the ashes (figure 13.23)

Work in inverse order to reassemble.



figure 13.21



figure 13.22



figure 13.23

4. CLEANING THE HEAT EXCHANGER (monthly)

The heat exchangers chamber has to be cleaned once a month because the ash residue doesn't let the stove work properly. To do this, it is necessary to remove the firewall:

- ❖ Remove the brazier from his frame
- ❖ Rotate the door latch of 180° like in (figure 13.24).
- ❖ Take the cast iron and rotate it down.
- ❖ Remove it from the combustion chamber by pulling it. Pay attention to the two lateral cast iron levers.

Once the heat exchangers chamber is accessible, scrape with the ash hook to remove the deposited residues and scrape off any encrustation. Finally use vacuum cleaner to complete the cleaning (figure 13.26). After that proceed in the inverse order to reassemble and rotate the door latch of 180° to have it in the original position.



figure 13.24



figure 13.25



figure 13.26

5. DOOR, ASH DRAWER AND BURN POT SEALS

The seals ensure that the stove is hermetically sealed and consequently that it operates correctly. The seals should be checked periodically and replaced immediately if worn or damaged. These operations must be carried out by an authorized technician.



To ensure correct operation, the stove should have general maintenance performed at least once a year by an authorized technician.

If the power cable is damaged, it must only be replaced by the service centre or by a qualified technician, in order to avoid any risks.

FALÒ 1XLP – FALÒ 1CP – FALÒ 2CP – ESMERALDA CLEANING

Maintenance is necessary to ensure the correct function of your stove over time. Failure to do so may make the device unsafe.

1. CLEANING THE BURN POT

The burn pot must be cleaned every day. To do so.

- ❖ Remove the burn pot from its compartment and clean the holes using the poker provided
- ❖ Remove the ash from the burn pot using a vacuum cleaner
- ❖ Vacuum the ash deposited in the burn pot compartment



figure 13.27

2. USING THE SCRAPERS

Cleaning the heat exchangers allows you to maintain a constant heat yield over time. This type of maintenance must be carried out at least once a day. For this purpose, use the special scrapers located in the upper part of the stove, moving them up and down several times, moving several times horizontally (figure 13.28).



figure 13.28

3. CLEANING THE ASH PANS

The ash pans should be emptied as needed using a vacuum cleaner (figure 13.29).

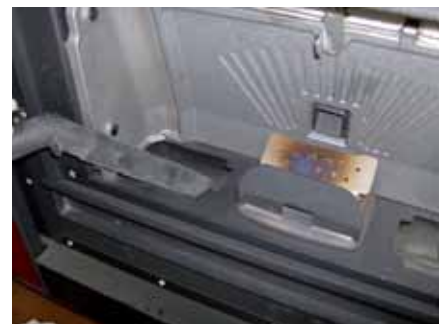


figure 13.29

4. CLEANING THE HEAT EXCHANGER (monthly)

The heat exchangers chamber has to be cleaned once a month because the ash residue doesn't let the stove work properly. To do this, it is necessary to remove the firewall:

- ❖ Remove the brazier from his frame
- ❖ Rotate the door latch of 180° like in picture (figure 13.30).
- ❖ Take the cast iron and rotate it down.
- ❖ Remove it from the combustion chamber by pulling it.

Pay attention to the two lateral cast iron levers.

Once the heat exchangers chamber is accessible, scrape with the ash hook to remove the deposited residues and scrape off any encrustation. Finally use vacuum cleaner to complete the cleaning. After that proceed in the inverse order to reassemble and rotate the door latch of 180° to have it in the original position.



figure 13.30

5. DOOR, ASH DRAWER AND BURN POT SEALS

The seals ensure that the stove is hermetically sealed and consequently that it operates correctly.

The seals should be checked periodically and replaced immediately if worn or damaged.

These operations must be carried out by an authorized technician.

The seals ensure that the stove is hermetically sealed and consequently that it operates correctly.



The seals should be checked periodically and replaced immediately if worn or damaged.

These operations must be carried out by an authorized technician.

If the power cable is damaged, it must only be replaced by the service centre or by a qualified technician, in order to avoid any risks.



figure 13.31



figure 13.32

BURN POT PARTITION

Some Extraflame products have a partition fixed to the burn pot by a screw, which reduces the amount of carbon monoxide produced by the stove.

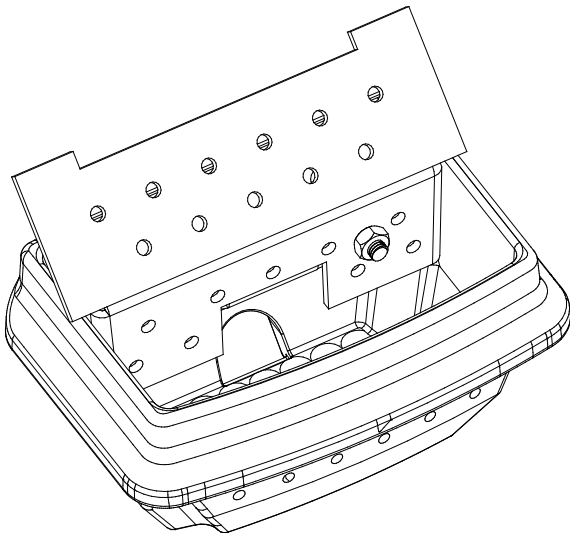


figure 13.33

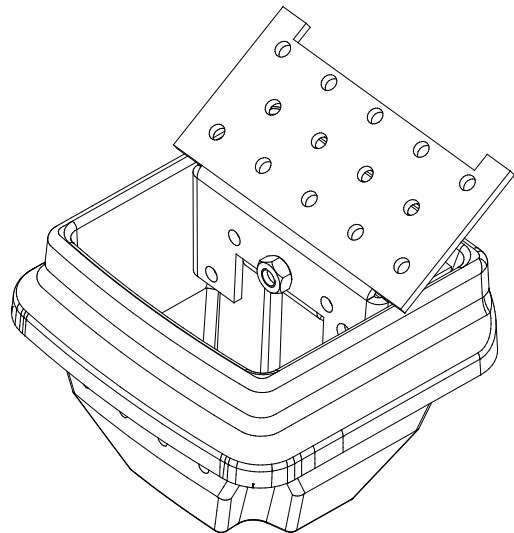


figure 13.34

Burn pot of: Bella – Bella Lux – Contessa – Duchessa – Divina –
Divina Plus – Falò 1CP – Falò 2CP – Falò 1XLP – Irina

Burn pot of: Babyfiamma – Preziosa – Karolina – Isabella –
Graziosa – Rosy



Removing the burn pot partition can jeopardise stove safety and immediately voids the warranty. In case of wear or damage, contact the assistance service for a replacement (not covered by warranty as the part involved is subject to wear).

CHIMNEY CONNECTION

Once a year, or whenever needed, vacuum and clean the duct that leads to the chimney.
If there are horizontal sections, remove any ash residues before they can obstruct passage of the smoke.
FAILURE TO CLEAN jeopardises safety.







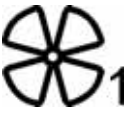




TABLE OF DISPLAY MESSAGES

INDICATIONS		
Message Display	Cause	Solution
ATTE	An attempt is made to switch on a stove again when it has just been shut down (normal shutdown or caused by an alarm situation).	When the stove has just been shut down (normal shutdown or caused by an alarm situation), you have to wait until it is completely cold and then clean the burn pot. It is possible to re-start the stove only after having carried out this operation.
HOT	Room thermostat set at maximum value.	In this operating mode the stove no longer has a temperature level but is working manually with all 5 power levels. To exit this function, simply lower the room temperature by pressing button 2.
LOU	Room thermostat set at minimum value.	In this operating mode, the stove works only at the 1st power level no matter what power is set. To exit this function, simply raise the room temperature by pressing button 3.
T ON	An external thermostat has been connected. The room thermostat probe is disconnected. The room thermostat probe is interrupted.	To exclude an external thermostat, just disconnect it. Other resetting operations must be carried out by an authorised technician.
STBY	The stove is off and on standby to be re-started.	In this mode, the stove can be switched on/off by means of a supplementary thermostat (see " <i>Mechanical thermostat with energy saving</i> "). To exclude this function, simply raise the room temperature by pressing button 3.
DOFF	The stove is off due to the " <i>Day/Night Temperature Function</i> " and on standby to be re-started.	To stop the stove from starting again due to the " <i>Day/Night Temperature Function</i> ", press button 1 and hold for three seconds, which switches the stove OFF . To disable this function completely, press button 4 and hold it down, then press button 5.
RAF / BLAC OUT	No power.	When the shutdown cycle is completed, the stove will light again automatically.
PUL	The automatic cleaning of the burn pot is in progress.	The automatic cleaning of the burn pot takes place at regular intervals of continuous operation. The automatic cleaning is not carried out when the stove is in power level 1 position.

ALARMS

Message Display	Cause	Solution
	Indicates the presence of an alarm.	This indicator lights up when one of the alarms described below is in progress and is accompanied by the corresponding indication on display D1. To reset the alarm, press button 1 and hold for three seconds when the stove is completely cold.
FUM FAIL	Breakdown correlated to the fumes exhaust motor.	All restore operations must be carried out by an authorised technician.
FUMI TC	Breakdown correlated to the fumes probe.	All restore operations must be carried out by an authorised technician.
HIGH TEMP	Overloading of pellets.	Adjust the flow of pellets (see "Pellet Feed Adjustment"). Other restore operations must be carried out by an authorised technician.
DEPR FAIL	The door is not properly closed. The ash drawer is not properly closed. The depression sensor is faulty. The heating chamber is dirty. The fume exhaust pipe is blocked.	Verify the hermetic closure of the door. Verify the hermetic closure of the ash drawer. Verify exhaust pipe and heating chamber are clean. Other resetting operations must be carried out by an authorised technician.
NO ACC	The pellet tank is empty. Pellet load calibration inadequate.	Check the level in the pellet hopper. Check the procedures described in "Lighting". Adjust the flow of pellets (see "Pellet Feed Adjustment") Other restore operations must be carried out by an authorised technician.
NO ACC BLAC OUT	No electricity during the lighting phase.	Place the stove in OFF using key 1 and repeat the procedures described in the "Lighting" chapter. Other restore operations must be carried out by an authorised technician.
NO PELL	The pellet tank is empty. No pellet load. The geared motor does not load pellets.	Check the level in the pellet hopper. Adjust the flow of pellets (see "Pellet Feed Adjustment"). Other restore operations must be carried out by an authorised technician.
ATTE + ALLARME	An attempt is made to reset an alarm while the stove is still cooling.	Whenever one of the alarms described above is tripped, the stove automatically shuts down. During this phase, any attempt to reset the alarm will be blocked, and the display will show the alarm and "ATTE" in alternation. Resetting the alarm by pressing button 1 is only possible after the stove has completely shut down.

INDICATOR LIGHTS

LED indicator light	Meaning	Description
	Weekly Programmer function.	It is switched on when the weekly programmer is active. For all settings relating to the following function, see “Weekly programmer” paragraph.
	“Room Thermostat” function.	This LED is on/off when the room temperature is lower/higher than the temperature set. To modify the temperature setting, use buttons 2 and 3 during normal operation.
	“Day/Night Temperature” function.	It is switched on when “Day-night temperature function” is active. To enable/disable the “Day/Night Temperature function”, press button 4 and hold it down, then press button 5. For all settings related to this function, see the section Day/Night Temperature Function.
	Spark plug disactivation.	This LED is on/off when the spark plug is active/inactive. To reactivate the spark plug, contact an authorised technician.
	Exhaust motor operation.	It is switched on when fume exhaust motor is active. If flashing contact an authorised technician.
	Pellet feed motor operation.	It is switched on when the pellet loading motor is active. During the normal functioning, the following light switches on intermittently.
	Blower operation.	It is switched on when the tangential fan is active.
	DIVINA PLUS model only - Heat distribution motor operation.	It is switched on when the channelling motor is active. If flashing, verify “Mechanical thermostat function for commanding channelling motor” paragraph”.
	DIVINA PLUS model only - Status of supplementary thermostat.	Normally this LED is ALWAYS on. When you connect an external thermostat to control the distribution motor, this LED is on/off when the external contact is open/closed.
	Does not indicate any functioning.	This light must be off at all times.
	Communication established between remote control and stove.	Each time you press a button on the remote control, this LED should light up. If it stays on, it means that communication between the remote control and the stove is blocked. To reset remote control operation, contact an authorised technician.

WARRANTY

EXTRAFLAME S.p.A. is the owner of the rights described by Legislative Decree no. 24 of 2 February 2002, and the following warranty does not alter such rights.

This warranty offered by Extraflame S.p.A., based in Montecchio Precalcino (VI), Italy, in Via dell'Artigianato, 10, covers all the parts of the stoves supplied by Extraflame S.p.A., and includes repair or replacement, free of charge, of any faulty part, if:

- ❖ the defect is detected within 2 YEARS from delivery date and is reported to an Extraflame Technical Assistance Centre within 2 months of its detection;
- ❖ an Extraflame Technical Assistance Centre acknowledges the problem as a defect.

If necessary interventions by an Extraflame Technical Assistance Centre are covered by the warranty certificate, they shall be provided free of charge.

WARRANTY CONDITIONS

The warranty is considered valid on condition that:

1. the appliance is installed by an authorized technician according to the requirements stated in the booklets provided with the products and to current norms;
2. the customer sends the warranty card, entirely filled in and validated by the vendor or by an Extraflame Technical Assistance Centre;
3. the warranty certificate, filled in and including the purchase receipt, is duly kept and presented to Extraflame Technical Assistance Centre personnel in case of intervention.

The warranty is not considered valid if:

1. the warranty conditions above have not been respected.
2. installation has not been carried out according to norms and to the requirements stated in the booklets.
3. fault is due to client's negligence or failure to perform maintenance operations.
4. electric and/or hydraulic plants are not compliant with current norms.
5. damage is due to atmospheric, chemical, electrochemical agents, to improper use of the product, to alterations or tampering with the product, to inefficiency and/or inadequacy of the flue and/or other causes not due to product manufacture.
6. damage is caused by normal corrosion phenomena or typical deposit found in heating plants (condition applies for water products only).
7. damage is caused by using non original parts or by interventions carried out by technical personnel not authorised by Extraflame S.p.A.
8. the stove has been used improperly or negligently.
9. damage is caused by transport. It is therefore advisable to accurately check the goods upon delivery and to immediately report to the vendor in case of damage, writing a note on the transport document and on the copy kept by the carrier.



Extraflame S.p.A. is not liable for any direct or indirect damage to persons, things or pets caused by failure to follow the indications in this booklet or the current norms regarding installation and maintenance of the appliance.

The warranty excludes:

- ❖ Seals, all the ceramic and tempered glass parts, casings and grills in cast iron or Ironker, painted, chromed, or gilded parts, the majolica ceramics, the handles and electrical cables.
- ❖ Chromatic variations, tiny cracks in the glaze, and slight dimensional differences in the majolica parts shall not constitute reasons for claims, as they are natural characteristics of these materials.
- ❖ Building works.
- ❖ For thermo-products: the parts of the plumbing system not supplied by EXTRAFLAME S.p.A..
- ❖ The heat exchanger is not covered by warranty in case no suitable anti-condensation circuit is present (water products only).
- ❖ The warranty excludes any calibrations or adjustments of the product based on the type of fuel or the type of installation.

Further clauses

If any defective or malfunctioning part is found during normal use of the appliance, the part shall be replaced free of charge by the vendor from which the appliance was purchased, or at our local Technical Assistance Centre.

For products sold outside Italy, such problems shall also be solved free of charge, with the exception of particular conditions agreed during negotiation with our external dealer.

The warranty is not extended if parts are replaced.

No compensation is acknowledged for the period of inefficiency of the product.

This is the only valid warranty and no-one is authorised to supply others in the name of or on behalf of EXTRAFLAME S.p.A.

Advised testing (to be paid for)

Extraflame advises a functional testing to be carried out by an Extraflame Authorised Technical Assistance Centre, which will supply all information necessary for correct usage.

SERVICE UNDER WARRANTY

The service request must be forwarded to the vendor.

RESPONSIBILITY

EXTRAFLAME S.p.A. shall not be liable for any direct or indirect damage caused by or depending on the product.

COMPETENT COURT

For any controversy, the competent court shall be the court of Vicenza, Italy.

Extraflame

Stufe a Pellet

EXTRAFLAME S.p.A.

Via Dell'Artigianato, 10
36030 MONTECCHIO PRECALCINO
Vicenza - ITALY
Tel. 0445/865911
Fax 0445/865912

<http://www.lanordica-extraflame.com>

E-mail: info@extraflame.com

This document is available at www.extraflame.it/support

004275259 - INGLESE
Manuale utente ventilate
REV 017 04.03.2009