

PELLET STOVES

Instruction Manual

INSERTO COMFORT MINI

Congratulations! You are now the owner of an EXTRAFLAME stove!

The **EXTRAFLAME** pellet stove is an ideal heating solution. It utilises the most advanced technology and is manufactured to the highest standards with a contemporary design, allowing you to enjoy the ambience and warmth of a natural flame in complete safety.

This manual tells you how to use your stove correctly. Please read the entire manual carefully before using your stove.

IMPORTANT

Make sure that the dealer completes the following box with the details of the authorised specialist who will help you if you have any problems in using your new pellet stove.

AUTHORISED SPECIALIST	
Company	_____
Full name	_____
Address	_____ No. _____
Postal Code	_____ City _____
TEL.	_____ FAX _____

All Extraflame products are manufactured according to the following directives:

- **89/106 EEC (CPD)** *construction materials*
- **73/23 EEC (LVD)** *electrical safety*
- **98/37 EEC** *machinery*
- **2004/108 EEC (EMC)** *electromagnetic compatibility*

And the following standards:

- **prEN14785**
- **EN60335.1 EN50165 EN50366**
- **EN292 EN294**

EN55014.1 EN55014.2 EN61000-3-2 EN61000-3-3



Contents

1	PRECAUTIONS AND SAFETY	5
2	TECHNICAL SPECIFICATIONS	6
3	WHAT ARE PELLETS?	7
3.1	Pellet storage	7
4	SAFETY DEVICES	8
4.1	Warm air blower breakdown	8
4.2	Fume exhauster breakdown	8
4.3	Pellet feed motor breakdown	8
4.4	Lighting failure	8
4.5	Temporary power failure	8
4.6	Electrical safety	8
4.7	Exhaust system safety	8
4.8	Pellet overheating safety	8
5	ASSEMBLY AND INSTALLATION INSTRUCTIONS	9
5.1	Glossary	9
5.2	Installation	10
5.2.1	Connection to the exhaust venting system	11
5.2.2	Chimney or single flue	12
5.2.3	Connection to the flue and combustion product exhaust venting	14
5.2.4	Chimney cap	14
5.2.5	Connection to external air intakes	15
5.2.6	Insulation, trims, facings, and safety precautions	15
5.2.7	National, regional, provincial and municipal laws	15
6	MINI COMFORT INSTALLATION	16
7	REMOTE CONTROL OPERATION	21
7.1	General description	21
7.2	Keypad	21
7.3	Display	22
8	USING THE INSERT	23
9	LIGHTING	23
10	INSERT OPERATION	24
10.1	Normal operation	24
10.2	Shutdown	24
11	USER MENUS	25
11.1	Set Temperature	25
11.2	Set Clock	25
11.3	Set Timer	26
11.4	Day/Night	28
11.5	Pellet Feed	29
11.6	Language	30
11.7	Table of display messages	31
12	EXTERNAL THERMOSTATS	33
12.1	Mechanical thermostat (optional)	33
12.2	Installing a mechanical thermostat (optional)	34
12.3	Mechanical thermostat operation	34
12.4	Mechanical thermostat operation with energy saving (Stby)	34
13	WIRING DIAGRAM	35
14	CLEANING	36
14.1	Chimney connection	37
15	BURN POT PARTITION	38
16	WARRANTY	39
17	QUALITY CONTROL	41

1. PRECAUTIONS AND SAFETY

The stoves manufactured in our factory are built with the maximum dedication to the individual components so as to protect both the user and the installer from accidents. Authorized personnel are therefore advised to pay special attention to the electrical connections after any servicing operation on the product, especially with regard to the stripped part of the wires, which must not protrude in any way from the terminal block to prevent possible contact with the live parts of the wire.

Installation must be carried out by authorized personnel, who must issue the purchaser a declaration of compliance of the system. The purchaser shall assume responsibility for the definitive installation and consequent proper operation of the product installed. Extraflame S.p.A. may not be held responsible in the event of failure to observe these precautions.

This instruction manual constitutes an integral part of the product. It must always accompany the appliance, also when it is transferred to another owner or user or moved to another location. If the manual gets damaged or lost, ask your local service centre for another copy.

This stove must only be used for the applications for which it was expressly designed.

The manufacturer declines any responsibility, contractually or extra-contractually, for any damage caused to persons, animals or property by errors in installation, adjustment, and maintenance, or by improper use.

After removing the packaging, check to make sure that the contents are intact and complete.

If this is not the case, contact the vendor from whom the appliance was purchased.

The electrical components of the stove must only be replaced by an authorized service centre.

General stove maintenance must be carried out at least once a year, scheduled sufficiently in advance with the service centre.

The following safety precautions must be observed:

Do not allow the stove to be used by unattended children or disabled persons.

Do not touch the stove if you are bare-footed or if parts of your body are wet or damp. Modifying the safety or adjustment devices without the manufacturer's approval or instructions is forbidden.

Never pull, detach, or twist the electrical cables coming out of the stove, even if it is disconnected from the electrical power.


Do not plug or reduce the size of the air vents of the room in which the stove is installed. The air vents are critical for correct combustion.

Keep the packaging materials out of the reach of children and unattended disabled persons.

2. TECHNICAL SPECIFICATIONS

	Unit of measurement	Mini Comfort Insert
Height	mm	1522
Width	mm	950
Depth	mm	800
Weight	kg	373
Exhaust pipe diameter	mm	80
Max. heating volume	m ³	180
Total power (heating power)	kW/h	3.0 - 9.4
Water heating power	kW/h	/
Pellet consumption per hour	kg/h	0.8 - 2.0
Absorbed electrical power	W	25 - 100
Lighting power	W	+280
Power supply	V, Hz	230, 50
Hopper capacity	kg	~32
Water in/out pipe diameter	"	/

All data are indicative and not binding. The manufacturer reserves the right to make technical modifications for improving the product.

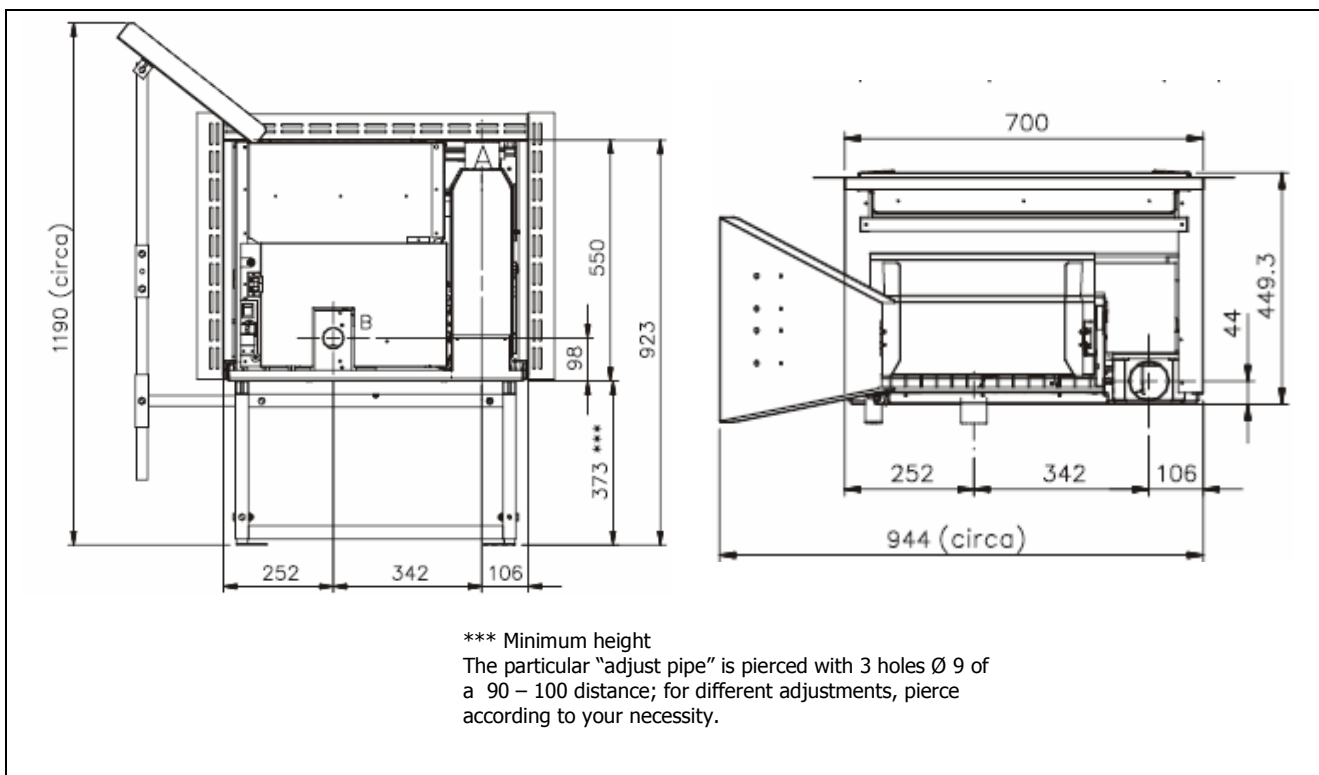

3. WHAT ARE PELLETS?

Pellets are made by applying very high pressure to sawdust; i.e. the residue of raw timber (without paint) produced by sawmills, carpentry works and other activities involved in processing wood.

This type of fuel is completely environmentally friendly, as no binders of any kind are used to keep it compact. In fact, the compactness of the pellets over time is guaranteed by lignite, a natural substance found in the wood itself.

As well as being an environmentally friendly fuel, since wood residues are exploited to the maximum, pellets also have technical advantages.

While the heating power of wood is 4.4 kW/kg (with 15% humidity, after about 18 months seasoning), the power of pellets is 5.3 kW/kg.

The density of the pellet is 650kg/m³ and the water content is 8% of its weight. For this reason, pellets do not need to be seasoned to obtain a sufficient heating yield.

Pellet diameters range from a minimum of 5 mm to a maximum of 8 mm, though Extraflame recommends using 6 mm pellets.




3.1 Pellet storage

To guarantee problem-free combustion, the pellets must be stored in a dry place.

WARNING

THE USE OF POOR QUALITY PELLETS OR ANY OTHER MATERIAL MAY DAMAGE THE YOUR STOVE AND MAY LEAD TO THE INVALIDATION OF THE WARRANTY AND THE RELATED RESPONSIBILITIES OF THE MANUFACTURER.

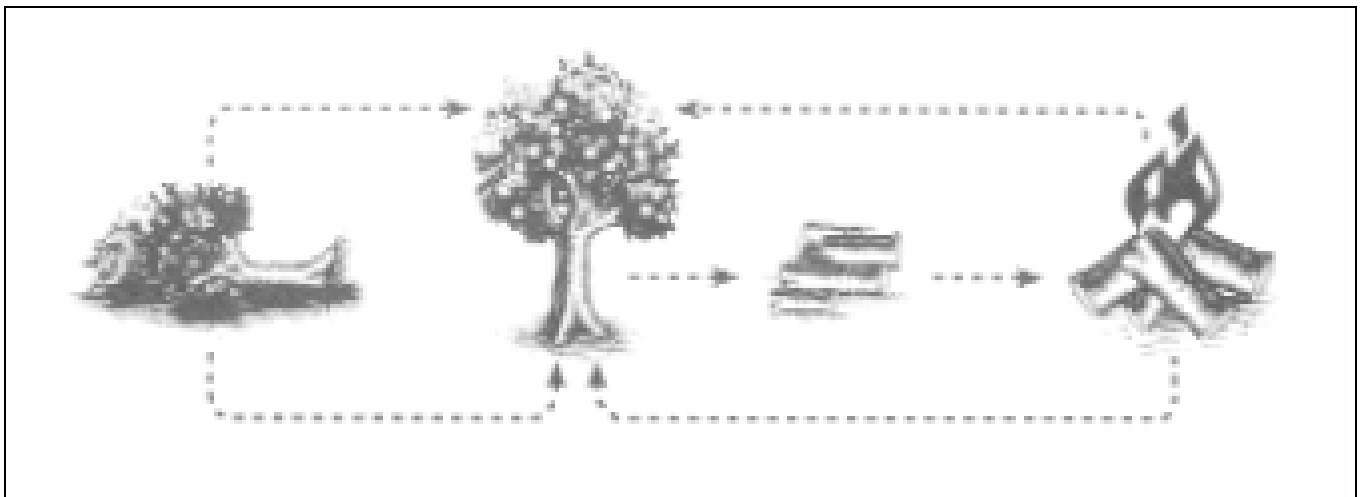

4. SAFETY DEVICES

4.1 Warm air blower breakdown

If the blower stops for any reason, the stove automatically shuts down to prevent overheating.

4.2 Fume exhauster breakdown

If the exhauster stops, the electronic unit immediately prevents pellet feeding.

4.3 Pellet feed motor breakdown

If the motor stops, the stove continues to operate until the minimum cooling level is reached.

4.4 Lighting failure

If no flame develops during the lighting stage, the stove display shows "NO ACC". If you attempt to light the stove again, the display shows "ATTE" which means "WAIT". **This function reminds you that before lighting the stove, you must be sure that the burn pot is free of dirt and debris.**

4.5 Temporary power failure

The appliance will re-light automatically after a brief power failure. When the power goes off, the stove may emit a minute quantity of smoke inside the house for a period of 3 to 5 minutes.

THIS DOES NOT POSE ANY SAFETY RISK.

4.6 Electrical safety

The stove is protected against violent power swings by a master fuse on the rear of the stove (2A 250V delayed).

4.7 Exhaust fume safety

If the exhaust system fails, an electronic pressure switch stops the stove and an alarm is signalled.

4.8 Pellet overheating safety

In case of overheating inside the pellet hopper, this safety device blocks stove operation; resetting is manual and must be performed by an authorized technician.

5. ASSEMBLY AND INSTALLATION INSTRUCTIONS

The installation must comply with:

UNI 10683 (2005) heat generators fed with wood and other solid fuels: installation.

The chimneys must comply with:

UNI 9731 (1990) chimneys: classification according to thermal resistance.

UNI 9615 (1995) calculation of the internal dimensions of the chimneys with single connection.

UNI 7129 point 4.3.3 provisions, local rules and prescriptions of the fire brigade.

UNI 1443 (2005) chimneys: general requirements.

UNI 1457 (2004) chimneys: internal ducts in terracotta and ceramics.

5.1 Glossary

CLOSED HEARTH DEVICE

Heat generator that can only be opened to load fuel during use.

BIOMASS

Material of organic origin, excluding the material incorporated in geological formations and fossilised.

BIOFUEL

Fuel produced directly or indirectly from biomass.

FLUE or CHIMNEY

Vertical duct for collecting and expelling combustion products from a single appliance at a suitable height from the floor.

EXHAUST CHANNEL OR PIPE

Duct or connecting element between the heat generating device and the chimney for extracting the combustion products.

INSULATION

The series of measures taken and materials used to prevent heat transmission through a wall dividing rooms at different temperatures.

CHIMNEY CAP

Device located at the top of the chimney that facilitates dispersion of the combustion products in the atmosphere.

CONDENSATE

Liquid products that form when the temperature of the combustion gas is lower than or equal to the dew point of the water.

HEAT GENERATOR

Device that permits the production of thermal energy (heat) by the rapid transformation of the chemical energy of the fuel by means of combustion.

AIR LOCK

Mechanism for modifying the dynamic resistance of the combustion gasses.

EXHAUST VENTING SYSTEM

A system for fume exhaust venting that is independent from the appliance, composed of a pipe or channel, chimney or single flue, and chimney cap.

FORCED DRAUGHT

Air circulation by means of a fan driven by an electric motor.

NATURAL DRAUGHT

Draught resulting in a chimney/flue due to the difference in the volume mass existing between the (hot) fumes and the surrounding atmospheric air, without any mechanical suction aid installed inside or on top of it.

RADIANCE AREA

Area immediately adjacent to the hearth in which the heat produced by combustion is diffused; this area must not contain any objects made of combustible material.

REFLUX AREA

Area in which the combustion products come out from the appliance towards the room in which it is installed.

5.2 Installation

Before carrying out installation, it is necessary to check the positioning of the chimneys, flues or exhaust terminal ducts of the appliance, keeping in mind the following:

- Installation prohibitions
- Legal clearances
- Limitations set forth by local administrative regulations or specific regulations of the authorities.
- Common limitations deriving from building regulations, and easement or contract regulations.

Admissible installations

In the room in which the heat generator is to be installed, any existing or installed appliances must be airtight to the room and must not cause depression in the room with respect to the external environment.

Appliances used for cooking foods and the related hoods without extractor can only be installed in rooms used as kitchens.

Prohibited installations

The room in which the heat generator is to be installed must not contain any of the following devices, either pre-existing or installed:

- Hoods with or without extractor;
- Ventilation ducts of the collective type.

Should these devices be located in adjacent rooms communicating with the installation room, it is forbidden to use the heat generator simultaneously where there is the risk that one of the two rooms may be subject to depression with respect to the other.

5.2.1 Connection to the exhaust venting system

Exhaust channel or pipe

For the assembly of the exhaust channels it is imperative to use non-flammable materials that are resistant to combustion products and any condensates.

It is forbidden to use flexible metal pipes and asbestos cement for connecting the stove to the flue, also for pre-existing exhaust channels.


There must be continuity between the exhaust channel and the flue so that the flue does not lean on the stove.

The exhaust channels must not pass through rooms in which the installation of combustion devices is forbidden.

The assembly of the exhaust channels must be carried out in such a way as to ensure that they are airtight for the operating conditions of the appliance, as well as to limit the formation of condensates and prevent them from being conveyed towards the appliance.

The assembly of horizontal sections must be avoided where possible.

Where roof or wall exhaust outlets have to be reached that are not coaxial in relation to the exhaust outlet from the appliance, the direction changes must be made using open elbows no greater than 45° (see figures below).

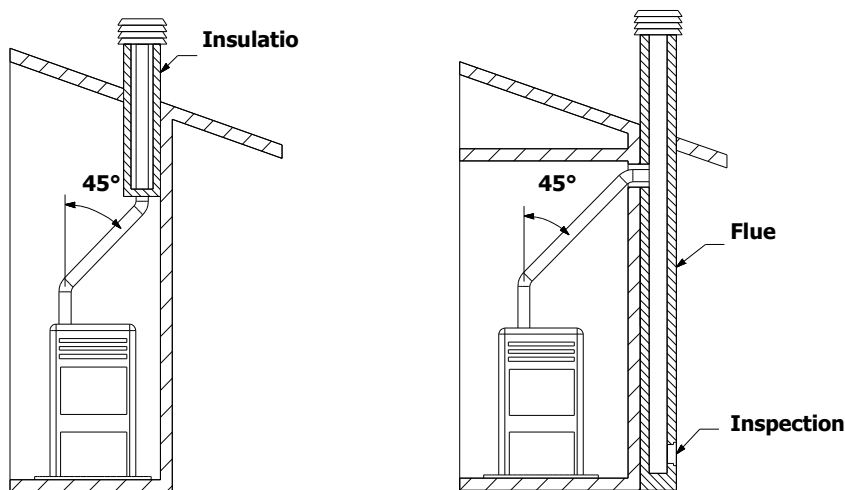

For heat generating devices equipped with an electric exhaust fan, i.e. all products made by Extraflame, it is necessary to observe the following instructions:

- Horizontal sections must have a minimum slope of 3% upwards.
- The length of the horizontal section must be as short as possible, and in any case no greater than 3 meters.
- No more than four direction changes may be used, including the one resulting from the use of the "T"-element. (When four bends are used, use double wall piping with a 100 mm diameter.)

In any case, exhaust channels must be sealed in relation to combustion products and condensates, as well as insulated, if they pass outside the installation room.

It is forbidden to use elements in counter-slope.

The exhaust channel must allow soot recovery and cleaning using a swab.


The exhaust channel must have a constant cross-section. Any changes in cross-section are allowed only at the flue connection.

It is forbidden to run other air feed channels or piping for utilities inside the exhaust channels, even if they are oversized. It is also forbidden to fit manual draught adjustment devices on the forced draught appliance.

5.2.2 Chimney or single flue

The chimney or flue must meet the following requirements:





- be airtight to combustion products, waterproof and properly insulated according to the usage conditions;
- be made of materials suitable to resist normal mechanical stress, as well as heat and the action of combustion products and any condensates;
- have a predominantly vertical layout with deviations from the axis no greater than 45°;
- be situated at a proper distance from combustible or flammable materials by means of an air gap or suitable insulation material;

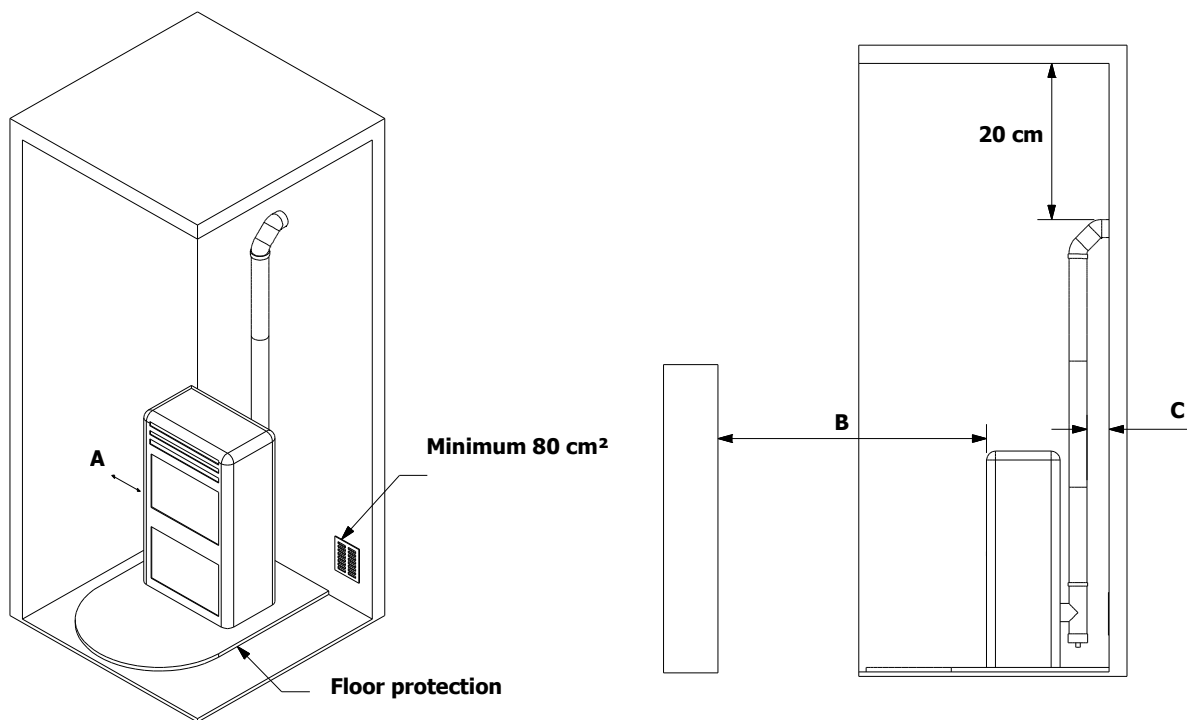

REFERENCES	Flammable objects	Non-flammable objects
A	200	100
B	1500	750
C	200	100

- preferably have a round internal section: square or rectangular sections must have rounded edges with radius no less than 20 mm;
- have a constant, free and independent internal section;
- have rectangular sections with a maximum ratio between sides of 1.5.

The exhaust duct should be equipped with a chamber for the collection of solid materials and any condensates located below the mouth of the exhaust channel, so that it is easy to open and inspect from the airtight hatch.

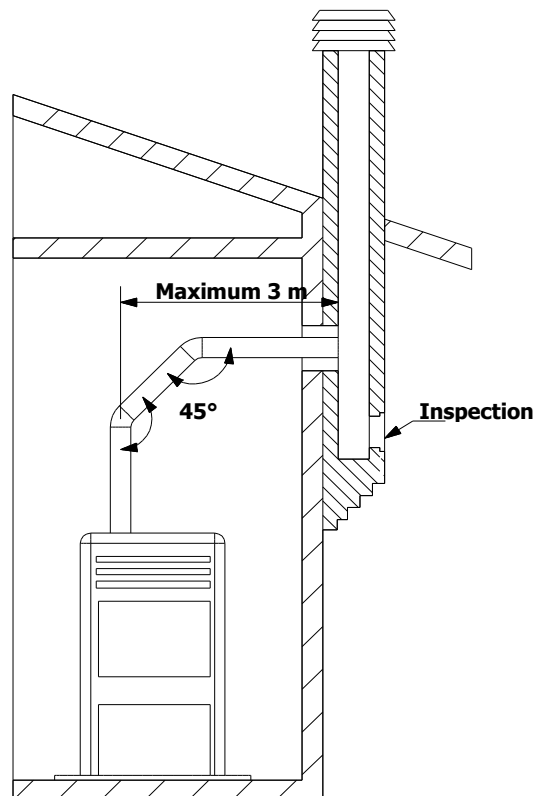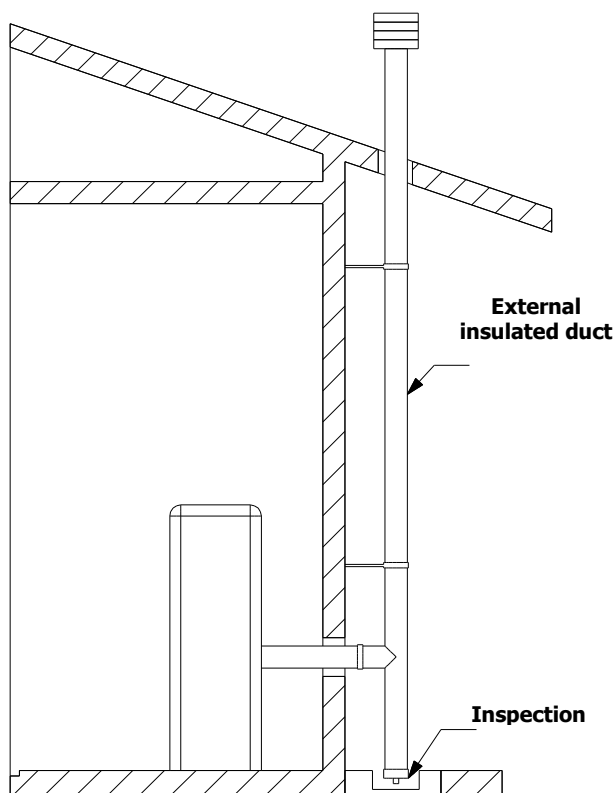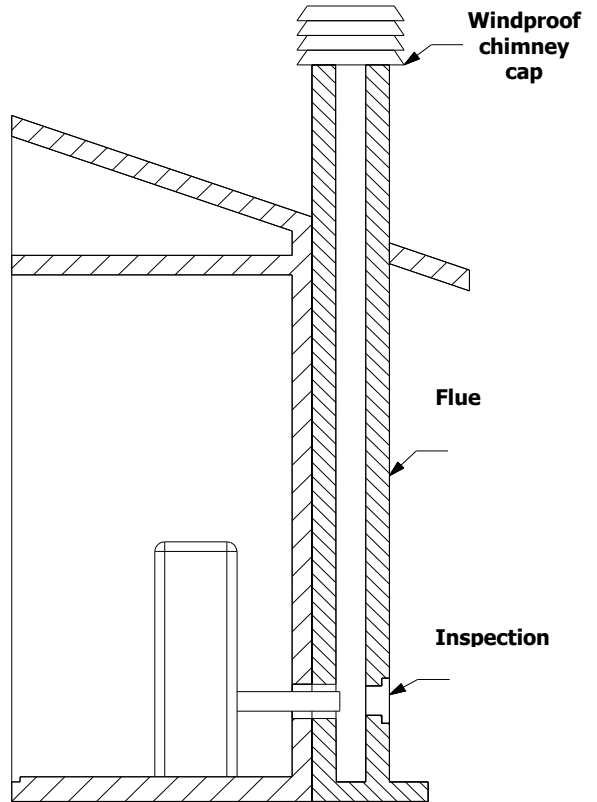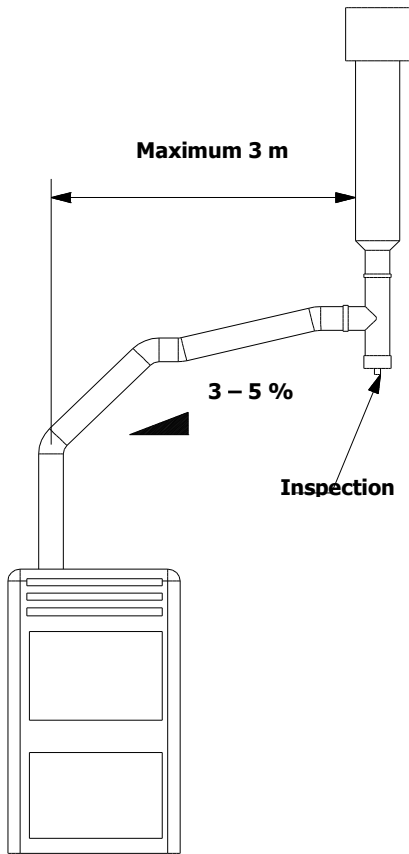

5.2.3 Connection to the flue and combustion product exhaust venting

The connection between the appliance and the flue must only receive the discharge from a single heat generator.



Direct discharge towards enclosed areas, even when roofless, is forbidden.

Direct discharge of combustion products must take place on the roof and the exhaust duct must have the features set forth in the section "*Chimney or single flue*".

5.2.4 Chimney cap

The chimney cap must meet the following requirements:

- have an internal section equivalent to that of the chimney;
 - have a useful outlet section no less than twice the internal section of the chimney;
 - be constructed in such a way as to prevent the penetration of rain, snow and foreign bodies into the chimney, as well as to assure the discharge of the combustion products also in the presence of winds coming from any direction and at any angle.
 - be positioned in such a way as to assure proper dispersion and dilution of the combustion products and, in any case, outside the reflux area in which the formation of counter-pressure is most likely to occur. This area has different sizes and shapes depending on the slope of the roof; therefore, it is necessary to use the minimum heights indicated in the figures below.
- The chimney cap must not have any mechanical suction devices.

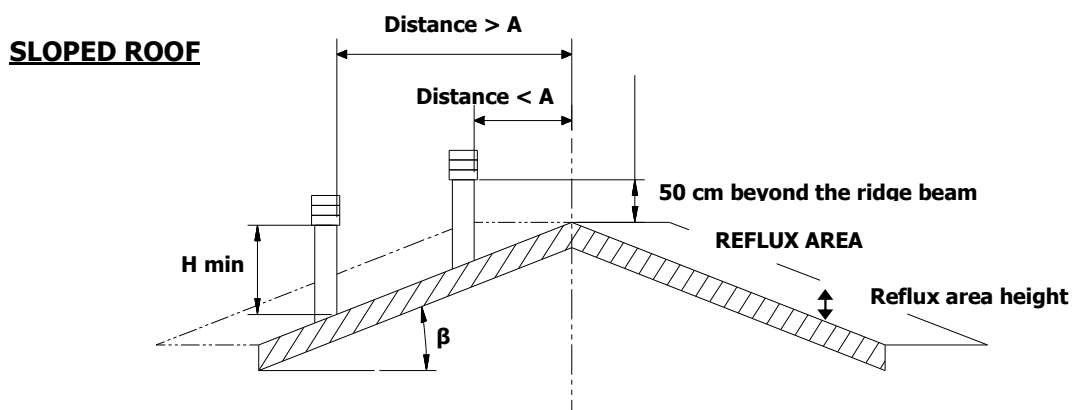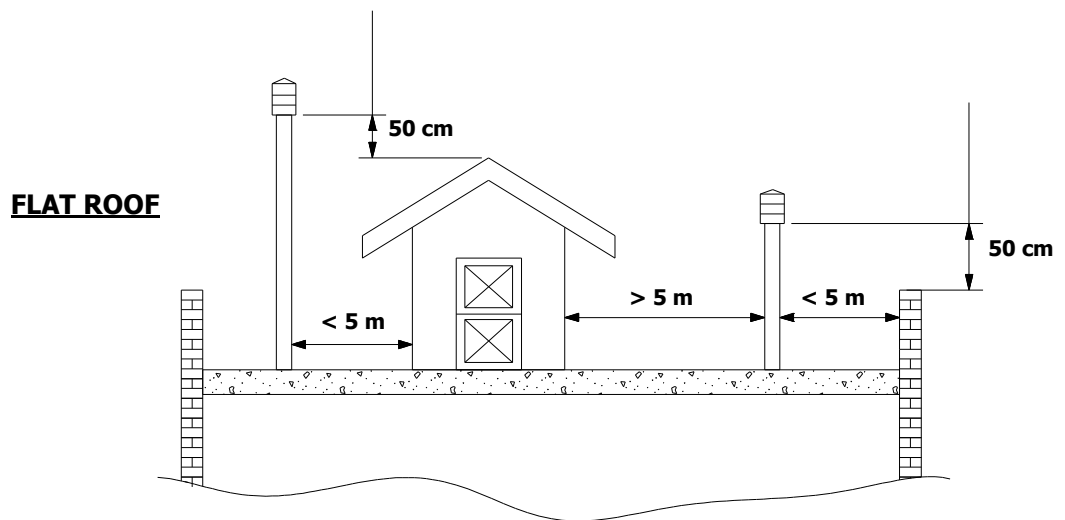

Roof slope β [°]	Horizontal width of the reflux area from the axis of the ridge beam A [m]	Minimum height of the outlet from the roof H min = Z + 50 cm [m]	Reflux area height Z [m]
15	1.85	1.00	0.50
30	1.50	1.30	0.80
45	1.30	2.00	1.50
60	1.20	2.60	2.10

5.2.5 Connection to external air intakes

To ensure correct operation, the appliance must have sufficient air available by means of external air intakes, which must meet the following requirements:

- a) They must have a total free section of at least 80 cm².
- b) They must be protected by a grate, metal mesh, or other suitable protection provided that it does not reduce the minimum section as per point a) and that it is positioned in such a way as to prevent the intakes from being obstructed.

If the combustion air is collected directly from the outside by means of a pipe, it is necessary to fit a downward bend or a wind hood on the outside. In addition, no grating or similar device should be positioned. (Extraflame S.p.A. suggests creating an air intake directly communicating with the installation room, even if air is collected from outside by means of a pipe).

Air inflow can also be obtained from a room adjacent to the installation room, provided that the flow can occur freely through permanent openings communicating with the outside.

The adjacent room must not be subject to depression with respect to the outside as a result of the opposing draught caused by the presence of another utility device or suction device in this room. In the adjacent room, the permanent openings must meet the requirements described above. The adjacent room cannot be used as a garage, storage area for combustible material, or for activities involving fire hazards.

5.2.6 Insulation, trims, facings, and safety precautions

The facings, no matter what type of material they are made of, must constitute a self-bearing structure with reference to the heating assembly and not in contact with it.

The beam and the trims in wood or combustible materials must be positioned outside of the radiant area of the hearth or be properly insulated.

If the space above the heat generator has coverings made of combustible or heat-sensitive material, a protective membrane made of non-combustible insulating material must be placed between it and the generator.

All elements made of combustible or flammable material, such as wooden furnishings, curtains, etc., that are directly exposed to the radiance of the hearth must be placed at a safe distance.

5.2.7 National, regional, provincial and municipal laws

All the national, regional, provincial and municipal laws of the country where the appliance has been installed must be taken into consideration.

6. MINI COMFORT INSERT INSTALLATION

The Maxi Comfort insert is supplied with a metal sliding base that enables it to be installed in an existing fireplace.

The base allows you to slide out the insert easily for maintenance and cleaning at the end of the year. If you do not already have a fireplace, you can build one using the insert support pedestal (optional kit), which is designed to secure the insert to the floor.

Description of the components:

- Sliding base
- Guide rails
- Exhaust pipe
- Primary air intake pipe
- Power outlet
- Adapter frame

Fitting with sliding base

Take the sliding base and place it in the existing fireplace.

Using chalk, mark the base fixing holes on the floor of the fireplace.

Drill the holes for 8 mm steel screw anchors.

Drill a 60 mm hole in correspondence with the air intake.

N.B. The air intake must be made outside the fireplace, because it must not draw in overheated air.

Provide a power outlet on the rear of the insert, so that the plug can be reached easily once the installation is complete.

Fix the base using the attachment screws.

Make the connection to the exhaust outlet and air intake, following the instructions previously described.

Then tilt the insert so that the wheels fit into the guide rails and slide it in until the exhaust auger coupling is completely inserted in the exhaust conveyor box.

Finally, open the fire door and use the socket wrench provided to turn the screw in the lower left-hand corner clockwise.

To check that the insert is correctly coupled with the base, connect the plug to the power outlet: the display should light up.

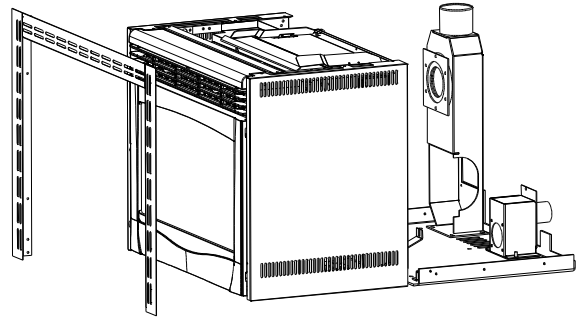


Fig. 1

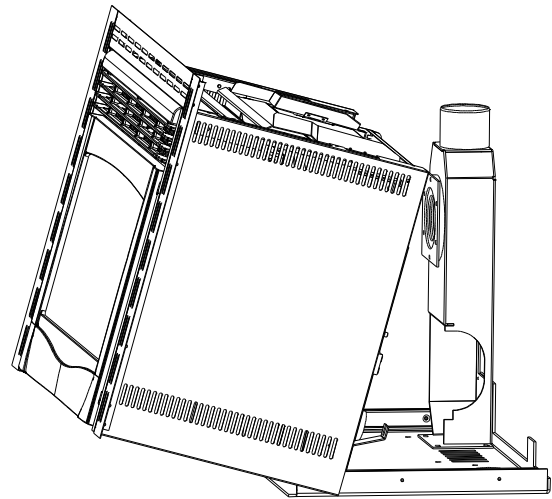


Fig. 2

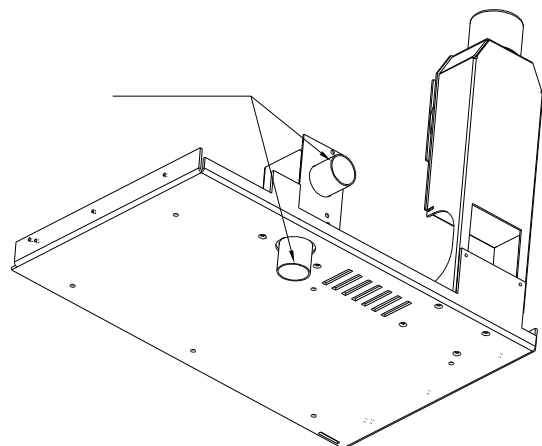


Fig. 3

N.B. The insert must stand at least 1 cm above the marble fire top of the facing.

Installation with pedestal (optional)

Description of components:

- Maxi Comfort insert
- Pedestal adjustable in height
- Side feeding hopper
- Adjustable hopper support

Installation with pedestal

Position the base in the desired point and adjust to the desired height using the feet (the bolts are located on the four outer edges of the pedestal at the bottom).

Provide a power outlet on the rear of the pedestal that will be easy to reach once the installation is complete.

Fix the pedestal to the floor using strong steel screw anchors 8 mm diameter.

Fix the sliding base to the frame using the bolts.

Connect the exhaust outlet and air intake as described in the previous section.

Then tilt the insert so that the wheels fit into the guide rails, slide it until the exhaust auger coupling is completely inserted in the exhaust conveyor box. Then use the socket wrench provided to turn the screw anticlockwise.

To check that the insert is correctly coupled with the base, connect the plug to the power outlet: the display should light up.

Fit the hopper support as shown in Fig. 10.

Insert the support in the coupling provided.

N.B.: When using our pedestal, it is necessary to create an inspection window in the chimney that allows you to check the pellet level in the hopper while filling it.

N.B. The hopper support can only be fitted on the right-hand side of the insert.

Adjust the height and angle of the hopper according to the fireplace to be built.

N.B. The insert must stand at least 1 cm above the marble fire top of the facing.



Fig. 4

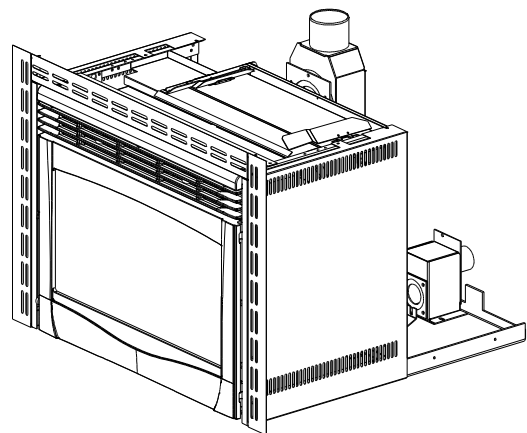


Fig. 5

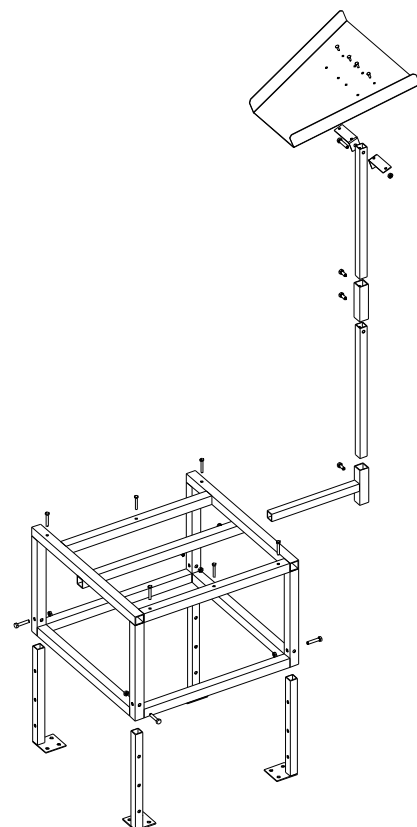


Fig. 6

Extracting the insert

The Comfort insert has to be extracted to carry out routine maintenance (cleaning the ash pipe at the end of the year) or special servicing (replacing mechanical parts in the event of damage).

N.B. These operations must be carried out by an authorized technician, with the stove switched off and the plug disconnected.

To extract the insert, proceed as follows:

1. Open the fire door and use the socket wrench provided to turn the screw in the lower left-hand corner anticlockwise.
2. Using the pokers provided, pull the insert towards you until it blocks automatically.



Fig. 7

Fitting the frames

- Front frame
- Side frames

Attach the front frame to the two side frames. Fix the frames to the Comfort insert using self-tapping screws.

N.B. Any wooden beams situated above the insert must be protected using fireproofing material.

Frame assembly is important, as it allows correct air circulation in the insert and consequently the most efficient stove operation.


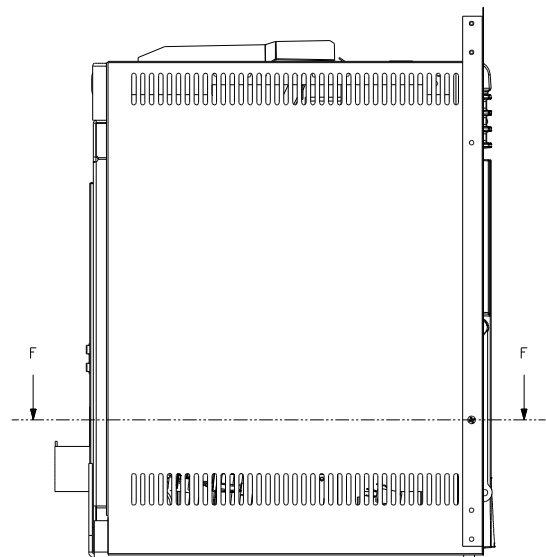


Fig. 8

The 2 side frames are fitted to the upper frame using 2 screws per side.

The remaining holes on the side frames are used for attaching the entire frame assembly to the sides of the insert using self-tapping screws.

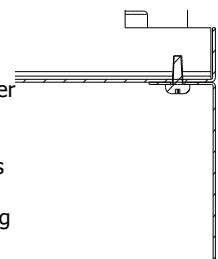

SECTION F - F

Fig. 9

Air circulation ducts

To ensure correct operation, it is necessary to create air intakes at the top of the fireplace. These can be made in the sides of the hood or on the front.

The following measurements must be respected:


Air intakes made on both sides of the fireplace: **Minimum measurement required 200 cm² per side.**


Air intake made on the front of the fireplace: **Minimum measurement required 400 cm² per side.**

For fresh air intake, it is very important to make one or more holes on the lower or side part of the facing.

N.B. This ventilation system is completely independent from the combustion air intake!!

These air circulation points must have a **minimum area of 750 cm².**

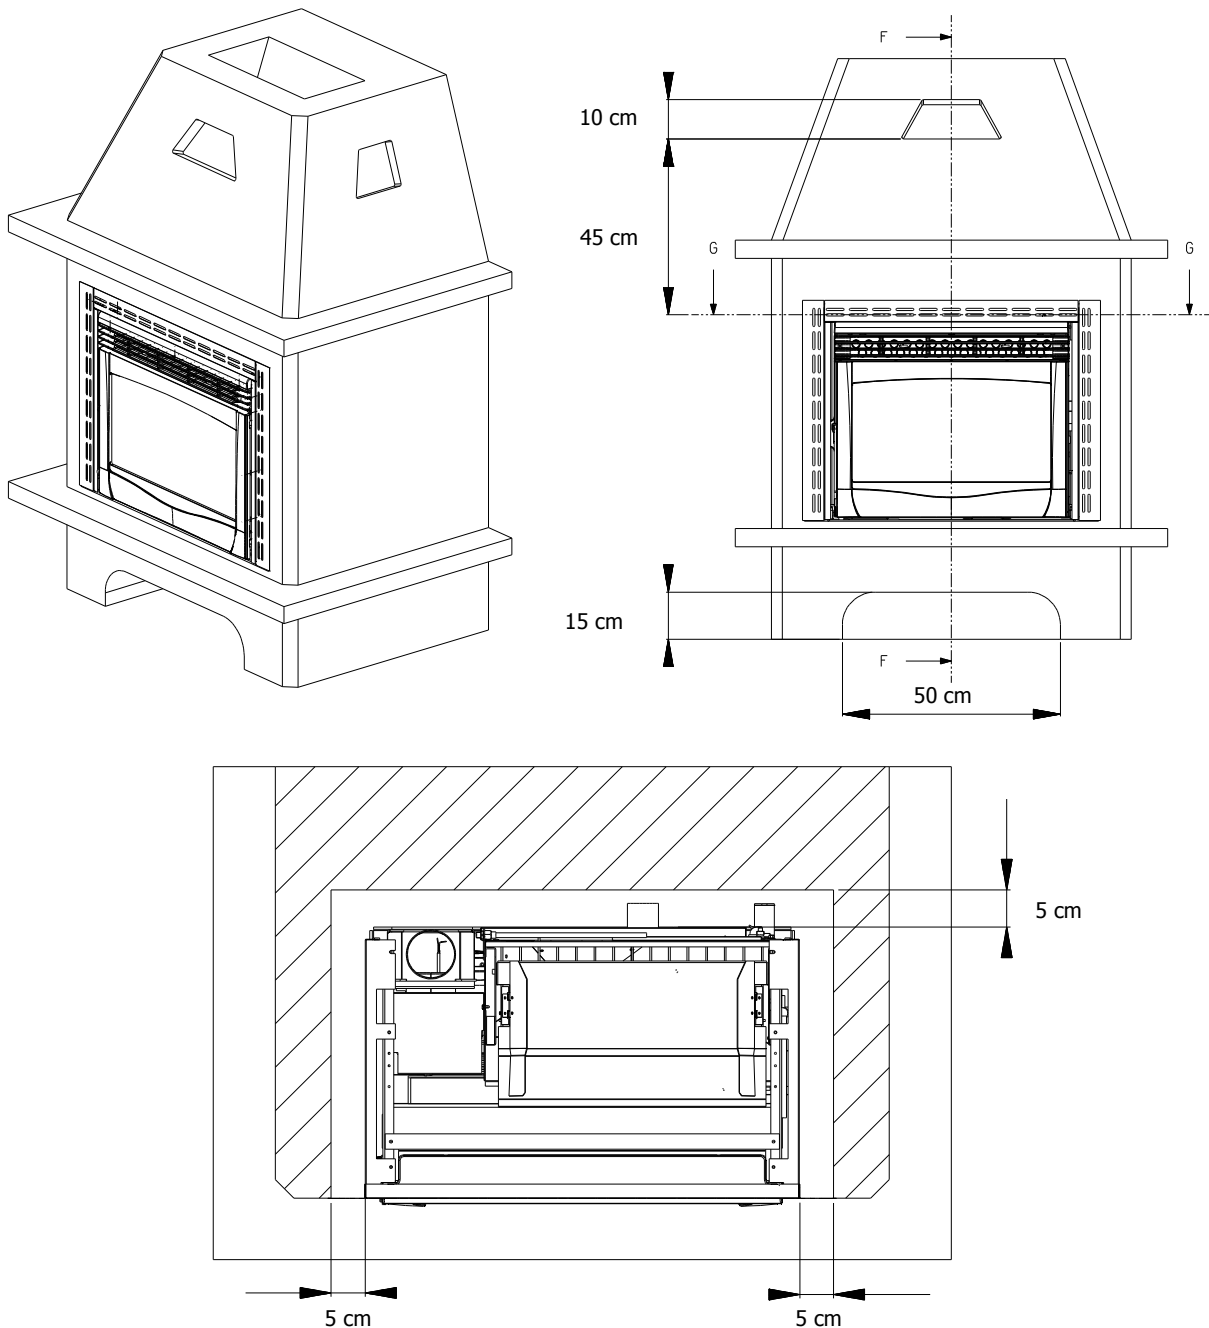

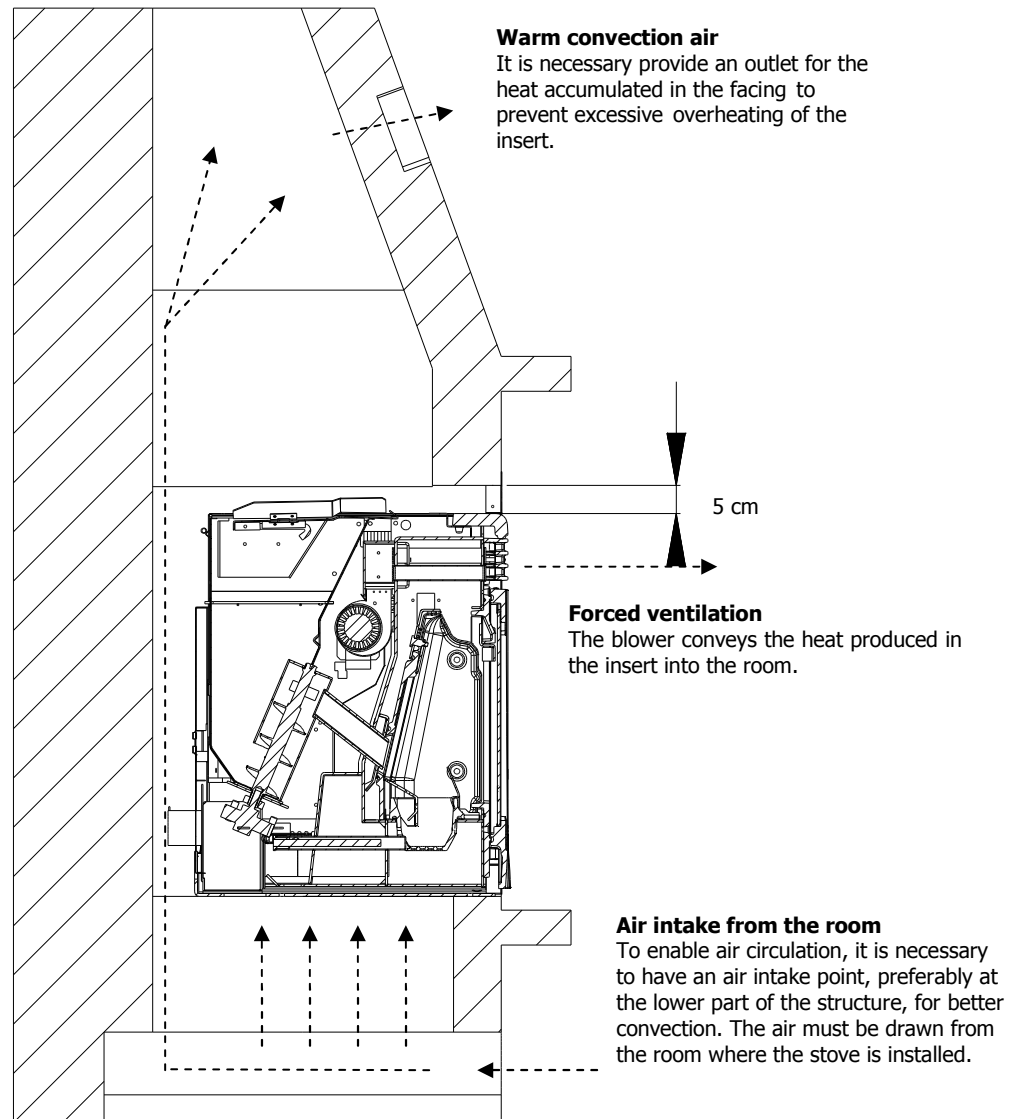

To ensure the correct and safe operation of the Comfort insert, when building the fireplace it is necessary to respect the clearances between the insert and the inner walls of the fireplace. Considering the measurements given in the technical specifications, you need to account for at least 50 mm of air space in the upper part and on the two sides.

NB: The exhaust outlet pipe must always be at a minimum distance of 5 cm from inflammable parts.

7. REMOTE CONTROL OPERATION

7.1 General description

The radio-frequency remote control has two-way communication with the electronic board, sending commands and displaying the operating status of the stove.

N.B.: Certain radio-frequency devices (e.g. mobile or cordless phones, etc.) can interrupt the communication between the remote control and the stove.

Selecting the operating frequency

During the first stove lighting, it is necessary to establish a communication frequency between the remote control and the stove.

With this procedure it is possible to select one of 4 possible coding methods: this also makes it possible to use more than one stove inside the same room without one interfering with the operation of the other. The coding procedure is as follows:

1. Disconnect the power supply from the stove.
2. Remove the batteries from the remote control.
3. Reposition the batteries in the remote control.
4. Press buttons 4 and 5 together for three seconds, until "SCEGLI UNITA" appears on the display.
5. Use button 4 or 5 to select the desired coding (from 0 to 3).
6. Power up the stove.
7. The stove will emit two acoustic signals: between the first and the second, press button 1 for 1 second. At this point, the display will show "EXTRAFLAME".

General characteristics

- The visual interface is given on an LCD display with 24 characters on 4 lines plus 16 bars.
- Transmission and reception capacity: 4 metres in free air space.
- Display of the operating status of the product
- Direct controls for switch-on/off, power setting change
- Weekly programmer setting
- Battery power supply (two 1.5 V AA batteries)
- Dimensions: 61 x 150 x 120 (D x L x W) mm.


7.2 Keypad

Button 1 – ON/OFF unblock

Pressing this button for two seconds enables the manual switch-on/off of the stove.

If the stove is in alarm status, and therefore blocked, the button is used for unblocking and subsequent passage to **OFF** status.

During the programming of the user parameters, it is used to exit and return to the previous menu.

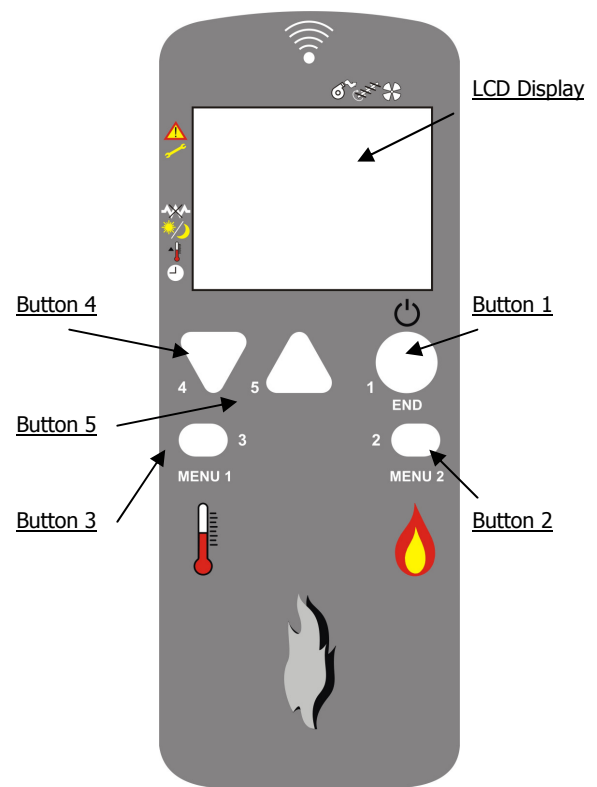

Buttons 4 and 5 – Parameter increase/decrease

On the main screen. These buttons are used for regulating the operating power of the stove from a minimum setting of 1 to a maximum of 5; this value is shown on the upper display. During modification of the user parameters, the buttons are used for increasing/decreasing the value of the parameter, which is shown on the first line of the display.

Menu 1 (3) and Menu 2 (2) buttons

These buttons are used for accessing and setting the user parameters.

7.3 Display


The display message changes in relation to the status of the stove, or the menu being display. In resting status, the display shows the following:

TIME: The current time is shown. The time is set within the *weekly programmer* (see SET CLOCK menu).

ROOM TEMPERATURE: Shows the current room temperature.

HEATING POWER: Indicates the operating power. It is set by the user during stove operation.

STOVE STATUS: Shows whether the stove is off or on.

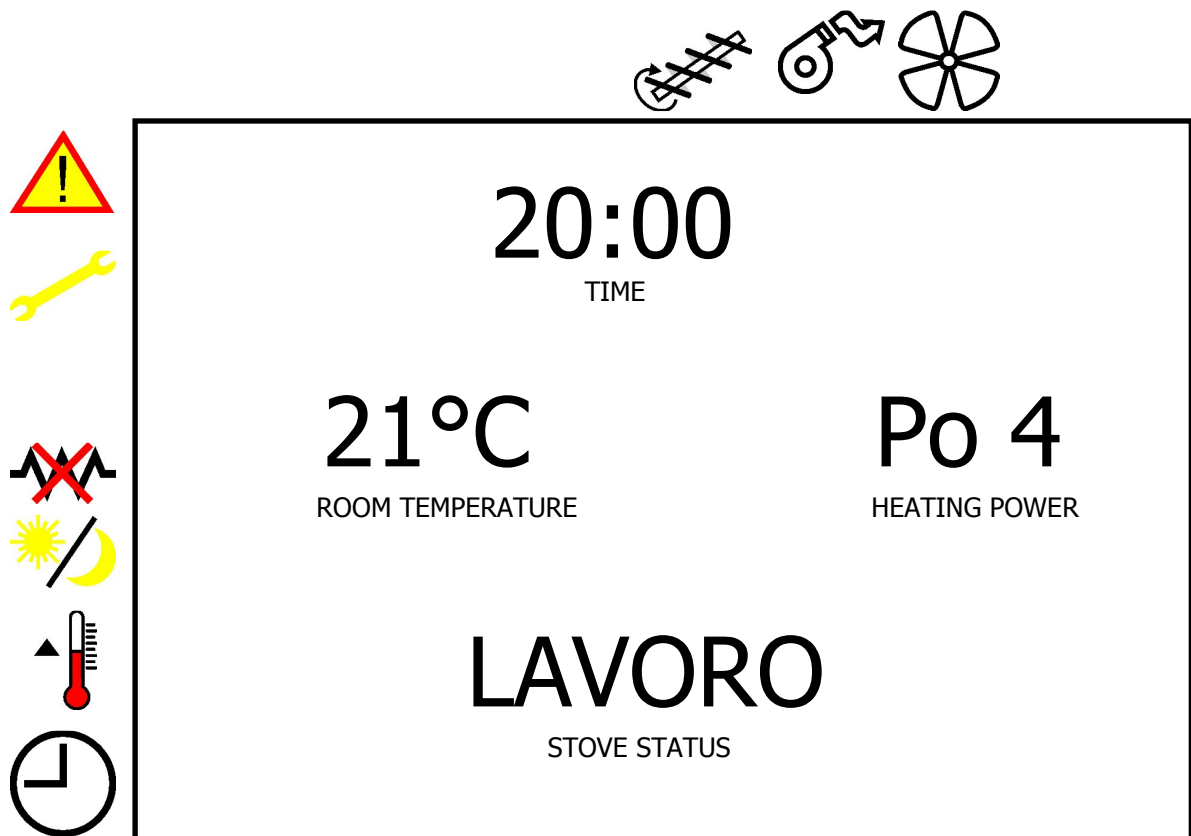

8. USING THE STOVE

The stove you have purchased uses pellets as fuel. This type of material is produced from natural waste from woodworking. By means of a special process, which does not require the use of any binders or additives, the shavings are compressed in industrial machines under high pressure and become solid wooden pellets. IT IS STRICTLY FORBIDDEN to burn any other material besides pellets in our stove.

Failure to respect these instructions will void all warranties and may jeopardise the safety of the appliance.

The first two or three times the stove is lit, the following recommendations should be observed:

- No children should be present, as the vapours emitted can be harmful for health. Adults, too, should not stay in the vicinity for very long.
 - Do not touch the surfaces, as they could still be unstable.
 - Air the room thoroughly several times.
 - The hardening of the surfaces is completed after several heating processes.
- 1-** This stove **must not** be used as a waste incinerator.

9. LIGHTING

1. Before proceeding, check to make sure that:
 - a) the hopper is loaded
 - b) the combustion chamber is clean
 - c) the burn pot is clean
 - d) the front door and the pellet drawer are closed
 - e) the power outlet is connected
 - f) the switch on the back of the stove is in position 1
2. Press button **1** for three seconds; display **D1** will show the message "**START**". During this stage, the stove carries out an automatic check on the efficiency of each single electrical component. When this cycle is completed, display **D1** shows the message "**ACCENSIONE 15**" (the number of minutes for which the stove attempts the lighting stage, decreasing by 1 every minute that passes). **NOTE:** *The first time the stove is used, even if the hopper is loaded with pellets, it is possible that the pellets are not distributed to the combustion chamber for the first 15 minutes because the worm screw for loading the pellets is empty. If the stove has not developed a flame after the fifteen minutes have elapsed, the display shows the message "**MANCATA FIAMMA**". In this case, press button 1 for three seconds until D1 shows the message "**OFF**". Then repeat steps 1 and 2.*
3. If steps 1 and 2 are carried out correctly, as soon as the flame develops the stove enters the start-up phase ("**AVVIAMENTO 07**").
4. After the start-up phase, the stove goes into normal operation: display **D1** shows the room temperature and **D2** shows the heat setting.

WARNING!

1. NEVER USE FLAMMABLE LIQUIDS FOR LIGHTING.

2. WHEN FILLING, DO NOT BRING THE SACK OF PELLETS INTO CONTACT WITH THE HOT STOVE.

N.B.: In the event of continued lighting failures, contact an authorised technician.

10. INSERT OPERATION

10.1 Normal operation

Once the stove is lit, you can adjust the heat setting using buttons **4** and **5**. Pressing button **4** decreases the heat setting and hourly pellet consumption; pressing **5** increases them. In addition to the feed rate, the room temperature can be set directly from the control panel. The stove adjusts itself automatically in relation to the warm air ventilation.

The contents of the hopper should be monitored to prevent the stove going out due to a lack of fuel.

ATTENTION!

1. The cover of the pellet container must always be kept closed except when loading fuel.
2. The sacks of pellets must be kept at least 1.5 metres away from the stove.
3. The hopper should always be kept at least half full.
4. Before refilling, make sure that the appliance is switched off.

10.2 Shutdown

Press button **1** for three seconds.

When the three seconds have elapsed, the stove automatically starts the shutdown stage, cutting off the pellet feed; the display will show "**PULIZIA FINALE**" (FINAL CLEANING).


Both the exhaust motor and warm air ventilation motor continue to run until the stove temperature has dropped sufficiently. When the exhaust motor stops, the display will show "**OFF**".

11. USER MENUS

The table below shows the various menus available to the user:

No.	Menu	Description
1	Set temperature	Menu for setting the temperature
2	Set clock	Menu for setting the current day and time
3	Set timer	Menu for setting the switch-on/off programmes
4	Day/Night	Menu for day/night temperature function
5	Pellet Feed	Menu for adjusting the pellet feed %
6	Set Language	Menu for selecting the language

The diagram below shows how the various user menus are accessed:

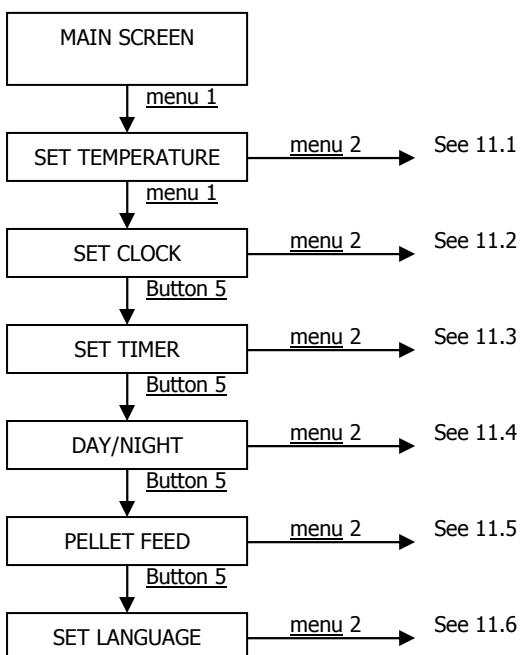

11.1 Set Temperature Menu

The temperature value can be changed at any time by the user. Press the **menu 1** button; the display shows "**SET TEMP AMBIENTE**". Then use buttons **4** and **5** to select the desired temperature value: the buttons enable the increase/decrease of the room thermostat value from a minimum of 07°C (the display shows **MIN**) to a maximum of 40°C (the display shows **MAS**). This value is shown on the first line of the display; the third and fourth lines show **SET TEMP AMBIENTE**.

When you have set the desired value, confirm with button **1**.

11.2 Set Clock Menu

This procedure is used for activating/disactivating the weekly programmer and setting the current time. The procedure can be carried out with the stove on or off, as follows:

1. Press the **menu 1** button → the display will show "**SET TEMP AMBIENTE**"
2. Press the **menu 1** button again → the display will show "**MENU SET OROLOGIO**"
3. Confirm with the **menu 2** button.

When you have entered the programming function, the display will show the following parameters:

Parameter 1 → CLOCK DAY

Used for setting the following values: "day1"... "day7" → use buttons **4** and **5** to set the current day of the week.

When the current day has been set, the weekly programmer function is automatically enabled.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 2 → CLOCK HOURS

Use buttons **4** and **5** to set the current hour.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 3 → CLOCK MINUTES

Use buttons **4** and **5** to set the current minutes.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

If you make an error in programming, exit with button 1 and repeat the steps described above.

11.3 Set Timer Menu

The weekly programmer enables you to set three heating periods over the course of the day, to be used for each day of the week. The timetables for switch-on/off must be consecutive within the same day, on a 24-hour basis (from 0 to 24), and not straddling more than one day.

e.g.: Switch-on 07.00 / switch-off 18.00 **OK**
 Switch-on 22.00 / switch-off 05.00 **WRONG**

The programming procedure can be carried out with the stove on or off, and involves the following steps:

1. Press the **menu 1** button → the display will show "SET TEMP AMBIENTE"
2. Press the **menu 1** button again → the display will show "MENU SET OROLOGIO"
3. Press button 5 → the display will show "MENU SET CRONO"
4. Confirm with the **menu 2** button.

When you have entered the programming function, the display will show the following parameters:

Parameter 0 → TIMER ON-OFF

Use buttons **4** and **5** to enable/disable the weekly programmer.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 1 → START PROGRAM 1

Use buttons **4** and **5** to set the start of the first time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 2 → STOP PROGRAM 1

Use buttons **4** and **5** to set the end of the first time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.
To return to the previous parameter, press the **menu 1** button.

Parameter 3 → DAYS ON 1

Used for setting which days of the week to enable/disable the time period set.

The procedure is as follows:

- a. button **5** → to scroll the days
- b. button **4** → to enable/disable (ON/OFF) the first time period for that day

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 5 → START PROGRAM 2

Use buttons **4** and **5** to set the start of the second time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 6 → STOP PROGRAM 2

Use buttons **4** and **5** to set the end of the second time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 7 → DAY ON 2

Used for setting which days of the week to enable/disable the time period set.

The procedure is as follows:

- c. button **5** → to scroll the days
- a. button **4** → to enable/disable (ON/OFF) the first time period for that day

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 8 → START PROGRAM 3

Use buttons **4** and **5** to set the start of the third time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 9 → STOP PROGRAM 3

Use buttons **4** and **5** to set the end of the third time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter A → DAY ON 3

Used for setting which days of the week to enable/disable the time period set.

The procedure is as follows:

- d. button **5** → to scroll the days
- a. button **4** → to enable/disable (ON/OFF) the first time period for that day

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

TO ENABLE/DISENABLE the weekly programmer, follow the procedure described at **parameter 1** of the *Set Clock Menu*.

Note: When the programmer is enabled, the corresponding LED lights up on the display (see *Table of Display Messages*).

Manual controls always have priority over the programming.

11.4 DAY/NIGHT MENU

The day/night temperature function makes it possible to switch the stove on/off automatically based on two selected temperatures.

This system enables you to select one temperature for daytime and one for night.

To access the parameters of the day/night temperature function, proceed as follows:

1. Press the **menu 1** button → the display will show "**SET TEMP AMBIENTE**"
2. Press the **menu 1** button again → the display will show "**MENU SET OROLOGIO**"
3. Press button 5 twice → the display will show "**MENU GIORNO NOTTE**"
4. Confirm with the **menu 2** button.

When you have entered the programming function, the display will show the following parameters:

Parameter A → DAY NIGHT

Use buttons **4** and **5** to enabling/disabling the day/night temperature function.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter b → DAY START

Use buttons **4** and **5** to set the day start/night end.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter c → DAY END

Use buttons **4** and **5** to set the day end/night start.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter d → MAX DAY TEMPERATURE

Use buttons **4** and **5** to set maximum temperature for the day period.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter E → MAX NIGHT TEMPERATURE

Use buttons **4** and **5** to set maximum temperature for the night period.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

When the stove switches off because the maximum temperature has been reached, the display shows "**doff**". The stove will switch on again automatically when the room temperature is **3°C** lower than the maximum temperature set.

Ex. Stove status → **doff**

Max. temperature set → **25°C**

When the room temperature goes below 22°C ($25 - 3 = 22^\circ\text{C}$), the stove will automatically start again.

N.B.: This only occurs when the stove is in "doff" status and not "SPENTO" (OFF) status.

Manual controls always have priority over the programming.

11.5 Pellet Feed Menu

If the stove has operating problems due to the quantity of pellets, you can adjust the pellet feed directly from the remote control.

Problems related to the quantity of pellets fall into one of two categories:

1. LACK OF PELLETS :

- a. The stove cannot develop a suitable flame, tending to burn very poorly even at high speeds.
- b. At the lowest speed, the stove tends to almost burn out, causing the stove to go into "**MANCANO PELLETT**" alarm status.
- c. When "**MANCANO PELLETT**" is displayed, there may still be some unburned pellets in the burn pot.

2. EXCESS PELLETS:

- a. The stove develops a very high flame even at low speeds.
- b. The flame tends to soil the stove window, darkening it almost completely.
- c. The burn pot tends to get incrustated, blocking the air intake holes, due to the excessive pellet load that is only partially burned.

N.B.: If this problem occurs just a few months after installation, check to make sure that the user is correctly carrying out the regular cleaning schedule described in the instruction manual.

The adjustment is made on a percentage basis, and therefore any change of this parameter leads to a proportional variation on all loading speeds of the stove.

To access the percentage adjustment of pellet feeding, proceed as follows:

1. Press the **menu 1** button → the display will show "**SET TEMP AMBIENTE**"
2. Press the **menu 1** button again → the display will show "**MENU SET OROLOGIO**"
3. Press button 5 three times → the display will show "**MENU REGOLA PELLETT**"
4. Confirm with the **menu 2** button.

When you have entered the programming function, the display will show the following parameters:

Parameter A → PELLETT FEED

Use buttons **4** and **5** to set the percentage increase/decrease at 5 point intervals (the parameter can be modified with a maximum scale from -50 to +50). When the adjustment has been made, press **menu 2** or **1** to confirm and exit.

Adjustment table

LACK OF PELLETS	Increase the percentage by 5 percent and try the stove with this new setting for at least half an hour. If the problem is reduced but not resolved, increase by a further 5 percent. Repeat this process until the problem is resolved. If the problem cannot be resolved, contact the service centre.
EXCESS PELLETS	Decrease the value by 5 percent and try the stove with this new setting for at least half an hour. If the problem is reduced but not resolved, decrease by a further 5 percent. Repeat this process until the problem is resolved. If the problem cannot be resolved, contact the service centre.

11.6 Language Menu

You can choose among the following languages available:

- ITALIAN
- ENGLISH
- FRENCH
- GERMAN

To access this menu, proceeds as follows:


1. Press the **menu 1** button → the display will show "**SET TEMP AMBIENTE**"
2. Press the **menu 1** button again → the display will show "**MENU SET OROLOGIO**"
3. Press button 5 **four** times → the display will show "**LINGUA**"
4. Confirm with the **menu 2** button.

Use buttons **4** and **5** to select the desired language and confirm with the **menu 2** button.










11.7 Table of display messages

INDICATIONS		
Display Message	Cause	Solution
ATTESA PULIZIA	An attempt is made to switch on a stove again when it has just been shut down (normal shutdown or caused by an alarm situation).	When the stove has just been shut down (normal shutdown or caused by an alarm situation), you have to wait until it is completely cold and then clean the burn pot. It is possible to re-start the stove only after having carried out this operation.
MAS	Room thermostat set at maximum value.	In this operating mode the stove no longer has a temperature level but is working manually with all 5 power levels. To exit this function, simply lower the room temperature by pressing button 2.
MIN	Room thermostat set at minimum value.	In this operating mode, the stove works only at the 1 st power level no matter what power is set. To exit this function, simply raise the room temperature by pressing button 3.
T ON	An external thermostat has been connected. The room thermostat probe is disconnected. The room thermostat probe is interrupted.	To exclude an external thermostat, just disconnect it. Any other restore operations must be carried out by an authorised technician.
STBY	The stove is off and on standby to be re-started.	In this mode, the stove can be switched on/off by means of a supplementary thermostat (see " <i>Mechanical thermostat with energy saving</i> "). To exclude this function, simply raise the room temperature by pressing button 3.
DOFF	The stove is off due to the " <i>Day/Night Temperature Function</i> " and on standby to be re-started.	To stop the stove from starting again due to the " <i>Day/Night Temperature Function</i> ", press button 1 and hold for three seconds, which switches the stove off. To disable this function completely, press button 4 and hold it down, then press button 5.
MANCA CAMPO	Lack of communication between remote control and stove.	Check the power supply of the stove. Carry out the procedure "Selecting the operating frequency" described in the manual. Remote control energy saving: press button 4 or 5 to restore correct operation. N.B.: Certain radio-frequency devices (e.g. mobile and cordless phones, etc.) may interrupt the communication between the remote control and the stove. Any other restore operations must be carried out by an authorised technician.
RAFFREDDAMENTO BLAC OUT	No power on the mains	When the shutdown cycle is completed, the stove will light again automatically.
PULIZIA BRACIERE	The automatic cleaning of the burn pot is in progress.	The automatic cleaning of the burn pot takes place at regular intervals of continuous operation. The automatic cleaning is not carried out when the stove is in power level 1 position.
PORTA APERTA	The fire door is open	Keep the door closed during normal operation.

ALARMS

Display Message	Cause	Solution
	Indicates the presence of an alarm	This indicator lights up when one of the alarms described below is in progress and is accompanied by the corresponding indication on display D1. To reset the alarm, press button 1 and hold for three seconds when the stove is completely cold.
VENTOLA FUMI	The exhaust motor is blocked. The speed control probe is faulty. No power supply to the exhaust motor.	All restore operations must be carried out by an authorised technician.
SONDA FUMI	The exhaust fume probe is broken. The exhaust fume probe is disconnected from the board.	All restore operations must be carried out by an authorised technician.
FUMI ELEVATI	The blower is faulty. Excessive pellet feed. No power supply to the fan.	Adjust the flow of pellets (see " <i>Pellet Feed Adjustment</i> "). Other restore operations must be carried out by an authorised technician.
DEPRESSIONE	The exhaust pipe is obstructed. The combustion chamber is dirty. The pressure sensor is faulty. The ash drawer is not closed properly. The door is not closed properly.	Check to make sure that the exhaust outlet and the combustion chamber are clean. Check to see if the drawer is closed properly. Check to see if the door is closed properly. Other restore operations must be carried out by an authorised technician.
MANCATA FIAMMA	The pellet hopper is empty. The spark plug is faulty or out of position. Inadequate pellet feed setting.	Check the level in the pellet hopper. Check the procedures described in " <i>Lighting</i> ". Adjust the flow of pellets (see " <i>Pellet Feed Adjustment</i> "). Other restore operations must be carried out by an authorised technician.
MANCATA FIAMMA BLAC OUT	No electricity during the lighting phase.	Press button 1 to switch off the stove and repeat the procedure described in " <i>Lighting</i> ".
MANCANO PELLETT	The pellet hopper is empty. Pellet feeding is insufficient. The feed motor still has to settle in. The gearmotor is not loading pellets.	Check the level in the pellet hopper. Adjust the flow of pellets (see " <i>Pellet Feed Adjustment</i> "). Other restore operations must be carried out by an authorised technician.
ATTESA PULIZIA + allarme	An attempt is made to reset an alarm while the stove is still cooling.	Whenever one of the alarms described above is tripped, the stove automatically shuts down. During this phase, any attempt to reset the alarm will be blocked, and the display will show the alarm and ATTESA PULIZIA in alternation. Resetting the alarm by pressing button 1 is only possible after the stove has completely shut down.
TEL -----	Display of the service centre telephone number.	When an alarm occurs, the type of alarm detected and the telephone number of the service centre flash on the display in alternation. If the number has not been entered, the display shows a series of dashes.

INDICATOR LIGHTS

LED indicator light	Meaning	Description
	<i>Weekly Programmer</i> function	This LED is on/off when <i>Weekly programmer</i> is on/ off. For all the settings regarding this function, see the section <i>Weekly programmer</i> .
	<i>Room Thermostat</i> function	This LED is on/off when the room temperature is lower/higher than the temperature set. To modify the temperature setting, use buttons 2 and 3 during normal operation.
	<i>Day/Night Temperature</i> function	This led is on/off when the <i>Day/Night Temperature</i> function is on/off. To enable/disable the <i>Day/Night Temperature</i> function, press button 4 and hold it down, then press button 5. For all settings related to this function, see the section <i>Day/Night Temperature Function</i> .
	Spark plug disactivation	This LED is on/off when the spark plug is active/inactive. To reactivate the spark plug, contact an authorised technician.
	Exhaust motor operation	This LED is on/off when the exhaust motor is running/not running.
	Pellet feed motor operation	This LED is on/off when the pellet feed motor is running/not running. During normal operation, this LED lights up intermittently.
	Blower operation	This LED is on/off when the blower is running/not running.
	Communication established between remote control and stove	Each time you press a button on the remote control, this LED should light up. If it stays on, it means that communication between the remote control and the stove is blocked. To reset remote control operation, contact an authorised technician.
	Not used	Not used

12. EXTERNAL THERMOSTAT

12.1 Mechanical thermostat (optional)

N.B.: Installation must be carried out by an authorized technician.

A thermostat can be placed in a room adjacent to the one in which the stove is installed. Just connect a mechanical thermostat (like those used for boilers) following the procedure described below. (We recommend positioning the optional thermostat at a height of 1.50 m above floor level.)

12.2 Installing a mechanical thermostat (optional)

N.B.: Installation must be carried out by an authorized technician.

1. Switch off the appliance using the master switch on the back of the stove.
2. Disconnect the plug from the power outlet.
3. Referring to the electrical wiring diagram, connect the two thermostat wires to the respective terminals on the back side of the stove, one red and one black.

12.3 Mechanical thermostat operation

1. Light the stove using button **1**.
2. Set the desired heating power using buttons **4** and **5**.
3. Use the **menu 1** button to go to the menu "SET TEMP AMBIENTE" and set on "**MIN**" using button **4**.
4. Set the desired room temperature on the external thermostat (e.g. 21 °C).

At this point, the external thermostat will control stove operation as follows:

- Thermostat with closed contact → the stove switches on and operates at the power set, and the display shows "**T ON**".
- Thermostat with open contact → the stove goes to the minimum power even if the display shows the previously set value; the display will then show "**MIN**".

12.4 Mechanical thermostat with energy saving, Standby function (Stby)

The Standby function is used to further reduce pellet consumption by switching off the stove when the desired temperature has been reached.


As the temperature drops, the stove will automatically switch on again.

1. Set the desired temperature using buttons **4** and **5**.
2. Use the **menu 1** button to go to the menu "SET TEMP AMBIENTE" and set on "**MIN**" using button **4**.
3. Press button **1** for three seconds; the display will show "**STBY**".

At this point the thermostat will control the stove as described below:

- Thermostat with closed contact: the stove switches on and operates at the power set. The display shows "**T ON**".
- Thermostat with open contact: the stove switches off or stays off, and the display shows "**STBY**".

13. WIRING DIAGRAM

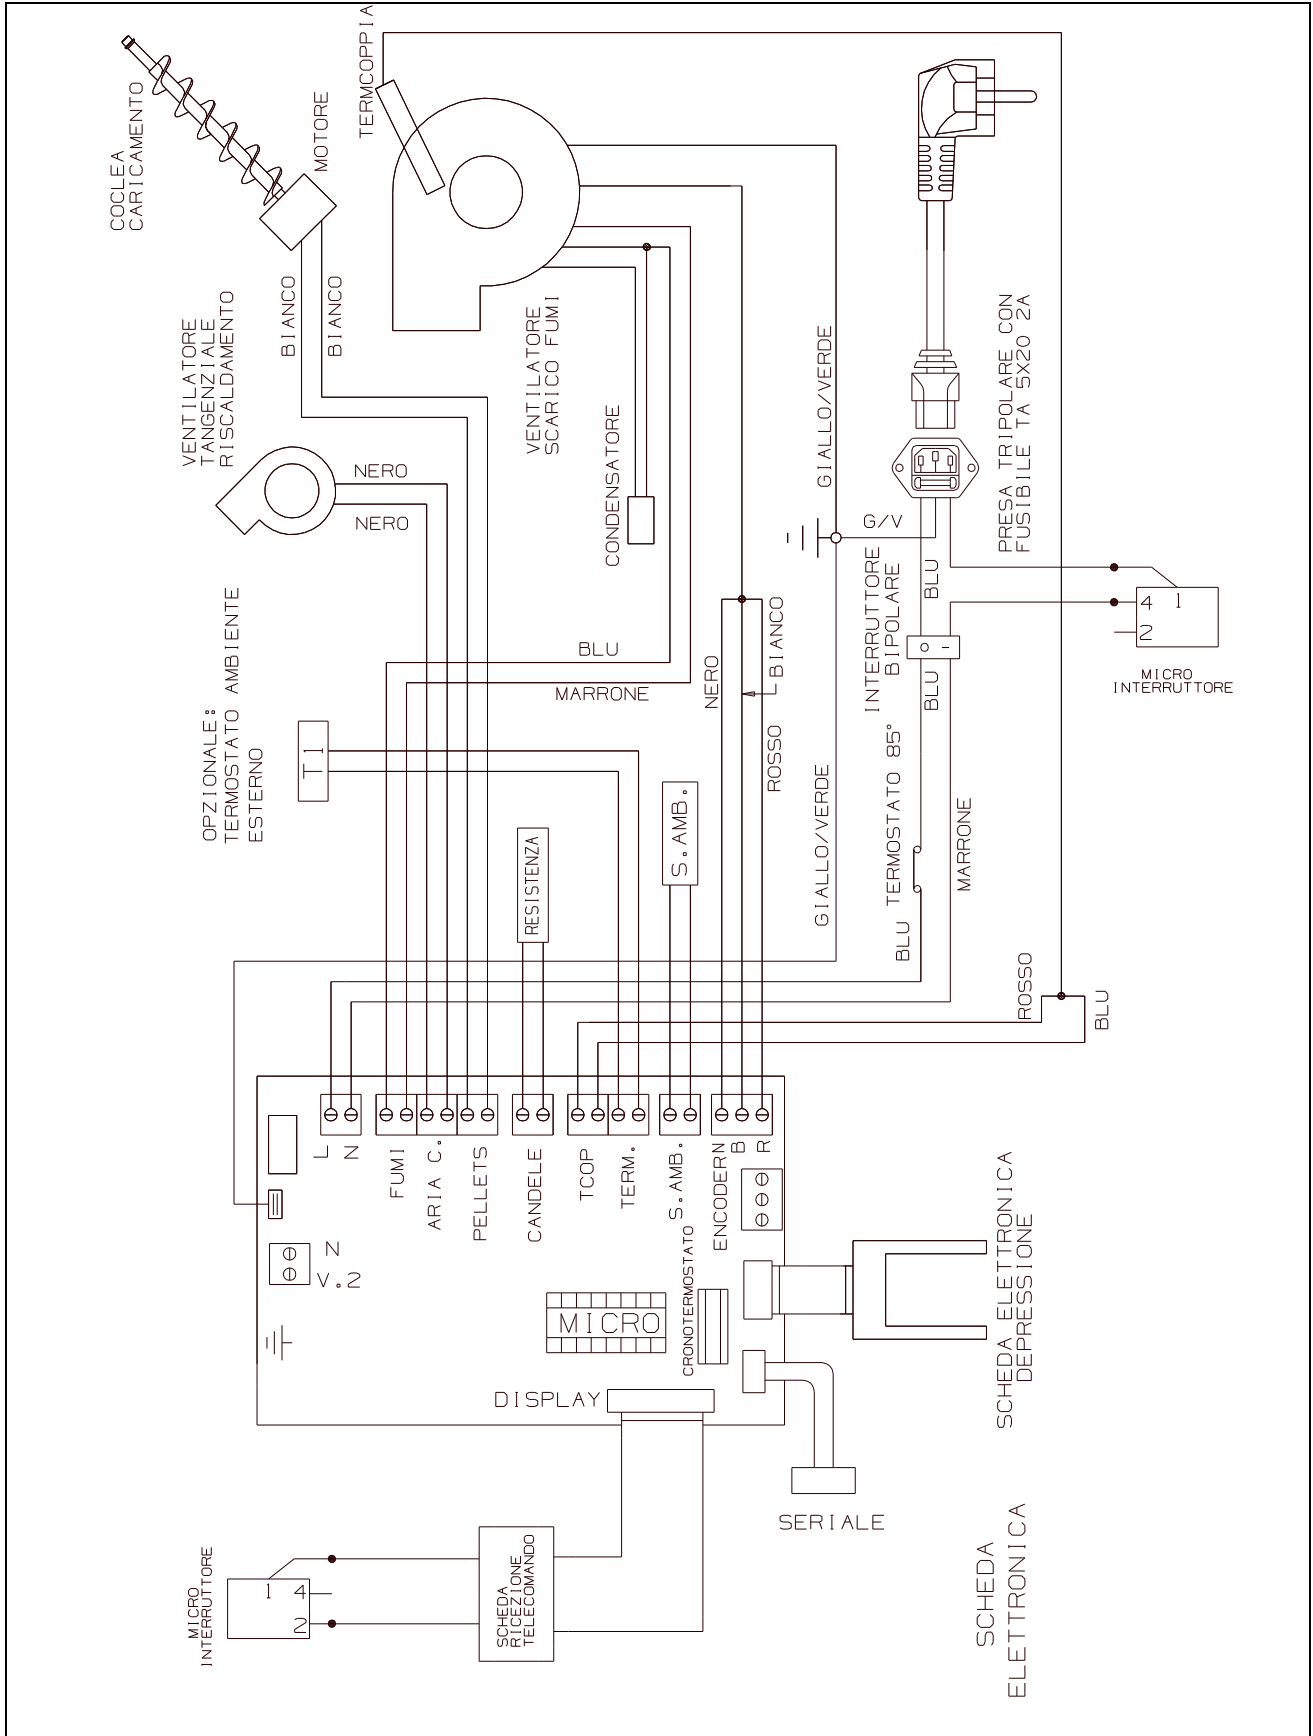

14. CLEANING

1. CLEANING THE BURN POT

The burn pot must be cleaned every day. To do so:

- Remove the burn pot from its compartment and clean the holes using the poker provided (see Fig.1).
- Remove the ash from the burn pot using a vacuum cleaner.
- Vacuum the ash deposited in the burn pot compartment.



Figure 1

2. USING THE SCRAPERS

Cleaning the heat exchangers allows you to maintain a constant heat yield over time. This type of maintenance must be carried out at least once a day. For this purpose, use the special scrapers located in the upper part of the stove, moving them up and down several times (see Fig.2).

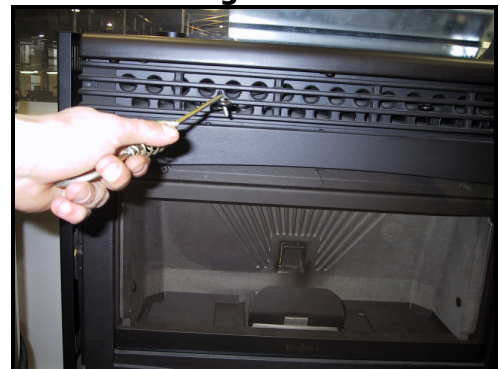


Figure 2

3. CLEANING THE ASH PANS

The ash pans (indicated by the arrows in Fig. 3) should be emptied as needed using a vacuum cleaner.

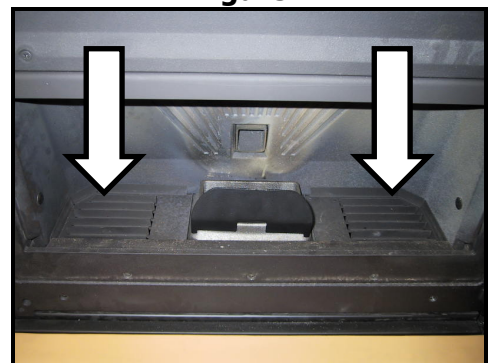


Figure 3

4. CLEANING THE HEAT EXCHANGER (monthly)

The heat exchanger chamber should be cleaned once a month, as the soot deposited on the back of the cast iron firewall obstructs the normal flow of the fumes.

To access the heat exchangers, you have to remove the central piece of the firewall as follows:

- Remove the burn pot from its seat.
- Manually turn the screw-bolt shown in Figure 7 by 180°.
- Grasp the removable cast iron piece with your hands and turn it downward.
- Slide it out of the combustion chamber, pulling it towards you, watching out for the two side hooks in cast iron situated at the bottom.

When the exchanger compartment is accessible, use the scraper provided to remove the deposited residues and scrape off any incrustation. Use the vacuum cleaner only in



Figure 6

the end to remove ash completely (see Fig. 8). When finished, reposition the removable cast iron piece with a motion exactly opposite the one used for removing it. Once the firewall is positioned, turn the screw-bolt 180° to put it back in its original position.



Figure 7



Figure 8



Figure 9

5. DOOR, ASH DRAWER AND BURN POT SEALS

The seals ensure that the stove is hermetically sealed and consequently that it operates correctly. The seals should be checked periodically and replaced immediately if worn or damaged. These operations must be carried out by an authorized technician.

N.B.: To ensure correct operation, the stove should have general maintenance performed at least once a year by an authorized technician.


If the power cable is damaged, it must only be replaced by the service centre or by a qualified technician, in order to avoid any risks.

14.1 Chimney connection

Once a year, or whenever needed, vacuum and clean the duct that leads to the chimney. If there are horizontal sections, remove any ash residues before they can obstruct passage of the smoke. **FAILURE TO CLEAN jeopardises safety.**

15. BURN POT PARTITION

The Mini Comfort insert has a partition fixed to the burn pot by a screw, which makes it possible to optimise the stove combustion processes.

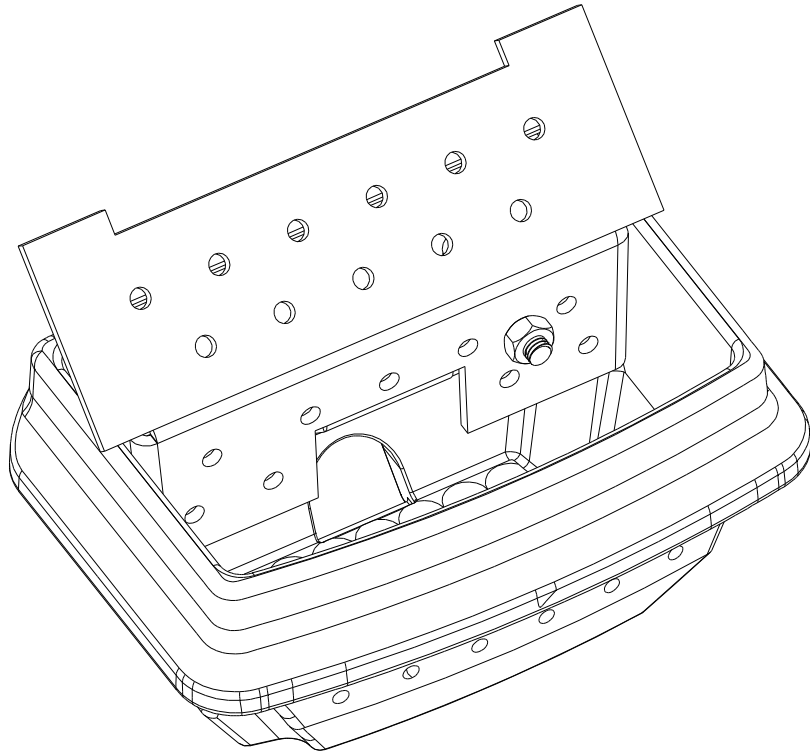

WARNING!!

Removing the burn pot partition can jeopardise stove safety and immediately voids the warranty.

16. WARRANTY

EXTRAFLAME S.p.A. guarantees this product for a period of 2 (two) years from the date of purchase against manufacturing and material defects.

The responsibility of EXTRAFLAME S.p.A. is limited to the supply of the appliance, which must be properly installed following the instructions contained in the booklets provided with the product and respecting the laws in force.

The installation of the product must be performed by an authorized technician, who will assume the entire responsibility for it and for its efficient operation. EXTRAFLAME S.p.A. declines any responsibility if these conditions are not met.

It is indispensable to perform final testing of the product prior to completing the installation with the respective finishing works (external facing, pilaster strips, wall painting, etc.). EXTRAFLAME S.p.A. declines all responsibility for any damage and consequent expenses incurred for redoing the finishing works as above, even if such works have to be carried out following the replacement of malfunctioning parts.

EXTRAFLAME S.p.A. guarantees that its products are manufactured with the best quality materials and with fabrication techniques that guarantee perfect efficiency.

If, during normal use of the product, any parts should show to be defective or malfunctioning, these parts will be replaced free of charge by the vendor from whom the product was purchased or by our area service centre.

WARRANTY CONDITIONS

VALIDITY

The warranty is considered valid on condition that:

1. the customer sends the warranty card within 15 (fifteen) days from the date of purchase. The card must be entirely filled in and the date of purchase must be validated by the possession of a valid receipt provided by the vendor;
2. the appliance is installed by an authorized technician who verifies the suitability of the technical characteristics of the plant where the appliance is to be installed, which in any case must comply with the requirements stated in the booklets provided with the products;
3. the stove is used as described in the instruction manual provided with all products.

The warranty will not cover damages caused by:

1. Atmospheric, chemical or electrochemical agents, improper use of the product, failure to perform maintenance, modifications or tampering with the product, unsuitability of the flue/chimney, and/or any other causes not depending on the product.
2. Overheating of the stove; that is, burning of materials that do not conform to the types and quantities indicated in the manual.
3. Any damage caused by transport. We therefore recommend that you carefully inspect the goods on receipt, immediately notifying the vendor of any damage and making note of such on the shipping document and on the shipper's copy.

The warranty excludes all parts subject to wear:

- Seals, all the ceramic and tempered glass parts, casings and grills in cast iron or Ironker, painted, chromed, or gilded parts, the majolica ceramics, the handles and electrical cables.
- Chromatic variations, tiny cracks in the glaze, and slight dimensional differences in the majolica parts shall not constitute reasons for claims, as they are natural characteristics of these materials.
- Building works.
- For thermo-products: the parts of the plumbing system not supplied by EXTRAFLAME S.p.A.

The warranty excludes any calibrations or adjustments of the product based on the type of fuel or the type of installation.

This warranty is valid only for the purchaser and may not be transferred.

In the event of replacement of any part, the warranty will not be extended.

No compensation will be given for the period in which the product is out of use.

This is the only valid warranty and no one is authorised to supply other warranties either in the name of or on behalf of EXTRAFLAME S.p.A.

SERVICE UNDER WARRANTY

The service request must be forwarded to the vendor.

The service under warranty involves repair of the product completely free of charge as per the laws in force.

RESPONSIBILITY

EXTRAFLAME S.p.A. shall not be liable for any direct or indirect damage caused by or depending on the product.

COMPETENT COURT

For any controversy, the competent court shall be the court of Vicenza, Italy.

Notes

Notes

Extraflame

Extraflame

PELLET STOVES

EXTRAFLAME S.p.A.
Via Dell'Artigianato, 10
36030 **MONTECCHIO PRECALCINO**
Vicenza - ITALY
Tel. 0445/865911
Fax 0445/865912
<http://www.extraflame.com>
E-mail: info@extraflame.com